

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [LAVIEVERT](#) /

› LAVIEVERT WGPTZ026-New 1500 Piece Tilting Puzzle Table User Manual

LAVIEVERT WGPTZ026-New

LAVIEVERT WGPTZ026-New 1500 Piece Tilting Puzzle Table User Manual

This manual provides instructions for the assembly, operation, and maintenance of your LAVIEVERT WGPTZ026-New 1500 Piece Tilting Puzzle Table. Please read this manual thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- Always use the locking casters when the table is in use to prevent tipping.
- Do not adjust the table to angles greater than 75° to maintain stability.
- Keep the table away from heat sources.
- Do not place heavy objects on the tabletop to prevent damage or tip-overs.

1. SETUP AND ASSEMBLY

Assembly of the LAVIEVERT WGPTZ026-New puzzle table is required. The package includes a detailed installation manual, along with all necessary tools and accessories for assembly.

1. Unpack all components and verify against the parts list in the included installation manual.
2. Follow the step-by-step instructions provided in the installation manual for proper assembly.
3. Ensure all screws and fasteners are securely tightened to ensure stability. Avoid over-tightening.
4. Attach the four wheels to the base of the table. Two of these wheels are lockable.



Angle Adjustable Puzzle Table

Adjustment Up To 75°

Image: Components and tools for assembly. Refer to the included manual for detailed steps.

2. OPERATING INSTRUCTIONS

2.1 Adjusting the Table Angle

The puzzle table features multiple angle adjustments, from 0° (flat) up to a maximum of 75°. This allows you to set the tabletop to a comfortable position, reducing neck and back strain during extended puzzle sessions.

- To adjust the angle, carefully lift the tabletop and secure it at the desired inclination using the adjustment mechanism.
- Ensure the tabletop is firmly locked in place before placing puzzle pieces on it.
- Do not exceed the 75° maximum angle to maintain stability.

Puzzle Table with Cover : Keep Unfinished Puzzle Pieces Safe.



Image: Illustration of the adjustable tabletop angles, ranging from flat to 75 degrees.

2.2 Using the Felt Surface and Cover

The tabletop is covered with a durable felt fabric designed to provide friction, preventing puzzle pieces from sliding or falling. A neoprene cover is also included for protecting unfinished puzzles.

- Place puzzle pieces directly onto the felt surface.
- When pausing or storing your puzzle, gently place the neoprene cover over the puzzle to protect it from dust and accidental disturbance.

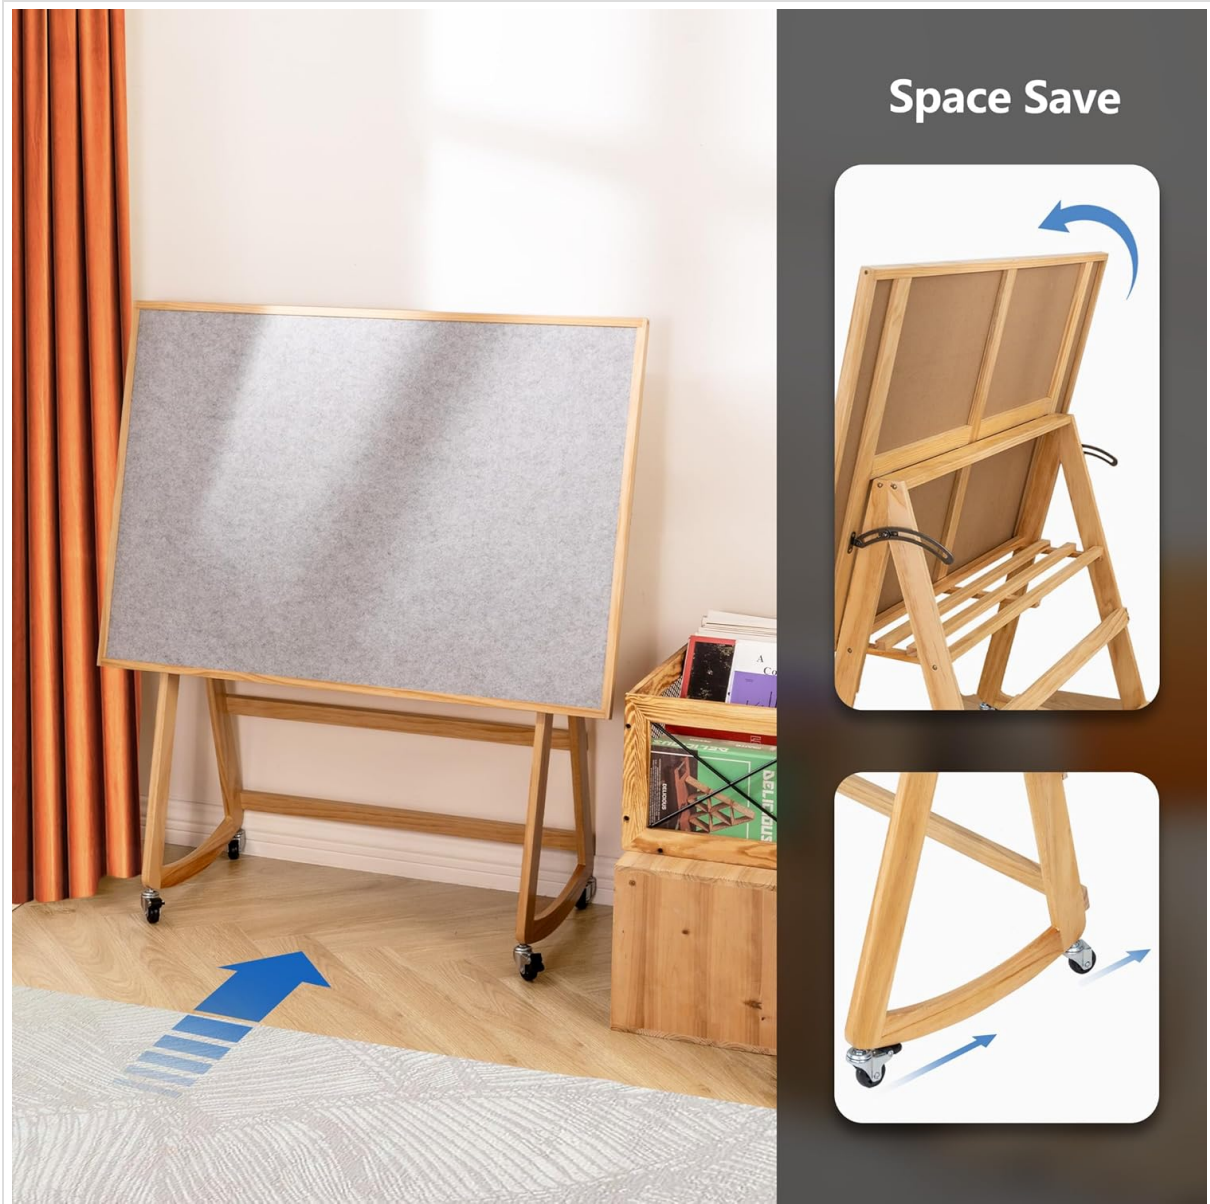


Image: Demonstrates the use of the neoprene cover to protect an in-progress puzzle.

2.3 Mobility and Storage

The table is equipped with four casters for easy movement. Two of these casters are lockable to ensure stability during use.

- To move the table, unlock the casters by flipping the lever on the two lockable wheels.
- Once the table is in the desired location, lock the casters to prevent unintended movement.
- The middle shelf provides additional storage space for puzzle boxes, sorting trays, or other accessories.



Image: Overview of table features, including the storage shelf and movable wheels.

3. MAINTENANCE

- **Cleaning:** Wipe the wooden surfaces with a dry cloth. Avoid using abrasive cleaners or harsh chemicals that may damage the finish.
- **Felt Surface Care:** Gently brush or vacuum the felt surface to remove dust or lint. Avoid liquids.
- **Caster Maintenance:** Periodically check the casters for debris (e.g., hair, lint) and clean as needed to ensure smooth movement.
- **General Inspection:** Regularly inspect all screws and connections to ensure they remain tight. Retighten if necessary.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Table is unstable or wobbles.	Casters are unlocked or not all screws are tightened.	Ensure all four casters are locked. Check and tighten all assembly screws.
Difficulty during assembly.	Misaligned parts or insufficient tightening.	Refer to the detailed installation manual. Ensure parts are correctly oriented before tightening. If screw holes seem shallow, ensure screws are fully seated without stripping.
Puzzle pieces slide off the table.	Tabletop angle is too steep or felt surface is worn.	Reduce the tabletop angle. The felt surface is designed for friction; if it becomes smooth, contact support.
Casters do not roll smoothly.	Debris caught in casters.	Clean any hair, lint, or other debris from the caster wheels.

5. SPECIFICATIONS

- **Brand:** LAVIEVERT
- **Model Number:** WGPTZ026-New
- **Product Dimensions (D x W x H):** 25.6" x 36.6" x 30.1" (65 cm x 93 cm x 76.5 cm)
- **Working Surface Size:** 35.4" x 24.4" (90 cm x 62 cm)
- **Puzzle Capacity:** Up to 1500 pieces
- **Adjustable Angle:** 0° to 75°
- **Color:** Burlywood
- **Base Material:** Engineered Wood
- **Top Material Type:** Engineered Wood with Felt Covering
- **Item Weight:** 15.6 Pounds
- **Special Feature:** Portable with 4 wheels (2 lockable), Extra Storage Shelf
- **Included Components:** Puzzle table, cover, installation manual, screw & tool pack

6. WARRANTY INFORMATION

The product comes with a **Limited Warranty**. For specific details regarding the terms and conditions of this warranty, please refer to the documentation included with your purchase or contact LAVIEVERT customer support.

Note: The manufacturer's warranty description states "No warranty." in one section and "Limited" in another. Please contact the manufacturer for clarification on warranty coverage.

7. CUSTOMER SUPPORT

If you have any questions regarding the assembly, operation, quality, or any other aspect of your LAVIEVERT puzzle table, please contact our customer support team.

For assistance, please refer to the contact information provided in your product packaging or visit the official LAVIEVERT website.

Online Resources: [LAVIEVERT Official Store on Amazon](#)