



[Manuals.plus](#) /

> [eufy](#) /

> eufy RoboVac L60 Hybrid (Model T2268) User Manual

eufy RoboVac L60 Hybrid (T2268)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

[Submit question](#)

eufy RoboVac L60 Hybrid (Model T2268) User Manual

Your guide to intelligent cleaning.

PRODUCT OVERVIEW

The eufy RoboVac L60 Hybrid is an advanced robotic vacuum cleaner designed to provide efficient and thorough cleaning for your home. It combines powerful vacuuming with a mopping function, intelligent navigation, and customizable cleaning options to deliver a hands-free cleaning experience.

Key Features

- **Extremely Strong 5,000 Pa Suction Power:** Effectively removes hair, crumbs, and dust for impeccably

clean floors.

- **Precision Mapping with iPath Laser Navigation:** Utilizes advanced Lidar technology to scan rooms and create accurate maps for efficient cleaning paths.
- **Tailored AI.Map 2.0:** Allows selection of rooms, setting no-go zones, and multi-floor mapping via the app.
- **BoostIQ Technology:** Automatically increases suction power on carpets for maximum cleaning efficiency.
- **20 mm Climbing Height:** Effortlessly navigates over thresholds and carpet edges.
- **2-in-1 Suction and Wiping Function:** Provides thorough cleaning with an attachable mop pad and adjustable water flow.
- **Long Runtime:** Up to 120 minutes of continuous cleaning.



The eufy RoboVac L60 Hybrid, a versatile robotic vacuum and mop, shown alongside its companion app interface which displays the cleaning map and controls.

Ultra-Strong 5,000 Pa* Suction



*5,000 Pa is the maximum suction level in Max mode.

Illustrates the powerful 5,000 Pa suction capability of the RoboVac L60 Hybrid, effectively removing dirt and particles from hard floors.



120 Min^{*}
Runtime

The RoboVac L60 Hybrid provides up to 120 minutes of continuous cleaning on a single charge, suitable for covering larger areas.

SETUP

Before first use, ensure the RoboVac is fully charged and all packaging materials are removed. Place the charging base against a wall in an open, uncluttered area, ensuring at least 0.5 meters of clear space on either

side and 1.5 meters in front. Connect the power adapter to the charging base and a power outlet.

1. **Charge the RoboVac:** Place the RoboVac on the charging base. The indicator lights will show charging status.
2. **Download the eufy Clean App:** Search for "eufy Clean" in your mobile app store and install it.
3. **Connect to Wi-Fi:** Follow the in-app instructions to connect your RoboVac to your home Wi-Fi network. This enables smart features and remote control.
4. **Initial Mapping:** Allow the RoboVac to complete its first cleaning cycle to create a detailed map of your home. Clear any obstacles to ensure accurate mapping.

OPERATING INSTRUCTIONS

The eufy RoboVac L60 Hybrid offers various cleaning modes and smart features accessible through the eufy Clean app.

iPath Laser Navigation

The RoboVac uses advanced laser navigation to create precise maps of your home, allowing it to plan the most efficient cleaning routes. This ensures no spots are missed and cleaning is completed quickly.

Precise, Efficient Routes

iPath™ Laser Navigation



The RoboVac L60 Hybrid utilizes iPath Laser Navigation for precise and efficient cleaning routes, ensuring thorough coverage of your home.

AI.Map 2.0 Customization

Through the eufy Clean app, you can customize your cleaning experience:

- **No-Go Zones:** Define areas the RoboVac should avoid.
- **Room Selection:** Choose specific rooms for cleaning.
- **Zone Cleaning:** Designate custom areas for targeted cleaning.
- **Suction Levels:** Adjust suction power based on floor type and cleaning needs.

Customizable AI.Map™ 2.0



No-Go Zone




4 Suction Levels



Room Selection



Zone Cleaning

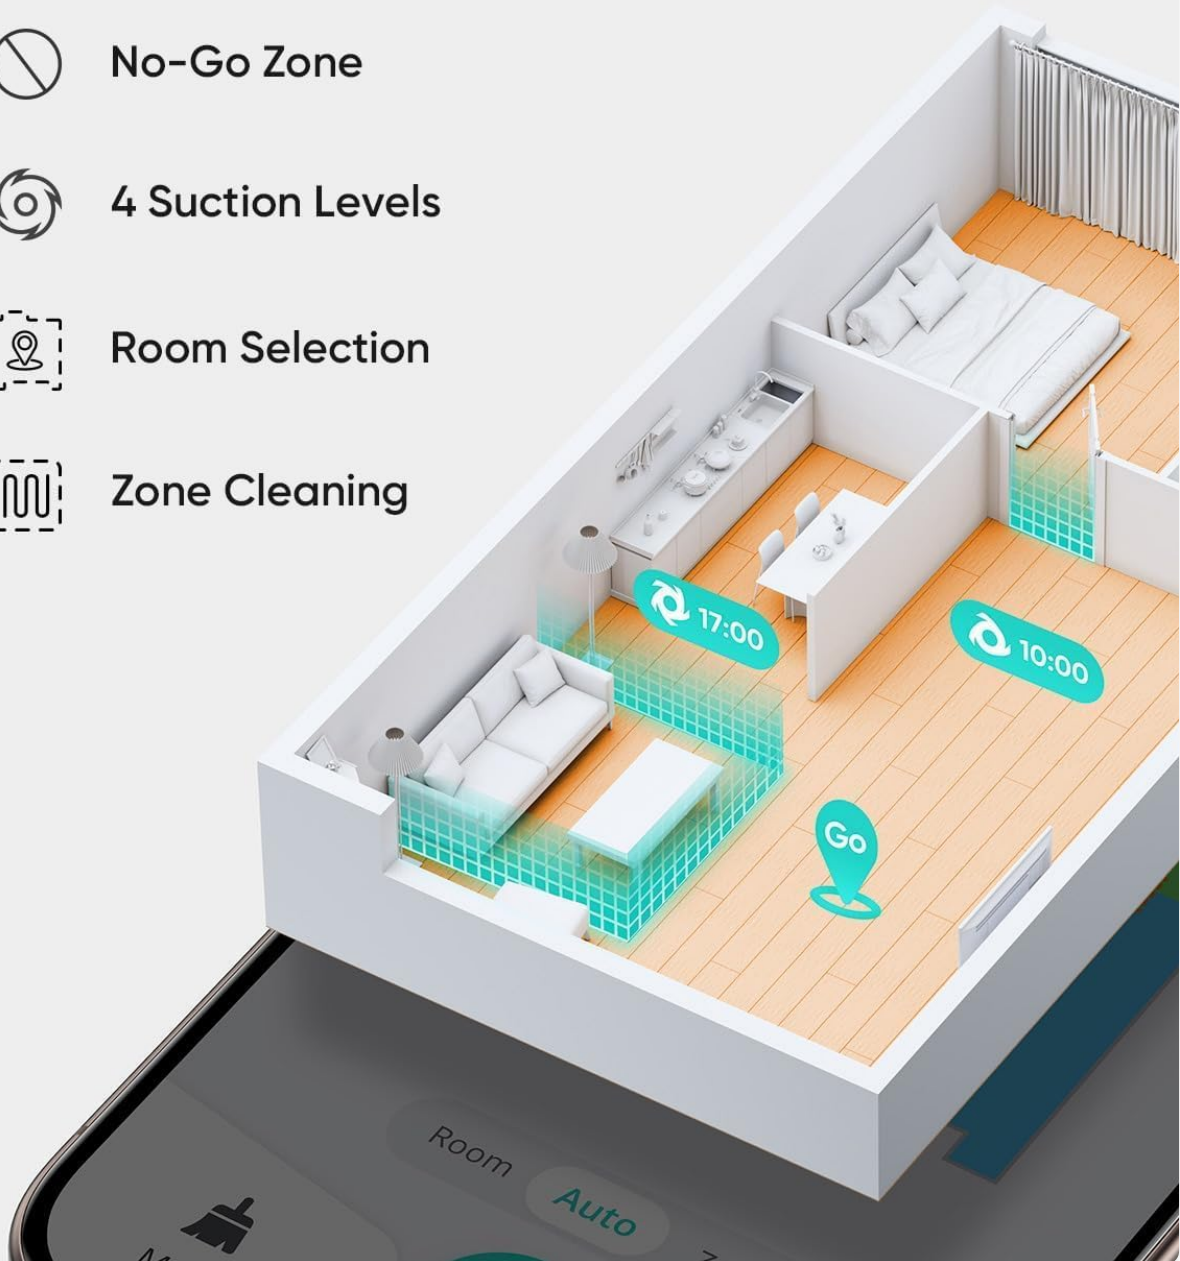

The AI.Map 2.0 feature allows users to customize cleaning preferences, including setting no-go zones, adjusting suction levels, and selecting specific rooms or zones for cleaning.

BoostIQ Technology

This technology allows the RoboVac to automatically detect when it moves from a hard floor to a carpeted surface and increases its suction power accordingly, ensuring deep cleaning on all floor types.

BoostIQ™ Technology




BoostIQ Technology enables the RoboVac L60 Hybrid to automatically increase suction power when transitioning from hard floors to carpets, ensuring optimal cleaning performance on different surfaces.

Suction and Mopping Function

To use the mopping function, attach the mop pad and fill the water tank. Select the desired water flow level in the app. The RoboVac will vacuum and mop simultaneously for a comprehensive clean.

Mop Pad for Light Surface Cleaning

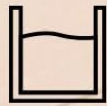

280 ml
Capacity



3 Water
Levels



Equipped with a mop pad and a 280 ml water tank, the RoboVac L60 Hybrid offers light surface mopping with three adjustable water levels for thorough cleaning.

Threshold Climbing

The RoboVac L60 Hybrid is designed to climb over obstacles up to 20 mm, allowing it to move seamlessly between different floor levels and over carpet edges.

Climb Up to 20 mm



The RoboVac L60 Hybrid can effortlessly climb over obstacles up to 20 mm high, such as door sills and carpet edges, for uninterrupted cleaning.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your RoboVac.

- **Empty the Dustbin:** Empty the dustbin after each cleaning cycle.
- **Clean the Filter:** Tap out debris from the high-performance filter weekly. Replace every 3-6 months.
- **Clean the Rolling Brush:** Remove hair and debris from the rolling brush weekly using the cleaning tool.
- **Clean Side Brushes:** Check side brushes for tangles and wear. Clean or replace as needed.
- **Clean Sensors and Charging Pins:** Wipe all sensors and charging pins with a dry cloth monthly.
- **Clean the Mop Pad:** Wash the mop pad after each mopping session.

TROUBLESHOOTING

If you encounter issues with your RoboVac, refer to the following common solutions:

Problem	Possible Cause	Solution
RoboVac does not turn on	Low battery or not charged	Place RoboVac on the charging base and ensure it is charging.
RoboVac cannot connect to Wi-Fi	Incorrect Wi-Fi password, router issues, or out of range	Verify Wi-Fi password, restart router, ensure RoboVac is within Wi-Fi range.
RoboVac gets stuck frequently	Obstacles, tangled brushes	Clear cables and small objects. Clean the rolling brush and side brushes.
Poor cleaning performance	Full dustbin, dirty filter, worn brushes	Empty dustbin, clean/replace filter, clean/replace brushes.
Mopping function not working	Empty water tank, clogged nozzle, incorrect mop pad attachment	Fill water tank, clean nozzle, ensure mop pad is correctly attached.

SPECIFICATIONS

Attribute	Detail
Brand	eufy
Model Name	L60
Model Number	T2268
Color	black

Attribute	Detail
Product Dimensions	32.6 x 33.2 x 10.2 cm
Item Weight	4.05 Kilograms
Voltage	3.7 Volts
Special Features	Cordless
Compatible Models	Smartphones, Tablets, Google Home, Amazon Echo
Surface Recommendation	Hard floors

WARRANTY AND SUPPORT

eufy provides comprehensive customer support for your RoboVac L60 Hybrid. For technical assistance, maintenance services, or troubleshooting, please refer to the contact information below.

Customer Services

Home Pickup & Drop Across India

000-8000-504-414 support.india@anker.com

Monday to Friday:
09:30 am - 19:30 pm

Scan for FAQs.

- Maintenance Service
- Technical Support
- Troubleshooting Assistance
- Pre-Purchase Consultation
- Step-by-Step Product Support
- Multiple Dialect Assistance

eufy provides comprehensive customer services, including technical support, maintenance, and troubleshooting assistance. Contact details for support are provided for user convenience.

For frequently asked questions and additional support resources, you can scan the QR code in the image or visit the official eufy support page:

[Visit eufy Support](#)

For direct assistance, you may also contact eufy customer service:

Phone: 000-8000-504-414 (Monday to Friday: 09:30 am - 19:30 pm)

Email: support.india@anker.com

