

ECONTROLLY RG10A

ECONTROLLY RG10A Remote Control User Manual

For Midea AC Air Conditioners (Models: RG10L1(2HS)/BGEF, RG10A-BGEF, RG10A/BGEF, RG10A(B2S)/BGEF)

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ECONTROLLY RG10A replacement remote control. This remote is designed to be compatible with various Midea AC Air Conditioner models, including RG10L1(2HS)/BGEF, RG10A-BGEF, RG10A/BGEF, and RG10A(B2S)/BGEF. Please read this manual thoroughly before use to ensure proper functionality and extend the lifespan of your device.

2. PRODUCT OVERVIEW

The ECONTROLLY RG10A remote control features an intuitive layout for easy operation of your Midea air conditioner. It utilizes infrared technology for reliable communication with your AC unit.





Figure 1: Front View of the RG10A Remote Control. This image displays the front of the remote control, showing the LCD screen at the top and various control buttons below it, including power, mode, fan speed, swing, and temperature adjustment buttons.



Figure 2: Angled View of the RG10A Remote Control. This image provides an angled perspective of the remote control, highlighting its ergonomic design and the arrangement of buttons and the display screen.

Button Functions:

- **Power Button (Orange Circle with Line):** Turns the air conditioner ON or OFF.
- **Mode Button:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **Eco Gear Button:** Activates or deactivates energy-saving mode.
- **SET Button:** Used for setting various parameters, often in conjunction with arrow keys.
- **OK Button:** Confirms selections.
- **Arrow Buttons (Up/Down/Left/Right):** Adjust temperature, navigate menus, or set timer.
- **Clock/Timer Button:** Accesses timer settings.
- **Fan Button:** Adjusts fan speed.
- **Swing Button:** Controls the louver swing direction.
- **Person Icon Button:** May activate a specific comfort or follow-me function.
- **Boost Button:** Activates a rapid cooling/heating function.

- **LED Button:** Turns the display light on or off.
- **Clean Button (with Lock Icon):** Initiates a self-clean function or locks the remote.

3. SETUP

3.1 Battery Installation

The ECONTROLLY RG10A remote control requires two AAA batteries for operation. No programming is needed; simply install the batteries, and the remote will be ready for use.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 3: Battery Compartment. This image shows the back of the remote control with the battery compartment open, illustrating where to insert the two AAA batteries.

Important: Always use new alkaline batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote control will not be used for an extended period to prevent leakage.

4. OPERATING INSTRUCTIONS

The RG10A remote control operates using infrared technology, offering multi-angle induction, fast response, and precise control. It has an effective transmitting distance of approximately 8-10 meters (26-33 feet).

4.1 Basic Operation

1. **Power ON/OFF:** Press the **Power Button** to turn the air conditioner on or off.
2. **Select Mode:** Press the **Mode Button** repeatedly to cycle through available operating modes (e.g., Cool, Heat, Fan, Dry, Auto). The selected mode will typically be displayed on the remote's LCD screen.
3. **Adjust Temperature:** Use the **Up/Down Arrow Buttons** to increase or decrease the desired temperature setting.
4. **Adjust Fan Speed:** Press the **Fan Button** to cycle through different fan speed settings (e.g., Low, Medium, High, Auto).
5. **Control Airflow Direction (Swing):** Press the **Swing Button** to activate or adjust the automatic louver swing function.

4.2 Advanced Functions

- **Eco Gear:** Press the **Eco Gear Button** to engage an energy-saving operation mode, which may adjust temperature and fan speed for optimal efficiency.
- **Boost Function:** Use the **Boost Button** for rapid cooling or heating when you need to reach your desired temperature quickly.
- **LED Display Control:** Press the **LED Button** to turn the air conditioner's display light on or off, useful for nighttime operation.
- **Clean Function:** The **Clean Button** (often with a lock icon) may initiate a self-cleaning cycle for the indoor unit or lock the

remote control to prevent accidental changes. Refer to your air conditioner's main manual for specific details on this function.

- **Timer Settings:** Press the **Clock/Timer Button** to access and set the ON/OFF timer for your air conditioner. Use the arrow keys and **OK Button** to configure.

5. MAINTENANCE

5.1 Battery Replacement

When the remote control's display becomes dim or its response time slows, it is time to replace the batteries. Follow the battery installation steps in Section 3.1.

5.2 Storage

If the remote control will not be used for an extended period (e.g., during off-season), it is recommended to remove the batteries to prevent potential leakage and damage to the remote control.

5.3 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Make sure you are within the effective operating range (8-10 meters).
- **Air conditioner not responding to specific commands:**
 - Verify that the remote control's display shows the correct settings.
 - Some functions may be specific to certain Midea AC models; consult your air conditioner's original manual.
- **Display is dim or blank:**
 - Replace the batteries.

7. SPECIFICATIONS

Model Number	RG10A
Compatible Midea AC Models	RG10L1(2HS)/BGEF, RG10A-BGEF, RG10A/BGEF, RG10A(B2S)/BGEF
Power Source	2 x AAA Batteries (Alkaline recommended)
Operating Technology	Infrared (IR)
Effective Distance	Approximately 8-10 meters (26-33 feet)
Dimensions	7 x 2 x 0.65 inches
Item Weight	2.3 ounces (without batteries)

Material	ABS Environmental Protection Material
----------	---------------------------------------

8. WARRANTY AND SUPPORT

This ECONTROLLY remote control is designed for reliable performance. For any issues not covered in this manual or for further assistance, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for warranty claims, if applicable.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question