

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Vpcok Direct](#) /
- › [Vpcok Direct 600ML Ultrasonic Cleaner SU-745 Instruction Manual](#)

Vpcok Direct SU-745

Vpcok Direct 600ML Ultrasonic Cleaner

Model: SU-745

[Introduction](#) [Safety Information](#) [Package Contents](#) [Product Overview](#) [Setup](#) [Operation](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Vpcok Direct 600ML Ultrasonic Cleaner, Model SU-745. This device utilizes 43kHz high-frequency ultrasonic waves to provide thorough and gentle cleaning for various items such as jewelry, glasses, watches, and more. Please read this instruction manual carefully before use to ensure proper operation, safety, and optimal performance of your ultrasonic cleaner. Keep this manual for future reference.

2. SAFETY INFORMATION

- Ensure the power cord is securely plugged into a grounded outlet.
- Do not immerse the main unit in water or other liquids.
- Do not operate the cleaner without water in the tank.
- Keep out of reach of children.
- Unplug the device when not in use or before cleaning.
- Do not disassemble or attempt to repair the unit yourself. Contact customer support for assistance.
- Avoid cleaning items that may be damaged by ultrasonic waves, such as certain soft gemstones (e.g., pearls, emeralds), costume jewelry with loose settings, or items with non-waterproof components.

3. PACKAGE CONTENTS

Upon unpacking, please verify that all the following items are included:

- Vpcok Direct Ultrasonic Cleaner (Model SU-745)
- Cleaning Basket
- Watch Stand



Image 1: Ultrasonic Cleaner and Included Accessories. This image displays the main unit, the cleaning basket, and the watch stand, along with their approximate dimensions. It also highlights the 600ml capacity, 43kHz ultrasonic frequency, and 50W power.

4. PRODUCT OVERVIEW

The Vpck Direct Ultrasonic Cleaner is designed for efficient and gentle cleaning of various small items. Key features include:

- **Deep Cleaning:** 360-degree all-round deep cleaning effectively breaks down and removes stubborn dirt, particles, and grime without damaging valuables.
- **High-Frequency Ultrasonics:** Generates 43,000 Hz ultrasonic waves, creating countless powerful yet gentle bubbles that penetrate crevices and hidden corners.
- **5 Time Modes:** Features 5 preset cleaning cycles (90, 180, 300, 480, 600 seconds) with automatic shut-off for precise control.

- **Optimal Capacity:** A generous 600ml stainless steel tank accommodates various items and is compact for storage.
- **Durable Construction:** Waterproof ABS exterior, non-slip feet for stability, and a durable 304 stainless steel inner tank resistant to corrosion.
- **User-Friendly Design:** Touch control panel with an intuitive digital display and a visual top cover for real-time observation.
- **Low Noise Operation:** Designed for quiet daily use at home or in the office.

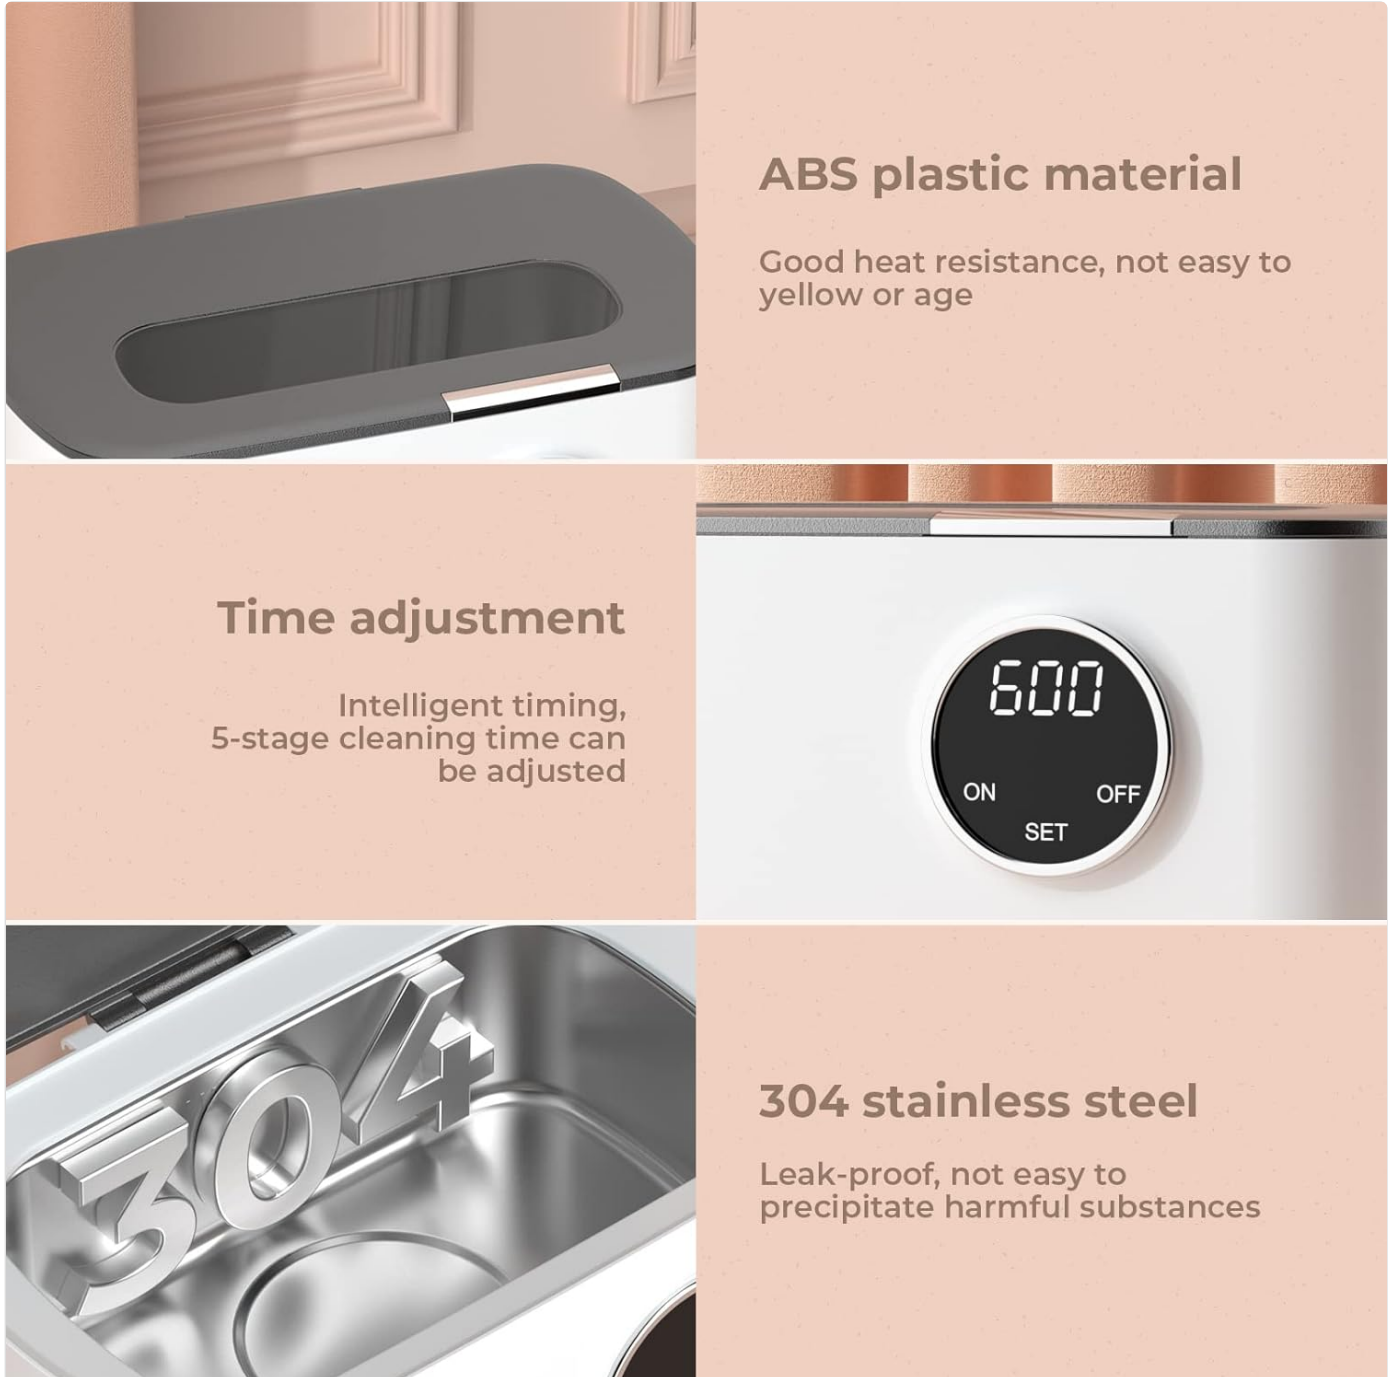


Image 2: Product Material and Features. This image highlights the ABS plastic exterior, the digital display for time adjustment, and the 304 stainless steel interior tank, emphasizing durability and ease of use.

43KHz Easy to Operate

360° all-round deep cleaning
of your items



Image 3: Cleaning Effectiveness. This image illustrates the ultrasonic cleaner in operation, with a visual comparison of glasses before and after cleaning, demonstrating the 43kHz deep cleaning capability.

5. SETUP

1. Place the ultrasonic cleaner on a stable, flat, and dry surface.
2. Ensure the power cord is easily accessible and not obstructed.
3. Open the lid and fill the stainless steel tank with tap water. Do not exceed the "MAX" fill line indicated inside the tank.
4. If cleaning small items like jewelry or watches, place them in the cleaning basket or use the watch stand provided. This prevents items from resting directly on the tank bottom, which can reduce cleaning efficiency and potentially damage delicate items.
5. Carefully place the basket or watch stand with items into the water-filled tank.
6. Close the lid.

7. Plug the power cord into a suitable electrical outlet.

6. OPERATING INSTRUCTIONS

Follow these steps to operate your Vpcock Direct Ultrasonic Cleaner:

1. **Prepare Items:** Place items to be cleaned into the cleaning basket or onto the watch stand, then immerse them in the water-filled tank. Ensure the water level is between the MIN and MAX marks.
2. **Select Time Setting:** Press the "SET" button on the touch control panel to cycle through the 5 preset cleaning times: 90, 180, 300, 480, or 600 seconds. The selected time will be displayed digitally.
3. **Start Cleaning:** Press the "ON" button to begin the ultrasonic cleaning cycle. The device will start operating, and the remaining time will count down on the digital display.
4. **Add Detergent (Optional):** For stubborn stains, a small amount of non-abrasive cleaning solution or detergent can be added to the water for enhanced cleaning. Refer to the detergent manufacturer's instructions for dilution.
5. **Automatic Shut-off:** The cleaner will automatically turn off once the selected cleaning cycle is complete.
6. **Remove Items:** After the cycle finishes, unplug the device. Open the lid and carefully remove the cleaning basket or watch stand with the cleaned items.
7. **Rinse and Dry:** Rinse the cleaned items under clean running water and dry them thoroughly with a soft, lint-free cloth.

One-key cleaning 5-stage timing

Arbitrarily set cleaning time
180/300/480/600/90 seconds

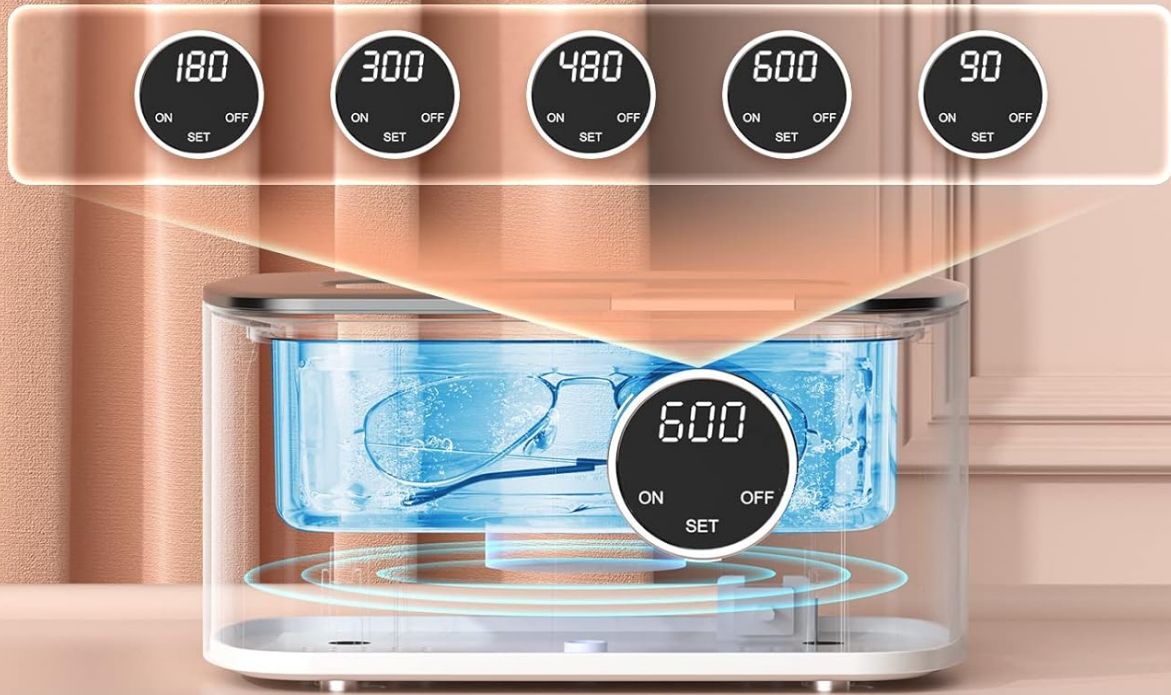


Image 4: One-Key Cleaning and Timing. This image illustrates the touch control panel with the "ON", "OFF", and "SET" buttons, and the digital display showing the five available cleaning time settings.

Cleaning Steps



1. Add water to "MAX" and put the item in.



2. Click the "SET" button to select the time.



3. Then click 'ON' to start.



4. If there are stubborn stains, adding detergent will have a better cleaning effect.

Image 5: Step-by-Step Cleaning Process. This visual guide demonstrates the four main steps for using the ultrasonic cleaner: filling with water, selecting a time, starting the cleaning cycle, and optionally adding detergent.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ultrasonic cleaner.

- **After Each Use:**

- a. Unplug the device from the power outlet.
- b. Empty the water from the tank.
- c. Wipe the inside of the tank and the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners.
- d. Ensure the unit is completely dry before storing.

- **Storage:** Store the ultrasonic cleaner in a cool, dry place away from direct sunlight and moisture.

- **Do Not Submerge:** Never submerge the main unit in water for cleaning.

8. TROUBLESHOOTING

If you encounter any issues with your ultrasonic cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outage; faulty outlet.	Check power connection; test with another outlet; ensure power is available.
Cleaning effect is poor.	Insufficient water; items too crowded; incorrect cleaning time; very stubborn dirt.	Ensure water level is correct; clean fewer items at once; increase cleaning time; add a suitable cleaning solution.
Unit stops during operation.	Cleaning cycle completed; overheating protection activated.	This is normal if the cycle finished. If not, unplug and let cool for 10-15 minutes before restarting.
Unusual noise or vibration.	Items touching the tank bottom; unit not on a stable surface.	Ensure items are in the basket/stand; place unit on a flat, stable surface.

If the problem persists after trying these solutions, please contact Vpcok Direct customer support.

9. SPECIFICATIONS

Model Number	SU-745
Brand	Vpcok Direct
Capacity	600 ml
Ultrasonic Frequency	43 kHz
Power	50W
Time Settings	5 preset cycles (90, 180, 300, 480, 600 seconds)
Material	ABS Plastic (exterior), 304 Stainless Steel (tank)
Product Dimensions (L x W x H)	22.7 x 15.7 x 13.9 cm
Product Weight	930 grams
Color	White
Batteries Required	No

10. WARRANTY AND SUPPORT

Vpcok Direct products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Vpcok Direct website.

If you require technical assistance, have questions about product operation, or need to report a defect, please contact Vpcok Direct customer support. Contact details can typically be found on the product packaging or the official brand

website.



© 2023 Vpcok Direct. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.