

[Manuals.plus](#) /

> [MEDION](#) /

> MEDION MD11499 4-in-1 Microwave with Hot Air Fryer - Instruction Manual

MEDION MD 11499

MEDION MD11499 4-in-1 Microwave with Hot Air Fryer

User Instruction Manual

1. INTRODUCTION

Thank you for choosing the MEDION MD11499 4-in-1 Microwave with Hot Air Fryer. This versatile appliance combines the functions of a microwave, hot air fryer, oven, and grill, offering a wide range of cooking possibilities. With a generous 25-liter capacity, 900 watts of microwave power, and 1500 watts for hot air frying, it is designed to simplify your cooking experience. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.



Figure 1.1: Front view of the MEDION MD11499 Microwave with Hot Air Fryer.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

General Safety Precautions:

- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Always unplug the appliance when not in use and before cleaning.

Microwave Specific Safety:

- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Never operate the microwave oven when empty.
- Only use microwave-safe dishes and utensils. Metal containers or foil can cause arcing.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens as they may explode, even after microwave heating has ended.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

3. PRODUCT OVERVIEW

The MEDION MD11499 is a compact yet powerful kitchen appliance designed for multi-functional cooking. It features a sleek black and silver design with an intuitive LED display and control panel.

Key Components:

- **Control Panel:** Features an LED display, rotary knob, and various function buttons for easy operation.
- **Oven Cavity:** 25-liter capacity, made of stainless steel for durability and easy cleaning.
- **Door:** Left-hinged door with a viewing window.
- **Turntable:** Glass turntable for even cooking.
- **Baking Tray:** For use with oven and air fryer functions.
- **Air Fryer Basket:** Specifically designed for optimal air circulation during air frying.



Figure 3.1: Detailed view of the control panel and LED display.



Figure 3.2: The spacious 25-liter interior cavity.

4. SETUP

Unpacking:

1. Carefully remove the microwave oven and all packaging materials from the carton.

2. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
3. Remove any protective film from the cabinet surface.

Placement:

- Place the oven on a flat, stable surface that can withstand the weight of the oven and the heaviest food likely to be cooked in it.
- Allow at least 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides for proper ventilation. Do not block any ventilation openings.
- Keep the oven away from heat sources and strong magnetic fields.

Assembling the Turntable and Accessories:

The appliance comes with a glass turntable, a baking tray, and an air fryer basket. Ensure these are correctly installed before use.

1. Place the turntable ring on the oven floor.
2. Place the glass turntable securely on top of the turntable ring.
3. For baking or air frying, place the baking tray or air fryer basket on the turntable as required by the recipe.

9 Automatikprogramme

Für jede Speise das richtige Programm



Figure 4.1: The microwave with its essential accessories: turntable, baking tray, and air fryer basket.

5. OPERATING INSTRUCTIONS

The MEDION MD11499 offers multiple cooking modes and automatic programs for various dishes.

Control Panel Functions:

Das 3in1- Multitalent

Mit Mikrowelle, Heißluft und Heißluftfritteusenfunktion



Figure 5.1: Overview of the control panel buttons and their functions.

- **Power:** Adjust microwave power levels (e.g., 100%, 80%, 50%).
- **Air Fry:** Activates the hot air frying function for crispy results.
- **Combi:** Combines microwave and hot air/grill functions for faster cooking and browning.
- **Bake:** For conventional oven baking.
- **Air Fry Menu:** Accesses pre-set programs optimized for air frying.
- **Popcorn:** Dedicated button for convenient popcorn preparation.
- **Defrost:** Offers time-based or weight-based defrosting.

- **Clock/Timer:** Sets the current time and kitchen timer.
- **Keep Warm:** Maintains food temperature after cooking.
- **Rotary Knob:** Used to adjust time, weight, or select menu options.
- **Start/Clear:** Starts cooking or clears settings.

Basic Operation:

1. Plug the appliance into a grounded electrical outlet.
2. Place food in a suitable container on the turntable.
3. Close the oven door securely.
4. Select the desired cooking function (e.g., Power for microwave, Air Fry).
5. Use the rotary knob to set the cooking time or other parameters.
6. Press the 'Start' button to begin cooking.

Using Automatic Programs:

The MD11499 features 9 automatic programs for common dishes, simplifying cooking by pre-setting optimal time and power levels.



Figure 5.2: Examples of dishes prepared using the automatic programs.

Refer to the specific program chart in the full manual for details on each program and recommended food types/weights.

Defrost Function:

The auto defrost function allows for quick and gentle thawing of frozen foods. Select 'Defrost' and then choose between time-based or weight-based defrosting using the rotary knob.

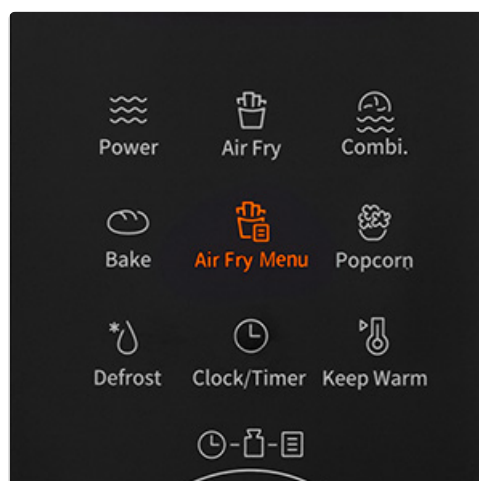


Figure 5.3: The defrost function efficiently thaws frozen ingredients.

6. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and efficient operation of your MEDION MD11499.

Cleaning the Exterior:

- Wipe the exterior with a damp cloth and mild detergent.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surface.

Cleaning the Interior:

- After each use, wipe the interior cavity with a damp cloth to remove food splatters.
- For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes. The steam will loosen the residue, making it easier to wipe clean.
- The glass turntable, baking tray, and air fryer basket can be washed with warm, soapy water or in a dishwasher.



Figure 6.1: Regular cleaning of the microwave exterior ensures hygiene and appearance.

7. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door completely; Check household fuse/circuit breaker.
Food not heating	Door not closed properly; Incorrect power level/time set; Food not suitable for microwave.	Ensure door is latched; Adjust settings; Use microwave-safe dishes.
Uneven cooking	Food not stirred/rotated; Turntable not rotating.	Stir or rotate food during cooking; Ensure turntable is correctly placed and clean.
Smoke/Burning smell	Food residue inside; Overcooked food.	Clean oven interior thoroughly; Adjust cooking time/power.

8. SPECIFICATIONS

Detailed technical specifications for the MEDION MD11499.

Feature	Detail
Brand	MEDION
Model	MD 11499
Product Dimensions	45 x 52.5 x 30 cm (D x W x H)
Item Weight	17.8 kg
Capacity	25 litres
Microwave Power	900 Watts
Hot Air Power	1500 Watts
Heating Method	Microwave Radiation and Convection Heat
Special Features	Air fryer function, 9 Automatic Programs, Popcorn button, Defrost function, LED display
Colour	Black
Inner Material Type	Stainless Steel
Included Components	MD11499 Microwave Oven, Turntable, Baking Tray, Basket for Hot Air Fryer

9. WARRANTY AND SUPPORT

MEDION is committed to providing excellent customer service and support for its products.

Warranty Information:

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact MEDION customer support. An expert customer care team is available to assist you. For more information, you can visit the official MEDION store on Amazon: [MEDION Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CLLJNP1T>

More documents and user manuals: <https://manuals.plus/>