Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > EKO /
- > EKO EK6221-55L-WH Step-Type Waste Bin Instruction Manual

EKO EK6221-55L-WH

EKO EK6221-55L-WH Step-Type Waste Bin Instruction Manual

NTRODUCTION

Thank you for choosing the EKO EK6221-55L-WH Step-Type Waste Bin. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new waste bin. Please read these instructions carefully before use and retain them for future reference.

The EKO EK6221-55L-WH is a 55-liter capacity waste bin designed for both home and commercial use, featuring a semi-circular shape for efficient space utilization and a quiet closing lid mechanism.

1. SETUP

1.1 Unboxing and Placement

- Carefully remove all packaging materials from the waste bin.
- Place the waste bin on a flat, stable surface. Its semi-circular design allows it to fit snugly against a wall, optimizing space.



Image 1.1: The semi-round design of the EKO waste bin allows for efficient placement against walls or furniture.

1.2 Installing the Garbage Bag

- Lift the lid of the waste bin.
- Place your garbage bag inside the bin.
- Utilize the smart liner unit (stainless steel frame) by placing it over the top edge of the garbage bag. This secures the bag and prevents its edges from being visible from the outside, ensuring a neat appearance.
- Ensure the bag fixer on the back of the lid is properly engaged with the bag to prevent slipping.



Image 1.2: Component diagram showing the lid, smart liner unit (stainless steel), bag fixer, main body (PP material), pedal, and pedal guard. The smart liner unit prevents odor leakage and keeps bag edges hidden. The bag fixer secures the garbage bag.

2. OPERATING INSTRUCTIONS

2.1 Opening the Lid

- **Pedal Operation:** Gently step on the foot pedal located at the base of the bin. The lid will open smoothly. This allows for hygienic, hands-free operation.
- Stay-Open Feature: For extended use or when changing the garbage bag, lift the lid manually until it locks into the fully open position.

2.2 Closing the Lid

The EKO waste bin features a Quiet Closing System with an oil damper. When the lid is released
from the open position (either by removing your foot from the pedal or gently pushing it down from the
stay-open position), it will close slowly and silently. This mechanism prevents abrupt slamming and
reduces noise.

フタがゆっくり静かに閉じる

<mark>クワイエットクロージング</mark>システム採用



オイルダンパーによる滑ら かな開閉 エアダンパーと異なり異音 が出ません



ステップガードでペダルを 強く踏んでも床が傷つきま せん

両手がふさがっていても開けられ、手を触れないので衛生的

Image 2.1: The Quiet Closing System ensures the lid closes slowly and silently using an oil damper, unlike air dampers which can produce noise. The integrated step guard protects your floor even if the pedal is pressed firmly. Hands-free operation is hygienic.

2.3 Versatile Use

Beyond its primary function as a waste bin, the 55L capacity allows for various uses:

- Storage Box: Ideal for storing children's toys, stuffed animals, or other household items.
- Stocker: Convenient for collecting recyclable items such as plastic bottles or cans.

The securely closing lid helps prevent odor leakage, making it suitable for diverse applications.

ゴミ箱でもそれ以外でも 使い方色々





収納ボックスとして

ストッカーとして

容量 5 5 L とたっぷりの収納力があるので、子供のおもちゃ やぬいぐるみ入れなど**収納ボックス**として活用できます。

またペットボトルや缶などを貯めておく**ストッカーとしても** 便利です。

フタがしっかり閉まるので**ニオイ漏れの心配がありません**。

Image 2.2: The EKO waste bin can be used as a storage box for items like toys or as a stocker for recyclables, thanks to its generous 55L capacity and secure lid.

3. MAINTENANCE

3.1 Cleaning

- The waste bin features a matte finish that is resistant to fingerprints and smudges, making it easy to clean
- Wipe the exterior with a soft, damp cloth and a mild detergent if necessary. Avoid abrasive cleaners or harsh chemicals, as these may damage the finish.
- For the interior, remove the garbage bag and wipe down with a damp cloth. Ensure the bin is dry before placing a new bag.

4. TROUBLESHOOTING

- Lid not closing smoothly or quietly: Check for any obstructions around the lid hinges or the pedal mechanism. Ensure the oil damper is not damaged. If the issue persists, contact customer support.
- **Garbage bag slipping:** Ensure the smart liner unit is correctly positioned over the bag's rim and that the bag fixer is engaged. Use bags that are appropriately sized for a 55L bin.

• **Pedal not functioning:** Check for any debris or objects lodged under the pedal. Ensure the pedal mechanism is free to move.

5. SPECIFICATIONS



Image 5.1: Dimensions and specifications of the EKO EK6221-55L-WH waste bin.

Specification	Detail
Model Number	EK6221-55L-WH
Capacity	55 Liters
Product Dimensions	46.5 x 35 x 64 cm
Item Weight	3.33 Kilograms
Colour	White
Material	Polypropylene (PP), Stainless Steel
Opening Mechanism	Step-Type (Pedal)

Specification	Detail
Finish Type	Matte Finish
Inner Box	None
Recommended Uses	Indoor, General Waste Management (Kitchen, Offices, Factories, Warehouses)

6. WARRANTY AND SUPPORT

EKO provides a comprehensive warranty and support system for its genuine products.

6.1 Genuine Products

Products sold by authorized retailers, such as Amazon.co.jp, are genuine EKO products. These products undergo strict inspection and thorough quality control to ensure reliability.

6.2 1-Year Warranty Service

- A free repair service is available within one year from the date of purchase.
- To avail of the free repair service, please present your warranty card and proof of purchase (date and store).
- **Important Note:** OEM products and parallel imports are not covered by EKO Japan support. Please ensure you retain the warranty issued by EKO Japan at the time of purchase.

6.3 Official Support Contact

For official support inquiries, please contact EKO during the following hours:

- Operating Hours: Weekdays 9:00 12:00 / 13:00 17:00
- Exclusions: Saturdays, Sundays, public holidays, summer holidays, and winter holidays.

EKOは充実の保証・サポート体制



オフィシャルサポート

日本仕様正規品なら 購入後でも安心

※ OEM品・並行輸入品などはEKO Japan のサポート対象外となりますので、ご注意ください。ご購入時にEKO Japan発行の保証書をお付けしております。

対応時間:平日 9:00~12:00/13:00~17:00 (土日祝、夏季・冬季休業日を除く)



正規販売品

Amazon.co.jpが販売する商品はEKOの正規販売品です。 厳しい検査のもと、徹底した品質管理を行っています。

※ 販売店様が販売する独自のセット組み合わせ商品(EKO以外の商品・プレゼント品・添付物とのセット品)の保証につきましては、直接各販売店様にお願い致します。



1年保証期間内無償修理サービス

ご購入より1年以内は無償にて修理対応いたします。

※ 無償での修理対応には保証書と購入日・購入店のわかるものをご提示



Related Documents - EK6221-55L-WH

	EKO Mirage Semi-Round Sensor Bin EK9331 User Manual & Instructions User manual for the EKO Mirage Semi-Round Sensor Bin (Model EK9331). Learn how to set up, operate using sensor or manual modes, change bags, and troubleshoot this automatic trash can.
WF 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	EKO Mirage X Sensor Bin EK9260/EK9260R User Manual and Operating Instructions Detailed user manual for the EKO Mirage X Sensor Bin (models EK9260 and EK9260R). Learn about product features, power supply options, sensor and manual operation, bin bag changes, accessories, troubleshooting, and warranty information.
	EKO Econova Sensor Bin EK9578 User Manual and Instructions Comprehensive user manual for the EKO Econova Sensor Bin EK9578. Includes operating instructions, troubleshooting, battery safety, and warranty information for this smart kitchen bin.
	EKO Mirage Sensor Bin EK9278/EK9278T User Instructions & Guide Detailed user instructions for the EKO Mirage Sensor Bin models EK9278 and EK9278T, covering setup, operation, maintenance, accessories, troubleshooting, and warranty information.
	EKO EK9336 Vintage Sensor Bin User Instructions Comprehensive user instructions for the EKO EK9336 Vintage Sensor Bin, covering setup, operation, maintenance, and accessory compatibility. Learn how to use the sensor and manual modes, change bin bags, and utilize EKO accessories for optimal performance.
	EKO Astro Slim Sensor Bin EK9100 User Manual and Instructions Comprehensive user manual for the EKO Astro Slim Sensor Bin EK9100, detailing its features, operation, accessory guide, troubleshooting, and safety information.