

[Manuals.plus](#) /

> [Nakamichi](#) /

> Nakamichi TW018ENC+ Wireless Earphones User Manual

Nakamichi TW018ENC+

Nakamichi TW018ENC+ Wireless Earphones User Manual

Model: TW018ENC+

Brand: Nakamichi

INTRODUCTION

Thank you for choosing the Nakamichi TW018ENC+ Wireless Earphones. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new earphones. Please read this manual carefully before use to ensure optimal performance and longevity of your device.



Image: The Nakamichi TW018ENC+ wireless earphones, showing both earbuds and the charging case with its LED display.

SETUP

1. Unboxing and Initial Charge

Upon opening the package, ensure all components are present:

- Nakamichi TW018ENC+ Wireless Earphones (Left and Right)
- Charging Case
- USB Type-C Charging Cable
- Ear Tips (S, M, L sizes)
- User Manual (this document)

Before first use, fully charge the earphones and the charging case. Place the earphones into the charging case. Connect the USB Type-C cable to the charging case and a power source. The LED display on the case will indicate the charging status and battery percentage.

LED電池残量表示

充電ケースにLED電池残量表示機能が付き、ケースとイヤホンの電池残量が一目でわかります。充電時も充電状況を把握できます。また、ワイヤレス充電対応なので、置くだけで充電ができ、ケーブルの煩わしさが解消されます。



LED電池残量表示



約1.5時間



約4時間



約1.5時間



※ワイヤレス充電器は別売りです。

Image: The charging case displaying battery levels, illustrating both wired Type-C and wireless charging options.

2. Bluetooth Pairing

1. Ensure the earphones are charged and inside the charging case.
2. Open the charging case lid. The earphones will automatically enter pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth.
4. Search for available Bluetooth devices and select "Nakamichi TW018ENC+" from the list.
5. Once connected, a voice prompt will confirm successful pairing.

The earphones support Bluetooth 5.3 for a stable and efficient connection.

OPERATING INSTRUCTIONS

Touch Controls

The Nakamichi TW018ENC+ earphones feature high-sensitivity touch controls on each earbud. The following actions can be performed by tapping the touch area:

| Action | Left Earbud | Right Earbud |
|--------------------------|-----------------|-----------------|
| Play/Pause Music | Single Tap | Single Tap |
| Next Track | Triple Tap | |
| Previous Track | | Triple Tap |
| Volume Up | Double Tap | |
| Volume Down | | Double Tap |
| Answer/End Call | Single Tap | Single Tap |
| Reject Call | Long Press (2s) | Long Press (2s) |
| Activate Voice Assistant | Long Press (2s) | Long Press (2s) |

日本語音声プロンプト

操作時に安心の日本語音声プロンプトがあり、操作状態がわかりやすいです。ストレスなく楽しむことができます。

電源がはいりました

接続されました

バッテリー残量が少ない

ゲームモード

高感度タッチセンサー

高感度なタッチセンサーで操作性を向上させました。ワンタッチだけで遅延なく音楽、電話、音声アシスタントなど方面の操作が実現されます。



Image: Visual representation of touch control functions on the earbuds, along with examples of Japanese voice prompts.

Game Mode (Low Latency)

For an optimized gaming experience with reduced audio delay, activate Game Mode:

- Tap either the left or right earbud four times consecutively to toggle Game Mode on/off.

ゲームモード

イヤホン単体で約7時間再生でき、充電ケースと合わせて約35時間再生できます。長い時間充電せずに使えるワイヤレスイヤホンです。通勤や通学などで使用時間を気にせず音楽を楽しめます



Image: A user enjoying a mobile racing game with the Nakamichi TW018ENC+ earphones, highlighting the low-latency game mode.

Single Earbud Mode

You can use either the left or right earbud independently for music playback or calls. Simply take one earbud out of the case, and it will automatically connect to your device if already paired.



Image: An illustration demonstrating the flexibility of using both earbuds or a single earbud for audio and calls.

ENC Noise Reduction for Calls

The earphones feature ENC (Environmental Noise Cancellation) technology to ensure clear hands-free calls by reducing ambient noise. This is particularly effective in noisy environments like public transport or cafes.

高性能ノイズリダクション機能

ノイズリダクション機能付きでイヤホンの内蔵マイクを通じてユーザーの音声を拾い、環境音のノイズを除去します。音声をクリアに相手に伝えます。



Image: A visual representation of the ENC noise reduction feature, showing a woman using the earphones with a sound-filtering sphere around her head.

BATTERY AND CHARGING

The earphones provide up to 7 hours of playback on a single charge. With the charging case, the total

playback time extends to approximately 35 hours.

35時間の長時間再生

イヤホン単体で約7時間再生でき、充電ケースと合わせて約35時間再生できます。長い時間充電せずに使えるワイヤレスイヤホンです。通勤や通学などで使用時間を気にせず音楽を楽しめます



Image: A graphic illustrating the 7-hour playback time for the earbuds and the extended 35-hour total playback with the charging case.

LED Power Display

The charging case features an LED display that clearly shows the battery percentage of the case (0-100%) and the individual charging status of the left and right earbuds. This allows you to monitor battery levels at a glance.



快適な装着性

人間工学に基いたデザインで心地よい装着性を実現しました。イヤークリップは3種類（S/M/L）を付属しますので、耳に合ったサイズを選択できます。

Image: The charging case with its LED display clearly showing the battery percentage of the case and the charging status of both earbuds.

Charging Methods

The charging case supports two charging methods:

- **USB Type-C Charging:** Connect the included USB Type-C cable to the charging port on the case and a power source.
- **Wireless Charging:** Place the charging case on a compatible wireless charging pad.

Choose the method that best suits your convenience.

MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Gently clean the charging contacts on both the earbuds and inside the case to ensure proper charging.

Storage

When not in use, store the earphones in their charging case to protect them from dust and damage. Store in a cool, dry place away from extreme temperatures.

Water Resistance

The earphones are designed with a degree of water resistance. However, they are not waterproof. Avoid submerging them in water or exposing them to heavy rain. Dry them thoroughly if they get wet from sweat or light splashes.

TROUBLESHOOTING

If you encounter any issues with your Nakamichi TW018ENC+ earphones, please refer to the following common solutions:

- **No Sound from One Earbud:** Ensure both earbuds are fully charged. Place them back in the case, close the lid, wait a few seconds, then open the lid and try again. Re-pair the earphones with your device.
- **Earphones Not Pairing:** Make sure Bluetooth is enabled on your device and the earphones are in pairing mode. Turn off Bluetooth on other nearby devices that might be trying to connect. Try resetting the earphones (refer to specific reset instructions if available in a separate quick start guide, otherwise, a full charge and re-pairing often resolves this).
- **Charging Issues:** Ensure the charging cable is securely connected and the power source is working. Clean the charging contacts on both the earbuds and the case. If using wireless charging, ensure the case is properly aligned on the charging pad.
- **Unintended Touch Control Activation:** When adjusting the earphones in your ear, try to avoid touching the sensitive control area. Familiarize yourself with the correct way to handle the earbuds to prevent accidental taps.
- **Volume Too High/Low:** Adjust the volume directly on your connected device. If the minimum volume is still too loud, check your device's audio settings for additional volume control options.

If the problem persists after trying these steps, please contact customer support.

SPECIFICATIONS

| Feature | Detail |
|-----------------------------------|---|
| Connectivity Technology | Wireless |
| Wireless Communication Technology | Bluetooth 5.3 |
| Included Components | Instruction Manual, Charging Case, Ear Tips, USB-C Charging Cable, Wireless Earphones |
| Target Audience | Adult |
| Compatible Devices | Windows, iOS, Mac, Android |
| Control Type | Touch Control |
| Cable Feature | Cable-free |
| Water Resistance Level | Water Resistant |
| Manufacturer Model Number | TW018ENC+ |
| Package Dimensions | 13 x 11.7 x 4.2 cm; 120 g |
| Ear Placement | In-Ear |
| Headphone Form Factor | Earbuds |
| Impedance | 32 Ohms |
| Noise Control | Sound Isolation (ENC) |

仕様

| | |
|----------------|--|
| Bluetoothバージョン | V5.3 |
| 通信距離 | 見通し約10m |
| 対応コーデック | SBC、AAC |
| 周波数帯域 | 20Hz ~ 20KHz |
| インピーダンス | 16Ω±15% |
| 動作温度 | 0°C ~ 40°C |
| ドライバー | 13mm |
| 感度 | 114±1.5dB |
| 対応プロファイル | A2DP/AVRCP/HFP/HSP |
| 入力 | DC 5V/300mA |
| 出力 | DC 5V / 30mA |
| 重量 | 4.2g (片耳)、39.5g (充電ケース) |
| バッテリー容量 | 37mAh 3.7V (片耳) / 500mAh、3.7V/1.85Wh (充電ケース) |
| 外形寸法 | L36xW26xD22mm (イヤホン) L63xD52xH26mm (充電ケース) |



内容物



充電ケース



USB Type-C充電
ケーブル



取扱説明書



イヤホン



イヤチップ

S x 1

M x 1

L x 1

Image: A detailed overview of the product specifications and a visual list of included package contents.

WARRANTY AND SUPPORT

The Nakamichi TW018ENC+ Wireless Earphones come with a one-year warranty from the date of purchase.

In the unlikely event of any quality issues or if you require assistance with your product, please contact our customer support team. We are committed to providing sincere and dedicated support.

Contact Method:

Please use one of the following methods to reach us:

- Go to your 'Account Services' > 'Order History' > Find your order > Click on 'Seller' > 'Ask a Question'.
- Alternatively, go to 'Seller' > 'Seller Page' > Click the 'Ask a Question' button in the upper right corner.