



Manuals.plus /

› **findtime /**

› findtime Women's Digital Watch Waterproof Sport Watch Analog Wristwatch Military Tactical Watches LED Luminous Alarm Stopwatch Dual Time Wrist Watches black User Manual

findtime FMSD3306

findtime Women's Digital Watch

USER MANUAL

Introduction

Thank you for choosing the findtime Women's Digital Watch. This versatile timepiece combines analog and digital displays with a robust design, making it suitable for both daily wear and outdoor activities. It features a durable TPU strap, Japanese movement, and multiple functions including alarm, stopwatch, LED backlight, and dual time display. This manual provides detailed instructions to help you set up, operate, and maintain your watch.



Product Overview: A detailed front view of the findtime Women's Digital Watch in black, showcasing its analog and digital displays, multiple buttons, and sporty design.

Watch Components

Familiarize yourself with the buttons and display areas of your findtime watch.

- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch, Date).
- **LIGHT Button:** Activates the LED backlight.
- **START Button:** Used to start/stop functions in Stopwatch mode, and adjust settings in setting modes.
- **RESET Button:** Used to reset functions in Stopwatch mode, and select items in setting modes.
- **Analog Display:** Traditional hour and minute hands.
- **Digital Display:** Shows time, date, and other digital functions.



Watch in Environment: The findtime watch displayed on a sandy surface, highlighting its suitability for outdoor and casual settings.

Setup: Setting Time and Date

To ensure accurate timekeeping, follow these steps to set the time and date on your watch.

1. Entering Time Setting Mode:

From the normal time display, press the **MODE** button repeatedly until the seconds start flashing on the digital display. This indicates you are in the time setting mode.

2. Adjusting Seconds:

Press the **RESET** button to reset the seconds to 00. If the current seconds are between 30 and 59, pressing **RESET** will reset them to 00 and add one minute to the current time.

3. Moving to Next Setting:

Press the **START** button to move the flashing selection to the next setting item (e.g., Hours, Minutes, Year, Month, Day, 12/24H format).

4. Adjusting Values:

While an item is flashing, press the **RESET** button to increase its value. Hold **RESET** to rapidly advance the value.

5. Setting 12/24 Hour Format:

When the 12/24H indicator is flashing, press **RESET** to toggle between 12-hour (with AM/PM indicator) and 24-hour (military time) formats.

6. Exiting Setting Mode:

Once all settings are adjusted, press the **MODE** button to return to the normal time display. The flashing will stop.

Operating Functions

Your findtime watch is equipped with several useful functions. Navigate through them using the **MODE** button.

1. Alarm Function

The alarm can be set to sound at a specific time daily.

1. Press **MODE** until "AL" or the alarm time appears on the digital display.
2. Press **START** to select the hour or minute to set (the selected value will flash).
3. Press **RESET** to adjust the flashing value.
4. Press **MODE** to exit alarm setting mode.
5. To turn the alarm ON/OFF, in alarm mode, press **RESET** to toggle the alarm symbol (bell icon) on or off.

2. Stopwatch Function

Use the stopwatch to measure elapsed time.

1. Press **MODE** until "ST" or "STOP" appears on the digital display. The stopwatch will show 00:00:00.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to 00:00:00.
5. To resume timing after pausing, press **START**.

3. Hourly Chime

The hourly chime sounds a short beep every hour on the hour.

- In normal time display mode, press **MODE** twice to enter the alarm setting mode.
- Press **RESET** to toggle the hourly chime ON/OFF. Look for a small icon (often a bell or speaker) to indicate its status.

4. LED Backlight

The LED backlight illuminates the digital display for easy viewing in low light conditions.

- Press the **LIGHT** button (usually on the top left) to activate the backlight. It will stay on for a few seconds.

Luminous effect display

Luminous effect display



Luminous Display: The watch face illuminated by its LED backlight, showing the time clearly in a dark environment.

Nine functions

Function and appearance level merge to meet your daily needs



Week calendar

Feel Free to view the Sunday date



Luminous display

You can see the time clearly in the dark



Stopwatch timing

Master the rhythm of movement in real time



50m waterproof

Support waterproof, depth waterproof <50 meters



Shock-proof and fall-proof

It has good seismic function



Alarm mode

Set the reminder time freely



Dual mode time

12/24 hours free switching



Chimes on the hour

The clock strikes once on the hour



Japanese original battery

Low power consumption long endurance

Nine Key Functions: A visual representation of the watch's main features, including week calendar, luminous display, stopwatch, waterproofing, shock resistance, alarm, dual time, hourly chime, and long-lasting battery.

Maintenance

Proper care will extend the life and maintain the performance of your findtime watch.

- **Water Resistance:** Your watch is 50M waterproof, suitable for cold bath, rain, or washing hands. **DO NOT** use in hot water or steam. **DO NOT** press any buttons while the watch is submerged in water.
- **Cleaning:** Wipe the watch with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid harsh chemicals.
- **Battery:** The watch uses a Japanese original battery designed for low power consumption and long endurance. Battery replacement should ideally be performed by a professional watch repair service.
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.



**50M
WATERPROOF**



Please Do Not Rinse with Hot Water



Waterproof Feature: The watch shown with water droplets, illustrating its 50-meter water resistance for daily use.

Troubleshooting

If you encounter issues with your watch, try these common troubleshooting steps.

Problem	Possible Cause / Solution
<p>Difficulty setting time/alarm.</p>	<ul style="list-style-type: none"> ◦ Ensure you are in the correct setting mode (seconds flashing for time, "AL" for alarm). ◦ Press START to cycle through the items to be set (hours, minutes, etc.). ◦ Press RESET to change the value of the flashing item. ◦ Refer to the "Setup" section for detailed instructions.
<p>Digital display is blank or dim.</p>	<ul style="list-style-type: none"> ◦ The battery may be low. Consider professional battery replacement. ◦ Ensure the watch has not been exposed to extreme temperatures or strong impacts.
<p>Buttons are unresponsive.</p>	<ul style="list-style-type: none"> ◦ Ensure the watch is dry. Do not press buttons underwater. ◦ A hard reset (if applicable, by removing battery for a short period) might resolve temporary glitches, but this should be done by a professional.
<p>Analog hands do not match digital time.</p>	<ul style="list-style-type: none"> ◦ Some models require manual adjustment of analog hands. Check if there's a crown to pull out and turn. (Note: This watch appears to be fully digital/button controlled, so this might not apply directly, but it's a general watch troubleshooting tip). ◦ If the analog hands are not adjustable via buttons, they might be synchronized automatically with the digital time. If they are out of sync, a factory reset or professional service might be needed.

SHOCKPROOF



Shockproof Design: The watch's robust construction, designed to withstand impacts and provide durability for active lifestyles.

 
Specifications

Detailed technical specifications for your findtime Women's Digital Watch.


Feature	Detail
Product Dimensions	8.66 x 1.81 x 0.63 inches
Item Weight	1.55 ounces
Model Number	FMSD3306
Department	womens
Date First Available	July 14, 2023
Manufacturer	findtime
Clasp Type	Buckle
Water Resistance	50M (Please refer to Maintenance section for details)
Display Type	Digital and Analog Dual Display
Movement	Japanese Movement

PARAMETER


Watch case width:46mm



Total length of watch:220mm

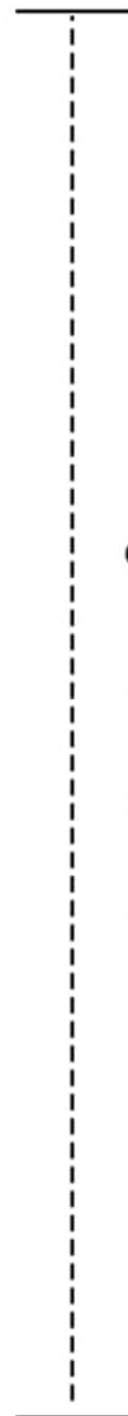

Watch band width:18-22mm

 

Wear Range: 5.31~7.87 inches

Product Dimensions: A visual guide detailing the watch's measurements, including case width, total length, band width, and recommended wear range.

Warranty and Support

Your findtime Women's Digital Watch comes with a commitment to quality and customer satisfaction.

- **Warranty:** We offer a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or failure to follow the instructions in this manual.
- **Customer Support:** If you have any questions, concerns, or require assistance with your watch, please contact our customer support team. You can typically find contact information on the seller's page where you purchased the product or through the official findtime website.
- **Online Resources:** For additional tips, FAQs, or product updates, please visit the official findtime brand store on Amazon: [findtime Amazon Store](#).