

[Manuals.plus](#) /

› [Dovety](#) /

› Dovety Electric Spin Scrubber CB-02 User Manual

Dovety CB-02

Dovety Electric Spin Scrubber CB-02 User Manual

Comprehensive instructions for the Dovety Electric Spin Scrubber, Model CB-02.

1. PRODUCT OVERVIEW

The Dovety Electric Spin Scrubber is a cordless cleaning device designed to simplify household cleaning tasks. It features an adjustable handle, two-speed settings, and multiple interchangeable brush heads for various surfaces.



Image 1.1: Dovety Electric Spin Scrubber with its components, including the main unit, extension handle, and various brush heads.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Electric Spin Scrubber Main Unit
- Extension Handle
- 8 Replaceable Brush Heads (various types)
- USB-C Charging Cable
- Wall-mount Holder Clip
- User Manual

3. SETUP AND ASSEMBLY

3.1 Charging the Device

Before first use, fully charge the scrubber. The device features a 3000mAh battery and takes approximately 2-3 hours to fully charge, providing up to 90 minutes of working time.

1. Locate the USB-C charging port on the main unit.
2. Connect the provided USB-C cable to the scrubber and a compatible USB power adapter (not included).
3. The circular battery display will illuminate, indicating the charging status. Four blue light arcs represent 25% increments of battery power.
4. Once all four arcs are solid, the device is fully charged.



Image 3.1: The electric spin scrubber connected to a charger, illustrating its battery capacity and charging time.

3.2 Attaching the Extension Handle

The scrubber can be used handheld or with the extension handle for extended reach.

1. To attach the extension handle, align the main unit with the handle's connection point.

2. Rotate the telescopic rod to install it securely.
3. To adjust the length, loosen the inner lock, extend or retract the rod to your desired length (from 14 to 53.5 inches), and then tighten the inner lock.



Image 3.2: Visual guide for assembling the scrubber and adjusting the handle length.

3.3 Attaching Brush Heads

Select the appropriate brush head for your cleaning task.

1. Align the chosen brush head with the rotating base of the scrubber.
2. Push firmly and twist clockwise until it clicks into place.
3. To remove, twist counter-clockwise and pull the brush head off.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Speed Adjustment

The scrubber features two adjustable speeds: Low Speed (300 RPM) for daily cleaning and High Speed (500 RPM) for deep cleaning.

1. Press the power button once to turn on the scrubber. It will default to High Speed (500 RPM).
2. To switch to Low Speed (300 RPM), press and hold the power button for 2 seconds.
3. Press the power button again to turn off the device.



Image 4.1: Illustration of the scrubber's dual-speed functionality for different cleaning needs.

4.2 Using the Various Brush Heads

The Dovety Electric Spin Scrubber comes with 8 versatile brush heads, each designed for specific cleaning tasks:

- **Large Flat Brush:** Ideal for large flat surfaces like floors, tile walls, and bathtubs.
- **Small Flat Brush:** Suitable for smaller flat areas, stove tops, sinks, and toilet grooves.
- **Corner/Pointed Brush:** Designed for corners, grout lines, car wheels, and other hard-to-reach areas.
- **Fiber Sponge:** Effective for kitchen surfaces, stove tops, and kitchen ventilators.
- **Sponge Brush:** Gentle cleaning for car surfaces and kitchenware.
- **Big Cloth:** For windows and wood floors.
- **Imitation Wool Cloth:** Suitable for furniture, car seats, and leather surfaces.
- *Additional brush head types may be included for specialized tasks.*



Image 4.2: Examples of the scrubber's versatility across different cleaning applications.



Image 4.3: Large Brush in use for floor and tile cleaning.



Image 4.4: Small Brush in use for stove and sink cleaning.



Image 4.5: Pointed Brush in use for tire and corner cleaning.



Image 4.6: Fiber Sponge in use for kitchen surfaces.



Image 4.7: Sponge Brush in use for car surfaces and kitchenware.



Image 4.8: Big Cloth in use for windows and wood floors.



Image 4.9: Imitation Wool Cloth in use for furniture and car seats.

5. MAINTENANCE

5.1 Cleaning the Scrubber

The Dovety Electric Spin Scrubber is IPX5 waterproof, meaning it is protected against low-pressure water jets from any direction. However, it should not be submerged in water.

1. After each use, remove the brush head.
2. Rinse the brush head under running water to remove dirt and debris.
3. Wipe the main unit and handle with a damp cloth. Do not use abrasive cleaners or solvents.
4. Ensure all parts are dry before storing.



Image 5.1: The scrubber's IPX5 waterproof rating allows for easy cleaning with splashes, but not full submersion.

5.2 Storage

Store the scrubber in a dry place away from direct sunlight.



Image 5.2: The scrubber can be conveniently stored using the included wall-mount holder clip.

6. TROUBLESHOOTING

If you encounter issues with your Dovety Electric Spin Scrubber, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Scrubber does not turn on.	Low battery.	Charge the scrubber fully (2-3 hours).
Brush head stops spinning or spins slowly.	Low battery or excessive pressure applied.	Recharge the device. Reduce pressure during cleaning.
Brush head detaches during use.	Brush head not securely attached.	Ensure the brush head is twisted clockwise until it clicks firmly into place.
Device not charging.	Faulty cable or power adapter.	Try a different USB-C cable or power adapter. Ensure the cable is fully inserted.

7. SPECIFICATIONS

- **Brand:** Dovety
- **Model Number:** CB-02
- **Color:** Blue
- **Handle Material:** Plastic
- **Product Dimensions:** 8.5"L x 8.7"W x 2.6"H
- **Special Feature:** Extendable Handle (14 to 53.5 inches)
- **Speed Settings:** 2 (Low: 300 RPM, High: 500 RPM)
- **Battery:** 3000mAh Lithium Ion (included)
- **Charging Time:** 2-3 hours (Type-C Fast Charging)
- **Working Time:** Up to 90 minutes on a full charge
- **Waterproof Rating:** IPX5
- **Item Weight:** 2.75 pounds
- **Included Components:** Handle, 8 Brush Heads, USB Cable, Holder Clip
- **UPC:** 757377733573

8. SUPPORT

For further assistance or inquiries, please contact Dovety customer support through the retailer's platform or the official Dovety website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question