

[Manuals.plus](#) /

› [uehba](#) /

› uehba YKR-H/102E Replacement Remote Control Instruction Manual

## uehba YKR-H/102E

# uehba YKR-H/102E Replacement Remote Control Instruction Manual

Compatible with AUX Air Conditioner Models YKR-H/002E and YKR-H/006E

## 1. INTRODUCTION

---

This manual provides instructions for the uehba YKR-H/102E replacement remote control. This remote is designed to be compatible with AUX Air Conditioner models YKR-H/002E and YKR-H/006E. It is pre-programmed and requires no additional setup; it will function immediately upon battery installation.

**No need programming !  
Work right out of the box !**



The YKR-H/102E remote control is ready to use out of the box, requiring no programming.

## 2. SETUP

### 2.1 Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



**Need 2x AAA batteries  
( not included)**



Insert two AAA batteries into the compartment, observing polarity.

### 3. OPERATING INSTRUCTIONS

---

Point the remote control directly at the air conditioner's receiver. Ensure there are no obstructions between the remote and the air conditioner.


#### 3.1 Basic Functions

- **ON/OFF Button:** Press to turn the air conditioner on or off.
- **MODE Button:** Cycles through operating modes such as AUTO, COOL, DRY, HEAT, and FAN.
- **Temperature Adjustment Buttons (Up/Down Arrows):** Adjusts the desired temperature setting.
- **FAN SPEED Button:** Adjusts the fan speed (e.g., LOW, MID, HIGH, AUTO).

#### 3.2 Advanced Functions

- **°C/°F Button:** Toggles the temperature display between Celsius and Fahrenheit.
- **SLEEP Button:** Activates or deactivates sleep mode for energy-saving and quiet operation.
- **SWING Buttons:** Controls the horizontal and vertical swing of the air conditioner's louvers.
- **TIMER Button:** Sets the timer for automatic on/off operations.
- **DISPLAY Button:** Toggles the display on the air conditioner unit.
- **TURBO Button:** Activates maximum cooling or heating for rapid temperature change.
- **ECO Button:** Engages energy-saving mode.
- **iCLEAN Button:** Initiates the self-cleaning function of the air conditioner.
- **Anti-F Button:** Activates anti-fungus function.
- **ELE.H Button:** Activates electric heating function.
- **HEALTH Button:** Activates health-related functions (e.g., air purification).
- **iFEEL Button:** Activates the 'I Feel' function, which senses the temperature at the remote's location.

## Display in both Celsius and Fahrenheit

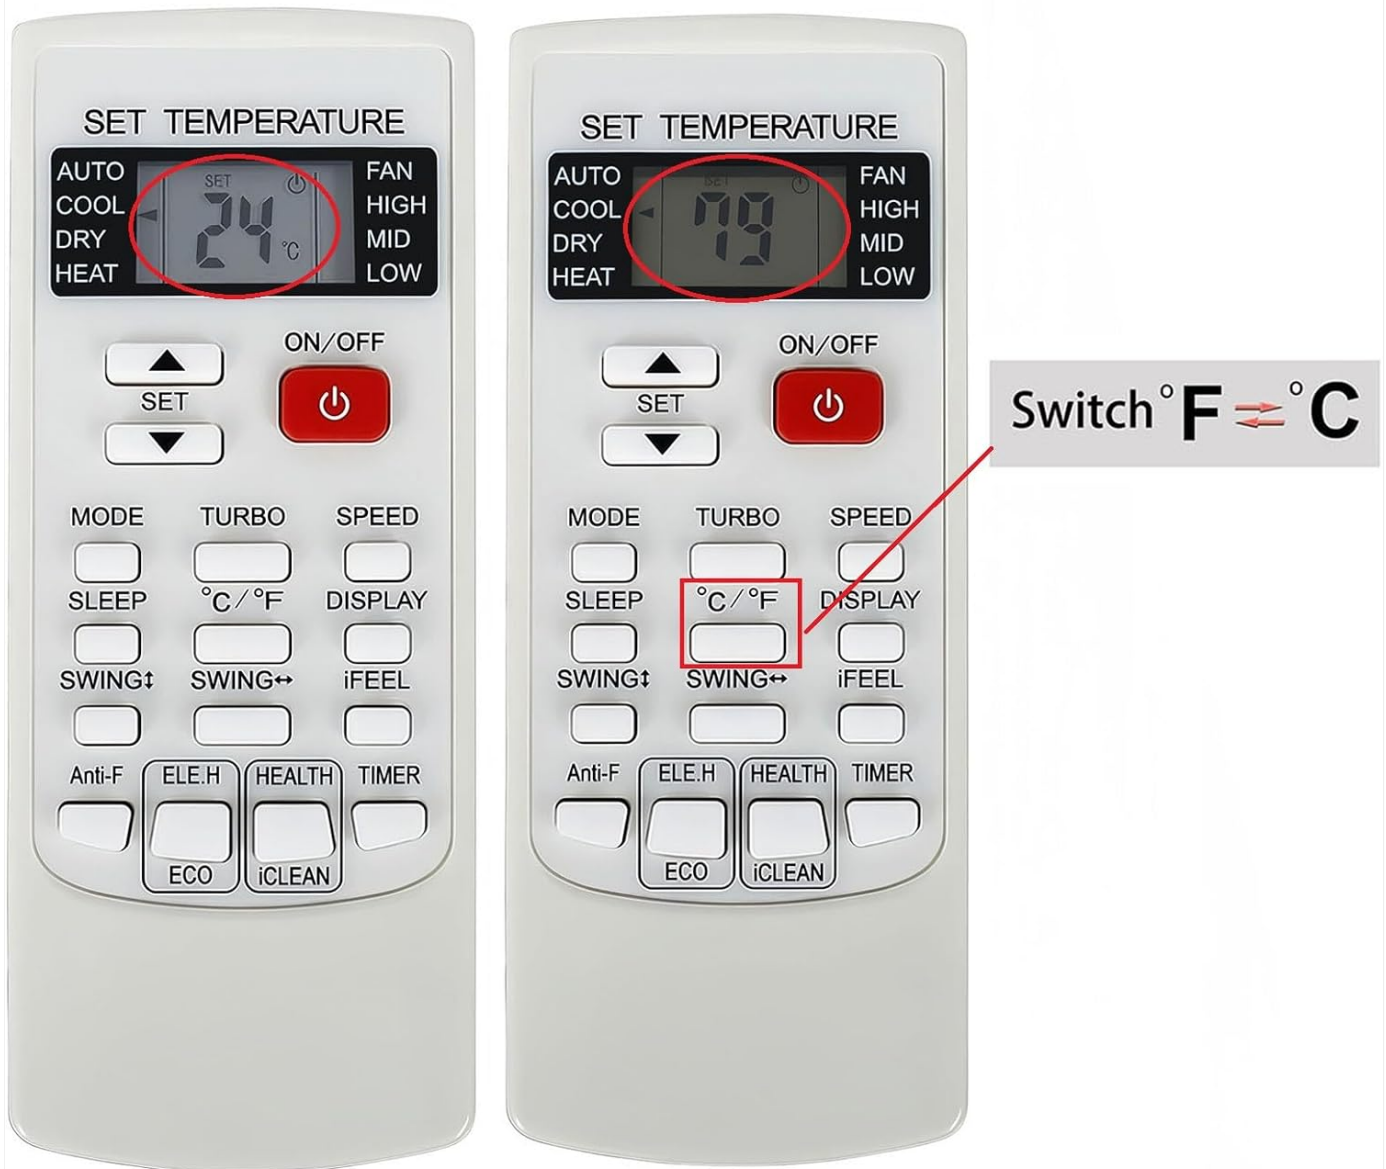

Press the °C/°F button to switch between Celsius and Fahrenheit temperature displays.

## 4.1 Battery Replacement

Replace batteries when the remote control's display becomes dim or when the air conditioner no longer responds reliably to commands. Always replace both batteries simultaneously with new AAA alkaline batteries.

## 4.2 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

# 5. TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are installed correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
  - Confirm the remote is pointed directly at the air conditioner.
- **Limited operating range:**
  - Replace batteries if they are low.
  - Remove any objects that might be blocking the infrared signal.

# 6. SPECIFICATIONS

|                         |                                                |
|-------------------------|------------------------------------------------|
| Model Number            | YKR-H/102E                                     |
| Compatible Devices      | AUX Air Conditioner (YKR-H/002E, YKR-H/006E)   |
| Connectivity Technology | Infrared                                       |
| Maximum Range           | 10 Meters                                      |
| Batteries Required      | 2 x 1.5V AAA Alkaline Batteries (not included) |
| Item Weight             | 64 Grams                                       |
| Color                   | White                                          |
| Material                | ABS                                            |

# 7. WARRANTY AND SUPPORT

## 7.1 Warranty Information

This uehba YKR-H/102E replacement remote control comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use.

## 7.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact the seller or manufacturer directly through your purchase platform. Please have your order details and product model number (YKR-H/102E) available when contacting support.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0CLM3CSNG>

More documents and user manuals: <https://manuals.plus/>