

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kitchen HQ](#) /

› [Kitchen HQ 4.875-Quart 2-in-1 Glass Air Fryer/Grill System User Manual](#)

Kitchen HQ 4.875-Quart 2-in-1 Glass Air Fryer/Grill System

Kitchen HQ 4.875-Quart 2-in-1 Glass Air Fryer/Grill System User Manual

Model: 4.875-Quart 2-in-1 Glass Air Fryer/Grill System

INTRODUCTION

Thank you for choosing the Kitchen HQ 4.875-Quart 2-in-1 Glass Air Fryer/Grill System. This appliance is designed to provide versatile cooking options, allowing you to air fry for healthier meals or grill your favorite foods with ease. Its unique transparent design offers visibility during the cooking process. Please read this manual thoroughly before operation to ensure safe and efficient use.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Kitchen HQ 2-in-1 system.



Figure 1: Front view of the Kitchen HQ 2-in-1 Glass Air Fryer/Grill System. This image shows the main unit with the glass air fryer basket attached, displaying the digital control panel and the overall red and black design.



Figure 2: Components of the Kitchen HQ 2-in-1 system. This image displays the main unit with the grill top attached, alongside the air fryer basket insert and a wire rack, illustrating the versatility of the appliance.

Main Components:

- **Main Unit:** Houses the heating element and control panel.
- **Glass Air Fryer Basket:** Transparent basket for air frying, allowing visual monitoring of food.
- **Grill Top:** Flat grilling surface for searing and grilling.
- **Air Fryer Rack/Insert:** Sits inside the glass basket for optimal air circulation.
- **Control Panel:** Digital display with touch controls for temperature, time, and cooking modes.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and any promotional labels or stickers from the appliance.
2. **Cleaning:** Before first use, wash the glass air fryer basket, grill top, and any removable accessories (like the air fryer rack) in warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the main unit on a stable, heat-resistant, and level surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 6 inches of space on all sides.
4. **Power Connection:** Ensure the power cord is not damaged and plug it into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Air Frying Mode:

1. Ensure the glass air fryer basket is securely attached to the main unit.
2. Place the air fryer rack/insert into the glass basket.
3. Place food evenly on the rack. Do not overfill the basket to allow for proper air circulation.
4. Close the lid securely.
5. Plug in the appliance. The control panel will illuminate.
6. Use the temperature controls to set the desired cooking temperature.
7. Use the time controls to set the desired cooking time.
8. Press the Start button to begin cooking. The appliance will preheat if necessary.
9. During cooking, you may open the basket to shake or flip food. The appliance will pause and resume when the basket is reinserted.
10. Once cooking is complete, the appliance will beep. Carefully remove the basket using oven mitts.

Grill Mode:

1. Ensure the grill top is securely placed on the main unit.
2. Plug in the appliance. The control panel will illuminate.
3. Use the temperature controls to set the desired grilling temperature.
4. Allow the grill top to preheat for 5-10 minutes until it reaches the set temperature.
5. Carefully place food onto the hot grill surface.
6. Monitor food closely and flip as needed for even cooking.
7. Once cooking is complete, turn off the appliance and unplug it. Allow the grill top to cool completely before cleaning.

MAINTENANCE AND CLEANING

Regular cleaning will extend the life of your appliance.

1. **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet and allow it to cool down completely.
2. **Removable Parts:** The glass air fryer basket, grill top, and air fryer rack are dishwasher safe or can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Stubborn Residue:** For stubborn food residue, soak the removable parts in warm, soapy water for a few minutes before cleaning. Do not use abrasive cleaning materials or metal scouring pads.
5. **Storage:** Ensure all parts are clean and dry before storing. Store the appliance in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Appliance not assembled correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the glass basket or grill top is properly seated.
Food is not cooked evenly.	Basket/grill overloaded; Temperature too low; Cooking time too short.	Do not overload the basket/grill. Shake or flip food halfway through cooking. Increase temperature or cooking time as needed.
White smoke coming from appliance.	Grease residue from previous use; High-fat food cooking.	Clean the basket/grill thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Appliance smells like burning plastic.	New appliance smell; Overheating.	A slight odor is normal during first few uses. If persistent or strong, unplug immediately and contact customer support. Ensure proper ventilation.

SPECIFICATIONS



Figure 3: Dimensions of the Kitchen HQ 2-in-1 Glass Air Fryer/Grill System. This image provides a visual representation of the appliance's measurements: 12.5 inches wide, 9.5 inches deep, and 12.63 inches high.

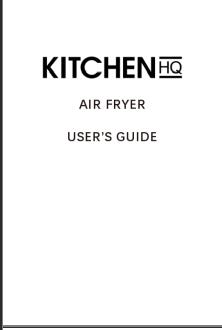
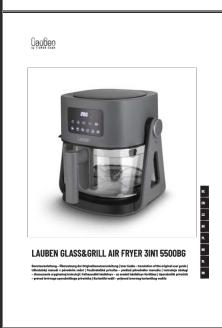
- **Model:** 4.875-Quart 2-in-1 Glass Air Fryer/Grill System
- **Capacity:** 4.875 Quarts
- **Color:** Red
- **Material:** Plastic, Glass
- **Dimensions (L x W x H):** 12.5 x 9.5 x 12.63 inches
- **Item Weight:** Approximately 13 Pounds
- **Special Feature:** Temperature Control
- **Manufacturer:** Kitchen HQ

WARRANTY AND SUPPORT

This Kitchen HQ 4.875-Quart 2-in-1 Glass Air Fryer/Grill System (Renewed) comes with a **1-Year Refurbished Warranty**. For warranty claims, technical support, or any inquiries regarding your product, please refer to the contact information provided by the retailer or the Amazon Renewed program.

For further assistance, please visit the Amazon Renewed support page or contact their customer service directly.

Related Documents - 4.875-Quart 2-in-1 Glass Air Fryer/Grill System

 <p>KITCHENHQ AIR FRYER USER'S GUIDE</p>	<p>KitchenHQ Air Fryer User's Guide</p> <p>Comprehensive user's guide for the KitchenHQ Air Fryer, detailing its general description, important safety information, preparation and usage instructions, cooking tips, cleaning, storage, troubleshooting, and warranty information.</p>																																																																																
 <p>KITCHENHQ Electric 2 Qt. Pressure Cooker USER'S MANUAL AND RECIPES</p>	<p>Kitchen HQ Electric 2 Qt. Pressure Cooker User Manual and Recipes</p> <p>Comprehensive user manual and recipe guide for the Kitchen HQ Electric 2 Qt. Pressure Cooker, covering safety, operation, functions, troubleshooting, and various recipes like Thai Coconut Curry with Shrimp and Butter Chicken.</p>																																																																																
 <p>Tefal AIR FRYER SAFETY & USER GUIDE ESSENTIAL INSTRUCTIONS</p> <table border="1"><tr><td>fr</td><td>CONSIGNES DE SÉCURITÉ</td><td>2</td></tr><tr><td>de</td><td>WICHTIGE INSTRUKTIONEN</td><td>4</td></tr><tr><td>nl</td><td>VEILIGHEIDSINSTRUCTIES</td><td>9</td></tr><tr><td>de</td><td>SECHEITHEITSHINWEISE</td><td>12</td></tr><tr><td>es</td><td>CONSEJOS DE SEGURIDAD</td><td>14</td></tr><tr><td>es</td><td>ADVERTENCIAS DE SEGURIDAD</td><td>19</td></tr><tr><td>pt</td><td>CONSELHOS DE SEGURANÇA</td><td>22</td></tr><tr><td>pt</td><td>CONSELHOS DE SEGURANÇA</td><td>25</td></tr><tr><td>tr</td><td>ÖNMEKLİ TAVSİYELER</td><td>30</td></tr><tr><td>de</td><td>WICHTIGE SICHERHEITSHINWEISE</td><td>32</td></tr><tr><td>sv</td><td>SAFEMÅTTSTÄVSLÄR</td><td>37</td></tr><tr><td>pt</td><td>INSTRUÇÕES DE ASEGURAMIENTO</td><td>41</td></tr><tr><td>tr</td><td>TURVALLISUUSOHJEET</td><td>46</td></tr><tr><td>hu</td><td>BIZTONÁS AGY ÜZEMELTETÉS</td><td>47</td></tr><tr><td>es</td><td>INSTRUCCIONES DE SEGURIDAD</td><td>50</td></tr><tr><td>hr</td><td>SIGURNOSNE UPUTE</td><td>53</td></tr><tr><td>tr</td><td>VARİANTE İHAZİ</td><td>56</td></tr><tr><td>tr</td><td>VARİANTE İHAZİ</td><td>59</td></tr><tr><td>pl</td><td>INSTRUKCJE BEZPIECZNOŚCIOWE</td><td>62</td></tr><tr><td>de</td><td>WICHTIGE SICHERHEITSHINWEISE</td><td>64</td></tr><tr><td>de</td><td>DÖLÉDZTÉ REHEDÉCSENŐTÉ DÖMÖRÜCÁNA</td><td>68</td></tr><tr><td>tr</td><td>VARİANTE İHAZİ</td><td>71</td></tr><tr><td>ru</td><td>ИНСТРУКЦИИ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ</td><td>74</td></tr><tr><td>uk</td><td>ІНСТРУКЦІЇ ПО ТЕХНІКІ БЕЗОПАСНОСТІ</td><td>77</td></tr><tr><td>tr</td><td>VARİANTE İHAZİ</td><td>80</td></tr><tr><td>ar</td><td>إرشادات الأمان</td><td>85</td></tr><tr><td>fa</td><td>ارشاد ایمنی</td><td>86</td></tr></table>	fr	CONSIGNES DE SÉCURITÉ	2	de	WICHTIGE INSTRUKTIONEN	4	nl	VEILIGHEIDSINSTRUCTIES	9	de	SECHEITHEITSHINWEISE	12	es	CONSEJOS DE SEGURIDAD	14	es	ADVERTENCIAS DE SEGURIDAD	19	pt	CONSELHOS DE SEGURANÇA	22	pt	CONSELHOS DE SEGURANÇA	25	tr	ÖNMEKLİ TAVSİYELER	30	de	WICHTIGE SICHERHEITSHINWEISE	32	sv	SAFEMÅTTSTÄVSLÄR	37	pt	INSTRUÇÕES DE ASEGURAMIENTO	41	tr	TURVALLISUUSOHJEET	46	hu	BIZTONÁS AGY ÜZEMELTETÉS	47	es	INSTRUCCIONES DE SEGURIDAD	50	hr	SIGURNOSNE UPUTE	53	tr	VARİANTE İHAZİ	56	tr	VARİANTE İHAZİ	59	pl	INSTRUKCJE BEZPIECZNOŚCIOWE	62	de	WICHTIGE SICHERHEITSHINWEISE	64	de	DÖLÉDZTÉ REHEDÉCSENŐTÉ DÖMÖRÜCÁNA	68	tr	VARİANTE İHAZİ	71	ru	ИНСТРУКЦИИ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ	74	uk	ІНСТРУКЦІЇ ПО ТЕХНІКІ БЕЗОПАСНОСТІ	77	tr	VARİANTE İHAZİ	80	ar	إرشادات الأمان	85	fa	ارشاد ایمنی	86
fr	CONSIGNES DE SÉCURITÉ	2																																																																															
de	WICHTIGE INSTRUKTIONEN	4																																																																															
nl	VEILIGHEIDSINSTRUCTIES	9																																																																															
de	SECHEITHEITSHINWEISE	12																																																																															
es	CONSEJOS DE SEGURIDAD	14																																																																															
es	ADVERTENCIAS DE SEGURIDAD	19																																																																															
pt	CONSELHOS DE SEGURANÇA	22																																																																															
pt	CONSELHOS DE SEGURANÇA	25																																																																															
tr	ÖNMEKLİ TAVSİYELER	30																																																																															
de	WICHTIGE SICHERHEITSHINWEISE	32																																																																															
sv	SAFEMÅTTSTÄVSLÄR	37																																																																															
pt	INSTRUÇÕES DE ASEGURAMIENTO	41																																																																															
tr	TURVALLISUUSOHJEET	46																																																																															
hu	BIZTONÁS AGY ÜZEMELTETÉS	47																																																																															
es	INSTRUCCIONES DE SEGURIDAD	50																																																																															
hr	SIGURNOSNE UPUTE	53																																																																															
tr	VARİANTE İHAZİ	56																																																																															
tr	VARİANTE İHAZİ	59																																																																															
pl	INSTRUKCJE BEZPIECZNOŚCIOWE	62																																																																															
de	WICHTIGE SICHERHEITSHINWEISE	64																																																																															
de	DÖLÉDZTÉ REHEDÉCSENŐTÉ DÖMÖRÜCÁNA	68																																																																															
tr	VARİANTE İHAZİ	71																																																																															
ru	ИНСТРУКЦИИ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ	74																																																																															
uk	ІНСТРУКЦІЇ ПО ТЕХНІКІ БЕЗОПАСНОСТІ	77																																																																															
tr	VARİANTE İHAZİ	80																																																																															
ar	إرشادات الأمان	85																																																																															
fa	ارشاد ایمنی	86																																																																															
 <p>Lauben GLASS&GRILL AIR FRYER 3IN1 5500BG</p>	<p>Lauben Glass&Grill Air Fryer 3in1 5500BG: Benutzerhandbuch</p> <p>Entdecken Sie das Lauben Glass&Grill Air Fryer 3in1 5500BG. Dieses Handbuch bietet detaillierte Anleitungen zur sicheren Verwendung, Bedienung und Wartung Ihres multifunktionalen Küchengeräts.</p>																																																																																

User Manual of Product 1:
COSORI Lite 2.1-Quart Mini Air Fryer
Bake, Roast, Reheat, Space-saving & Low-oil Air Fryer
Dishwasher Safe Basket, 30 In-App Recipes, Sticker with 6
Reference Guide, White

[COSORI Lite 2.1-Quart Mini Air Fryer User Manual & Cooking Guide](#)

This comprehensive user manual for the COSORI Lite 2.1-Quart Mini Air Fryer details its 360° air circulation technology, cooking functions, safety guidelines, troubleshooting, and maintenance. Discover how to prepare healthy and delicious meals with ease.

Instant
VORTEX,
VORTEX PLUS
6 Quart Air Fryer Oven



[Instant Vortex Plus 6 Quart Air Fryer Oven User Manual](#)

Comprehensive user manual for the Instant Vortex Plus 6 Quart Air Fryer Oven, covering setup, operation, smart programs, safety, maintenance, and troubleshooting. Learn how to use your air fryer for healthy and delicious meals.