

- › [Best Choice Products](#) /
- › [Best Choice Products 4ft 3-Piece 2D Lighted Christmas Deer Family Set Instruction Manual \(Model SKY7208\)](#)

Best Choice Products SKY7208

Best Choice Products 4ft 3-Piece 2D Lighted Christmas Deer Family Set Instruction Manual

Model: SKY7208

INTRODUCTION

Thank you for choosing the Best Choice Products 4ft 3-Piece 2D Lighted Christmas Deer Family Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor holiday decoration. Please read these instructions thoroughly before use and retain them for future reference.



Image: The complete 4ft 3-Piece 2D Lighted Christmas Deer Family Set, featuring a buck, doe, and fawn, illuminated in a festive outdoor environment.

IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Use outdoors on a stable, flat surface.
- Secure the display to the ground with included stakes to prevent tipping or movement due to wind.
- Do not allow children to play on or near the display. This is a decorative item, not a toy.
- Unplug the display during inclement weather, such as heavy rain, snow, or strong winds, to prevent damage or electrical hazards.
- Keep the decoration away from flammable materials, including dry foliage, curtains, and other combustible items.
- Ensure all electrical connections are dry and protected from moisture.
- Follow all instructions for setup, operation, and storage carefully.
- Inspect the product for damage before each use. Do not use if wires are frayed or lights are broken.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1x Buck (Large Deer)
- 1x Doe (Medium Deer)
- 1x Fawn (Small Deer)
- 175x Pre-strung LED Lights (integrated into the deer frames)
- 3x Red Bows (for attachment)
- 12x Ground Stakes
- Zip Ties (for securing connections)
- 1x Storage Bag
- 3x 2-Prong Power Cords

ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. It is recommended to assemble the deer in the desired outdoor location.

1. Carefully remove all components from the packaging.
2. Unfold each deer figurine. The figurines are designed to be semi-flat for compact storage and will expand into their 2D shape.
3. Connect the various sections of each deer using the provided metal connectors and secure them with zip ties where indicated. Ensure all connections are firm.
4. Attach the red bows to each deer as desired, typically around the neck area.
5. Position the deer in your desired outdoor location.
6. Use the 12 ground stakes to firmly secure the base of each deer to the ground. This prevents movement and ensures stability, especially in windy conditions.
7. Connect the 2-prong power cords from each deer to a suitable outdoor-rated extension cord (not included). Ensure all connections are waterproof.

Easy Assembly & Storage

Semi-flat figurines are easy to disassemble and fit comfortably in the included storage bag



Image: Illustration of the easy assembly process, highlighting the semi-flat design and the included storage bag.

OPERATING INSTRUCTIONS

The Best Choice Products Deer Family Set is designed for simple operation.

1. Once assembled and securely staked, ensure all power cords are properly connected and protected from moisture.
2. Plug the main extension cord into a ground fault circuit interrupter (GFCI) protected outdoor electrical outlet.
3. The 175 LED lights will illuminate, providing a warm white glow.
4. To turn off the lights, simply unplug the unit from the electrical outlet.

175 LED Lights

 
This family comes pre-strung with warm white lights to bring your yard to life



Warm White
Lights



Environmentally
Friendly



2-Prong
Plugs x3

Image: Detail of the 175 warm white LED lights and their 2-prong power connections.

MAINTENANCE

Proper maintenance ensures the longevity of your deer family set.

- **Cleaning:** Gently wipe the figurines with a soft, damp cloth to remove dirt or debris. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all electrical cords, connections, and light bulbs for any signs of wear, damage, or loose connections. Replace any damaged parts immediately.
- **Weather Protection:** While designed to be weather-friendly, prolonged exposure to extreme weather conditions may affect durability. Consider bringing the decoration indoors during severe storms or heavy snowfall.
- **Storage:** At the end of the holiday season, carefully disassemble the deer figurines. Store them in the provided storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

Weather-Friendly



Wind Resistant



Water Resistant



12x U-Stakes



Image: Features highlighting the weather-friendly design and included ground stakes for stability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Power cord not plugged in, loose connection, tripped GFCI, faulty bulb.	<ul style="list-style-type: none">• Ensure the power cord is securely plugged into a working GFCI outlet.• Check all connections between the deer and the extension cord.• Reset the GFCI outlet if it has tripped.• Inspect individual bulbs for damage. Replace if necessary (if replaceable).
Deer figurines are unstable or fall over.	Insufficient staking, uneven ground, strong winds.	<ul style="list-style-type: none">• Ensure all 12 ground stakes are fully inserted into the ground.• Relocate the deer to a more level surface.• Consider additional anchoring in extremely windy conditions.

Problem	Possible Cause	Solution
Some lights are out.	Loose bulb, damaged wire, individual bulb failure.	<ul style="list-style-type: none">• Check and tighten any loose bulbs.• Inspect the wiring for any visible damage.• If individual bulbs are replaceable, replace the faulty ones.

SPECIFICATIONS

Model Number	SKY7208
Brand	Best Choice Products
Number of Pieces	3 (Buck, Doe, Fawn)
Light Type	LED
Number of Lights	175
Light Color	Warm White
Frame Material	Wire, Fabric
Buck Dimensions (L x W x H)	28" x 8.5" x 48"
Doe Dimensions (L x W x H)	28" x 8.5" x 43"
Fawn Dimensions (L x W x H)	21.5" x 5" x 28"
Total Item Weight	7 Pounds
Voltage	120 Volts
UPC	842957136414

Product Dimensions



 
 

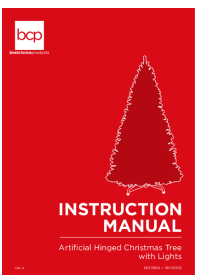 
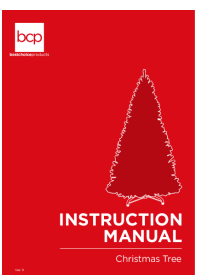 
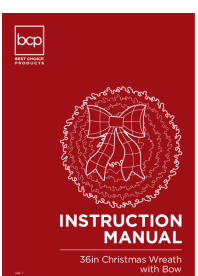 
Image: Detailed product dimensions for each deer and the storage bag.


WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official Best Choice Products website. Keep your proof of purchase for any warranty claims.

© 2024 Best Choice Products. All rights reserved.

Related Documents - SKY7208

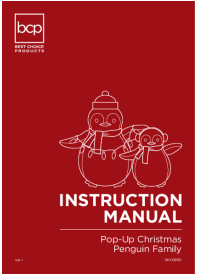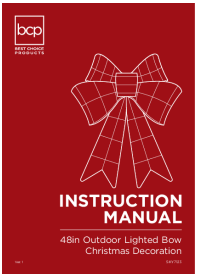	<p>Best Choice Products SKY6890 Pop-Up Christmas Penguin Family Instruction Manual</p> <p>Detailed instruction manual for assembling and using the Best Choice Products SKY6890 Pop-Up Christmas Penguin Family decoration. Includes safety notices, parts list, hardware, step-by-step assembly instructions, and warranty information.</p>
	<p>Best Choice Products 48in Outdoor Lighted Bow Christmas Decoration Instruction Manual SKY7123</p> <p>Official instruction manual for the Best Choice Products 48in Outdoor Lighted Bow Christmas Decoration (Model SKY7123). Includes assembly steps, safety warnings, and warranty information.</p>
	<p>Best Choice Products 24-Inch Outdoor Lighted Bow Christmas Decoration Instruction Manual</p> <p>Comprehensive instruction manual for the Best Choice Products 24-inch Outdoor Lighted Bow Christmas Decoration, covering models SKY7123, SKY8517, and SKY8516. Includes detailed assembly steps, safety warnings, product information, and warranty details.</p>
	<p>Best Choice Products Artificial Hinged Christmas Tree with Lights Instruction Manual (SKY2854, SKY5003)</p> <p>Official instruction manual for the Best Choice Products Artificial Hinged Christmas Tree with Lights (models SKY2854 and SKY5003). Includes assembly, setup, light functions, troubleshooting, cleaning, storage, and warranty information.</p>
	<p>Best Choice Products Christmas Tree Instruction Manual - Version 9</p> <p>Comprehensive guide for assembling, fluffing, and maintaining Best Choice Products artificial Christmas trees. Includes safety warnings, parts identification, assembly steps for Type A and Type B trees, light replacement, cleaning, storage, and warranty information.</p>
	<p>Best Choice Products Christmas Wreath Instruction Manual</p> <p>This instruction manual from Best Choice Products provides assembly, care, and warranty information for their 36-inch, 48-inch, and 60-inch Christmas Wreaths, including pre-lit options. Learn how to set up and maintain your holiday decoration.</p>

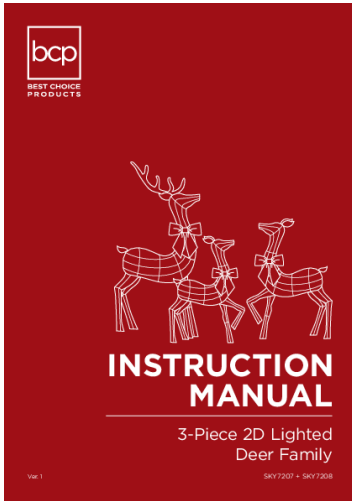 


[\[pdf\]](#) User Manual Instructions Warranty Catalog

SKY7207 7208 Instruction v1 Download Manual 3 Piece Lighted 2D Christmas Deer Set Outdoor Decor w 175 LED Lights Best Choice Products ifvtc4lv2oxo3fexumxq images salsify image upload s 3sHCADQ7 |||

INSTRUCTION MANUAL 3-Piece 2D Lighted Deer Family Ver. 1 SKY7207 **SKY7208**

As shoppers, we re always trying to find the perfect balance between quality value. At BCP, we believe we ve achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers guarantee...

 lang:en **score:41** filesize: 276.4 K page_count: 12 document date: 2023-06-07

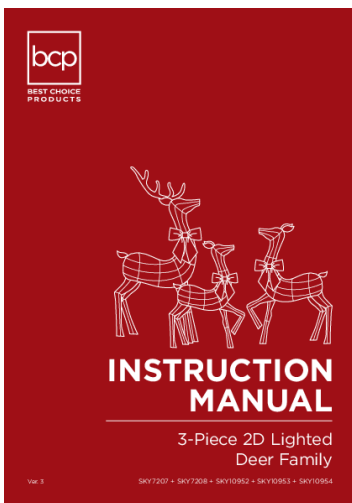

[\[pdf\]](#) User Manual Instructions Warranty Catalog

898 Instruction v3 Download Manual3 Piece Lighted 2D Christmas Deer Set Outdoor Decor w 175 LED Lights Best Choice Products396cd662f4375fb0f0b30409be6dd899b1c41038images salsify image upload s Zti59PjN 396cd662f4375fb0f0b30409be6dd899b1c41038 |||

INSTRUCTION MANUAL 3-Piece 2D Lighted Deer Family Ver. 3 SKY7207 **SKY7208**

SKY10952 SKY10953 SKY10954 As shoppers, we re always trying to find the perfect balance between quality value. At BCP, we believe we ve achieved that. Our diverse catalog of everyday essentials is tailored espec...

lang:en **score:28** filesize: 306.4 K page_count: 12 document date: 2025-06-13