

[Manuals.plus](#) /

> [Whirlpool](#) /

> Whirlpool Water Dispenser with Ice Maker Model WK0260B User Manual

Whirlpool WK0260B

Whirlpool Water Dispenser with Ice Maker

Model: WK0260B - User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the appliance. Keep this manual for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury.

- Do not operate any appliance with a damaged cord or plug.
- Do not immerse cord, plug, or any part of the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Use only potable water in this dispenser.

2. PRODUCT OVERVIEW

The Whirlpool WK0260B is an elegant water dispenser featuring a hidden water bottle compartment and an integrated ice maker. It provides cold water and produces up to 12 kg of ice per day, making it ideal for various spaces.



Figure 2.1: Front view of the Whirlpool WK0260B Water Dispenser, showcasing its sleek black design and touch control panel.



Figure 2.2: Side view of the water dispenser, highlighting its compact profile suitable for various room layouts.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the dispenser from its packaging. Inspect for any shipping damage. Retain packaging materials for future transport if needed.

3.2 Placement

Place the dispenser on a flat, stable surface. Ensure there is at least 10 cm (4 inches) of clearance from walls on all sides for proper ventilation. Avoid direct sunlight or heat sources.

3.3 Initial Cleaning

Before first use, clean the water reservoir and all removable parts with mild soap and water. Rinse thoroughly.

3.4 Water Bottle Installation

1. Open the lower door of the dispenser.
2. Place a compatible water bottle (up to 27 cm diameter) into the compartment.
3. Insert the water pump tube into the bottle opening, ensuring a secure fit.
4. Close the door.



Figure 3.1: The water dispenser with its lower door open, revealing the hidden compartment designed to house a standard water bottle.



Figure 3.2: A view of the water dispenser with a water bottle correctly installed in its hidden compartment, ready for operation.

3.5 Power Connection

Plug the power cord into a grounded electrical outlet. Allow the unit to stand for at least 30 minutes before turning it on to allow refrigerants to settle.

4. OPERATING INSTRUCTIONS

4.1 Control Panel

The dispenser features a touch electronic control panel for easy operation. Icons indicate functions such as cold water dispensing, ice making, and status indicators.

4.2 Dispensing Cold Water

1. Place a glass or cup under the cold water spout.

2. Press the cold water dispense button on the touch panel.
3. Release the button once the desired amount of water is dispensed.



Figure 4.1: The water dispenser actively dispensing cold water into a glass, demonstrating its primary function.

4.3 Using the Ice Maker

The integrated ice maker produces ice cubes from a separate water tank. Ensure the ice maker's water tank is filled for optimal performance.

1. Ensure the ice maker function is activated via the control panel.
2. Place a container or glass under the ice dispensing chute.
3. Press the ice dispense button.
4. Release the button when sufficient ice has been dispensed.



Figure 4.2: The water dispenser dispensing ice cubes into a glass, illustrating the functionality of its integrated ice maker.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your water dispenser.

5.1 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.2 Cleaning the Drip Tray

The drip tray should be emptied and cleaned regularly to prevent overflow and bacterial growth. Remove the tray, wash with mild soap and water, rinse, and dry before replacing.

5.3 Cleaning the Water Tank and Lines

Periodically, it is recommended to clean the internal water tank and lines. Consult the manufacturer's website or a

qualified technician for detailed instructions on deep cleaning or descaling, especially if water quality issues arise.

5.4 Ice Maker Cleaning

The ice maker components should be cleaned periodically to ensure hygienic ice production. Refer to specific instructions for cleaning the ice maker's water tank and ice bin.

6. TROUBLESHOOTING

If you encounter issues with your dispenser, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No cold water	Dispenser not plugged in; Cold water function not activated; Water bottle empty; Cooling system malfunction.	Check power connection; Activate cold water function; Replace water bottle; Contact customer support.
Ice maker not producing ice	Ice maker water tank empty; Ice maker function off; Ambient temperature too high; Malfunction.	Fill ice maker water tank; Activate ice maker function; Ensure proper ventilation; Contact customer support.
Water tastes bad	New unit odor; Contaminated water bottle; Internal components need cleaning.	Flush system with fresh water; Use a new, clean water bottle; Perform thorough internal cleaning.
Unit is noisy	Normal compressor operation; Unit not level; Obstruction in fan.	This may be normal; Ensure unit is on a level surface; Check for obstructions around fan vents.

If the problem persists after attempting these solutions, please contact Whirlpool customer support.

7. SPECIFICATIONS

Detailed specifications for the Whirlpool WK0260B Water Dispenser with Ice Maker.

Model Number: WK0260B

Color: Black

Material: Plastic

Dimensions (D x W x H): 39prof. x 35,5an. x 111,5alt. centimeters (approx. 15.35 x 13.98 x 43.9 inches)

Ice Production Capacity: Up to 12 Kilograms per day

Compatible Bottle Diameter: Maximum 27 cm



Figure 7.1: Technical diagram showing the dimensions of the Whirlpool WK0260B Water Dispenser, including height, width, and depth measurements.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Whirlpool website. Keep your purchase receipt as proof of purchase.

8.1 Customer Support

If you require assistance, have questions, or need to report an issue, please contact Whirlpool customer support through their official channels. Contact details can typically be found on the product packaging, warranty card, or the Whirlpool official website.

Website: www.whirlpool.com

Phone: Refer to your regional Whirlpool support contact information.

© 2024 Whirlpool Corporation. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.