

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fulealfly](#) /

› [Fulealfly 4K Digital Camera Instruction Manual](#)

Fulealfly DC101

Fulealfly 4K Digital Camera Instruction Manual

Model: DC101

1. INTRODUCTION AND OVERVIEW

The Fulealfly DC101 4K Digital Camera is a versatile and compact device designed for both high-quality photography and video recording. Featuring a 48MP image sensor, 4K video capabilities, autofocus, anti-shake technology, and a convenient 180° flip screen, it is ideal for capturing everyday moments, vlogging, and travel. This manual provides detailed instructions to help you get the most out of your new camera.



Figure 1: Fuleaffly 4K Digital Camera with included accessories.

2. WHAT'S IN THE BOX

Upon opening your Fuleaffly DC101 package, please ensure all the following items are present:

- Camera Body
- 32GB SD Card
- Rechargeable Battery (x2)
- User Manual
- Lens
- Lens Cap
- HDMI Cable
- Charger
- Mini USB Cable
- Camera Bag
- Wrist Strap
- Cleaning Cloth



**Perfect Gift for Teens
Students, Adult Beginners
and Seniors**



Figure 2: Contents of the Fulealfly 4K Digital Camera package.


3. PRODUCT FEATURES

3.1 High-Resolution Imaging

Capture stunning detail with the 48MP image resolution and 8MP CMOS image sensor. The camera's autofocus ensures sharp images for both close-up shots and distant landscapes.

48MP HD Autofocus Digital Camera

Half-press the Shutter for Clear Photography

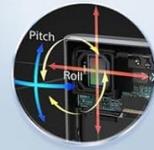

Anti-shake




16X Zoom



Technology

Ours: Far & Near Ultra-clear

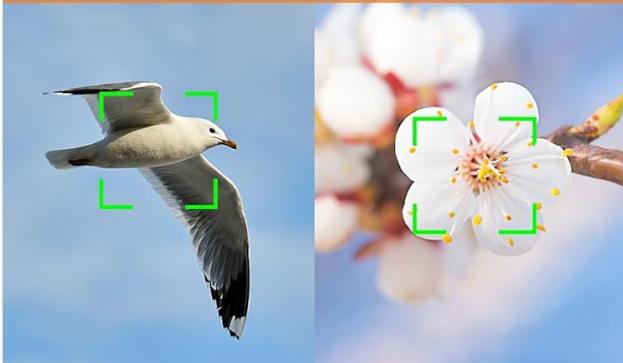

Others: Blurry



Figure 3: Demonstrating the 48MP HD autofocus capability.

3.2 4K Video Recording

Record smooth, anti-shake 4K videos. The pause function allows for seamless recording without creating multiple files, simplifying editing. Utilize time-lapse and slow-motion features for creative video effects.

4K Video Camera with Pause Function

Start Your Smooth Video Creation

2.7K

4K

The image features a black 4K video camera with a 52mm lens and a 180-degree flip screen. The screen displays a family scene with a pause icon. To the right are icons for Selfie, Pause, and Date stamp. The background is split into two panels: the left panel shows a man carrying a child on his shoulders, labeled '2.7K'; the right panel shows a woman carrying a child on her shoulders, labeled '4K'.

Figure 4: 4K video recording with pause function and selfie screen.

3.3 Vlogging and Webcam Functionality

The 180° flip screen is perfect for vlogging and self-recording. Connect the camera to your computer via USB to use it as a webcam for live streaming or video calls on various platforms.



Figure 5: Camera setup for vlogging and webcam use.

3.4 Portable Design with Flash

Weighing only 0.59 lbs and palm-sized, this compact camera is highly portable for travel. The built-in flash ensures clear photos and videos even in low-light conditions.

Portable Travel Camera

Easy to Carry and Durable

32GB SD card(180min+ video, 3200+ photos)

Portable

Compact

Long-life

Easy to Charge

Portable:0.59LBS
Compact:4.53"*2.75"*1.57"

Figure 6: The portable and compact design of the camera.

3.5 Additional Features

- **16X Digital Zoom:** Magnify distant subjects without losing clarity.
- **Time-lapse (2/5/10S):** Capture changes over time with customizable intervals.
- **3 Continuous Shooting:** Take a burst of photos for fast-moving subjects.
- **Beauty Mode:** Enhance portraits for a polished look.
- **Smile & Face Capture:** Automatically detect and capture smiles and faces.
- **Multiple Filter Options:** Apply creative filters directly to your photos and videos.
- **External Device Support:** Compatible with external tripods, microphones, and lenses (sold separately).



Figure 7: Visual representation of flash and anti-shake features.

4. SETUP

4.1 Battery Installation

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert the rechargeable battery, ensuring the correct orientation as indicated inside the compartment.
3. Close the battery compartment cover securely.
4. Fully charge the battery before first use using the provided charger and Mini USB cable.

4.2 SD Card Insertion

1. Locate the SD card slot, usually next to the battery compartment.
2. Insert the 32GB Micro SD card (or compatible 4-128GB Micro SD card) until it clicks into place.
3. It is recommended to format the SD card within the camera's settings before initial use to ensure optimal performance.

4.3 Initial Power On and Basic Settings

1. Press and hold the Power button to turn on the camera.
2. Follow the on-screen prompts to set the date, time, and language.
3. Adjust basic settings like image resolution (48M/44M/36M/24M/20M/16M) and video resolution (4K/2.7K/1080P FULL HD/720P HD) as desired.

5. OPERATING INSTRUCTIONS

5.1 Taking Photos

- **Power On:** Turn on the camera.
- **Framing:** Use the 3-inch flip screen to compose your shot.
- **Autofocus:** Half-press the shutter button to activate autofocus. The focus frame will appear on the screen.
- **Capture:** Fully press the shutter button to take the photo.
- **Flash:** Activate the built-in flash in low-light conditions via the camera settings.
- **Zoom:** Use the zoom controls to adjust the 16X digital zoom.

5.2 Recording Videos

- **Switch to Video Mode:** Select video mode from the camera's menu.
- **Start Recording:** Press the Record button to begin recording.
- **Pause/Resume:** Press the Record button again to pause recording. Press it once more to resume.
- **Stop Recording:** Press the Stop button to end the video recording.
- **Anti-Shake:** Ensure anti-shake is enabled in settings for smoother footage.

5.3 Using as a Webcam

1. Connect the camera to your computer using the Mini USB cable.
2. On the camera screen, select "PC Camera" mode.
3. Your computer should recognize the camera as a webcam. Select it in your video conferencing or streaming software.

5.4 Transferring Files

1. Connect the camera to your computer using the Mini USB cable.
2. On the camera screen, select "MSDC" mode.
3. The camera will appear as a removable disk drive on your computer.
4. Navigate to the DCIM folder to access your photos and videos. Copy them to your computer.
5. Alternatively, you can remove the Micro SD card and use a card reader to transfer files.

6. MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the lens and screen. Avoid abrasive materials or harsh chemicals.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. Fully charge batteries before long periods of non-use.
- **Storage:** When not in use, store the camera in its protective bag in a dry, dust-free environment.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera won't turn on	Low or uncharged battery; Incorrect battery insertion	Charge battery fully; Reinsert battery correctly
Poor image/video quality	Insufficient lighting; Dirty lens; Incorrect settings	Use flash or brighter environment; Clean lens; Adjust resolution/exposure settings
Cannot transfer files to computer	Incorrect USB mode selected; Loose cable connection	Select "MSDC" mode on camera; Ensure cable is securely connected; Try a different USB port
SD card error	Card not formatted; Incompatible card; Card full	Format card in camera; Use compatible Micro SD card (4-128GB); Delete old files or use new card

8. SPECIFICATIONS

Feature	Detail
Image Resolution	48MP (Max)
Video Resolution	4K (2160p)
Photo Sensor Technology	CMOS
Image Stabilization	Digital
Optical Zoom	16x
Display Screen	3-inch LCD, 180° Flip Screen
Flash Memory Type	Micro SD (Supports 4-128GB)
Connectivity	USB, HDMI
Item Weight	0.54 Pounds
Battery Type	Lithium Polymer (x2 included)

9. WARRANTY AND SUPPORT

The Fulealfly DC101 4K Digital Camera comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For technical support, warranty claims, or any questions regarding your product, please contact Fulealfly customer service. We aim to reply within 24 hours.

Please refer to the contact information provided on the product packaging or the official Fulealfly website for the most up-to-date support channels.