

[Manuals.plus](#) /

› [DIGIROOT](#) /

› Digiroot Universal Stylus Pen Instruction Manual (Model B0GSDX3LVM)

DIGIROOT B0GSDX3LVM

Digiroot Universal Stylus Pen Instruction Manual

 
Model: B0GSDX3LVM

1. PRODUCT OVERVIEW

The Digiroot Universal Stylus Pen is designed for precise interaction with various touchscreen devices. It features an LED power display, fast charging capabilities, and magnetic adsorption for convenient storage.

Precise and Smooth

Note: No palm rejection and no tilt Sensitivity

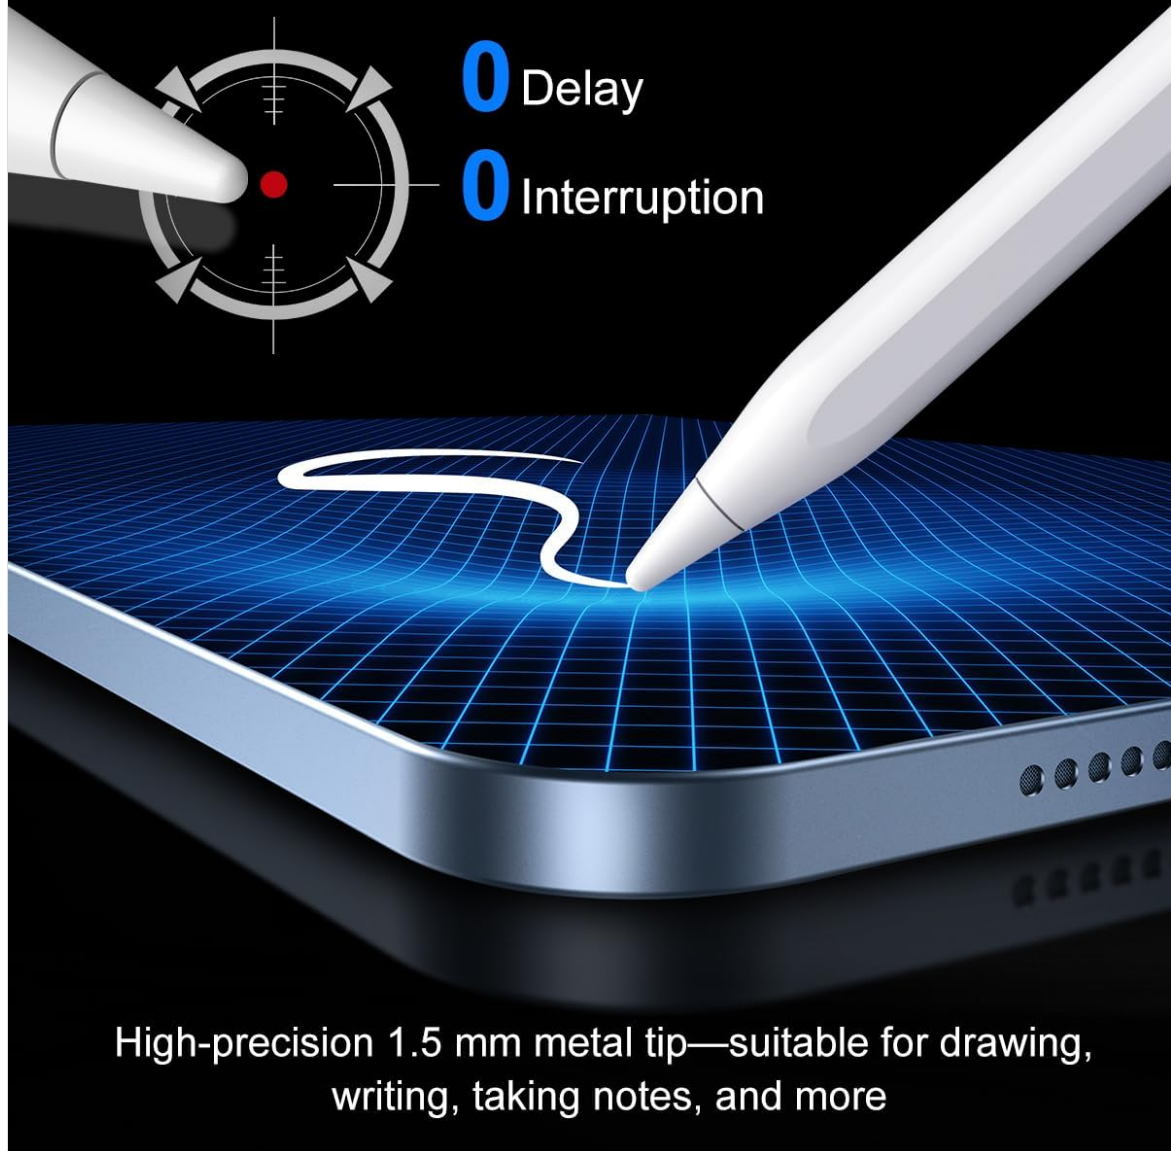

High-precision 1.5 mm metal tip—suitable for drawing, writing, taking notes, and more

Image: The Digiroot Universal Stylus Pen, shown with its packaging and three replacement tips.

Package Contents:

- 1 x Universal Stylus Pen
- 3 x Replaceable Pen Tips
- 1 x Type-C Data Cable
- 1 x Dust Cover

2. SETUP AND CHARGING

2.1 Charging the Stylus Pen

Before initial use, fully charge the stylus pen. The pen features an LED digital display that shows the remaining battery life.

- Connect the provided Type-C data cable to the charging port on the stylus pen.
- Connect the other end of the cable to a compatible USB power source.
- A full charge takes approximately 15 minutes, providing up to 10 hours of use.
- The LED display will indicate charging status and battery percentage.



Image: The stylus pen connected to a USB-C charging cable, illustrating the fast charging feature and battery life.

2.2 Powering On/Off

The stylus pen supports one-click operation and does not require Bluetooth pairing.

- To turn on: Press the button located on the side of the pen. The LED display will illuminate.
- To turn off: Press the button again.

- The pen will automatically shut down after 5 minutes of inactivity to conserve battery.



Image: A hand demonstrating how to press the power button on the stylus. The image also shows the three replaceable tips and instructions for tip removal and installation.

2.3 Replacing Pen Tips

The stylus comes with three replaceable POM tips for extended use.

- To remove: Gently turn the existing pen tip counterclockwise until it detaches.
- To install: Align a new tip and turn it clockwise until it is securely fastened.

2.4 Magnetic Adsorption

The stylus can be magnetically attached to compatible devices for easy storage and portability.

Magnetic Adsorption

Easy to store and carry

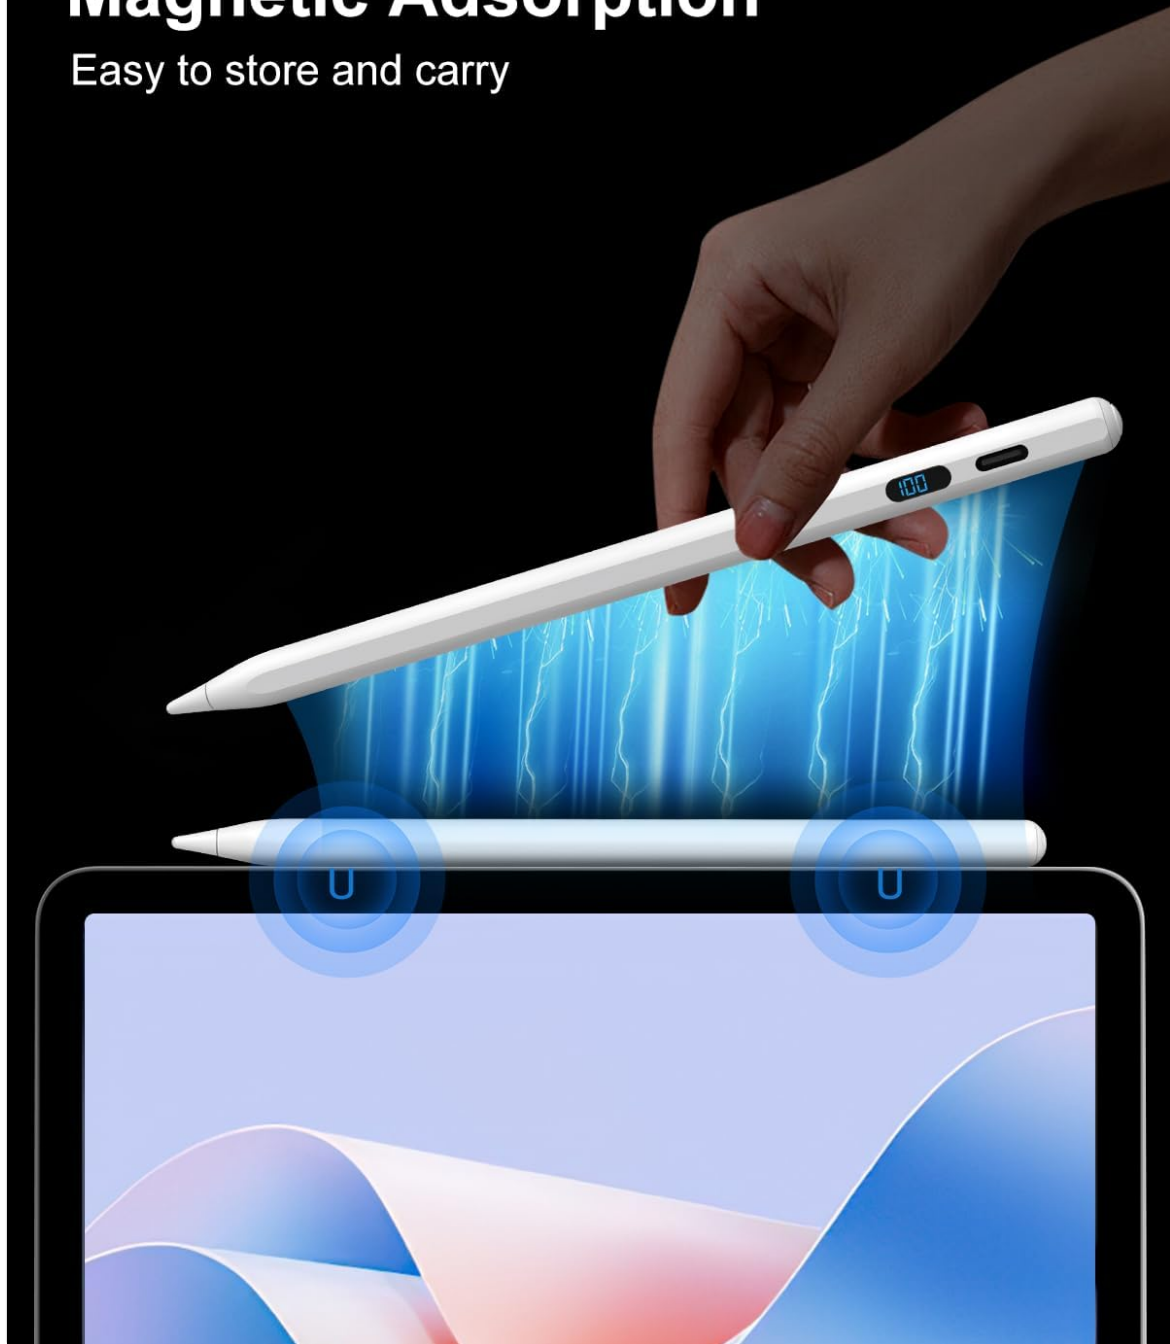 


Image: The stylus pen shown magnetically adhering to the side of a tablet, demonstrating its convenient storage feature.

Note: Magnetic adsorption is only compatible with devices that have magnetic interfaces. This stylus does not support wireless charging.

3. OPERATING INSTRUCTIONS

3.1 Device Compatibility

The Digiroot Universal Stylus Pen is compatible with a wide range of touchscreen devices.

- **Compatible Devices:** iPhone (XR, XS, XS Max, 11, 12, 13, 14, 15, 16, 17, SE), Samsung Galaxy (S9, S10, S20, S21, S22, S23, S24, S25, S26, A14, A15, A24, A25, A26, A34, A35, A36,

A52, A53, A54, A55, A56), Motorola (G Stylus, G Power, Edge 50, Edge 70 Pro, Razr Ultra), Nintendo Switch, Switch 2, and other Android/HarmonyOS smartphones and tablets.

- **Not Compatible With:** iPad, Microsoft Surface devices, Amazon Fire, Kindle, Chromebook, or Samsung EMR screens.

Universal compatibility

Supports iPhone&Android Touchscreen Devices&
Switch 2&Nintendo Switch



Note: The stylus pen is not compatible with Microsoft Surface devices, Apple iPad, Windows computers, Microsoft tablets, or Amazon Kindle.

Image: The stylus pen positioned among a variety of compatible devices, including smartphones, tablets, and a Nintendo Switch, illustrating its universal compatibility.

3.2 Precision and Responsiveness

The 1.2 mm POM tip provides pixel-level accuracy for writing and drawing.

- Experience high responsiveness with no breakpoints or delays.
- Suitable for writing small text, drawing fine lines, and general navigation.

Note: This stylus does not support palm rejection or pressure sensitivity.

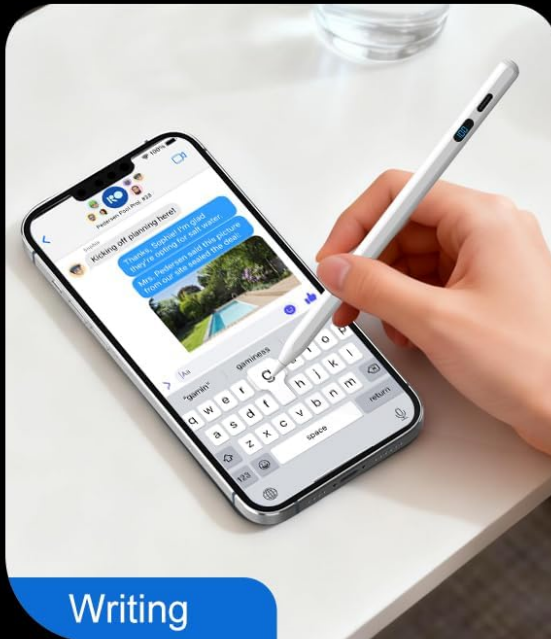 


Image: The stylus pen drawing a smooth line on a tablet screen, highlighting its precision and lack of delay or interruption.

3.3 General Usage

The stylus can be used for various tasks across compatible devices.

Wide Range of Use



 
Writing



Playing



Working

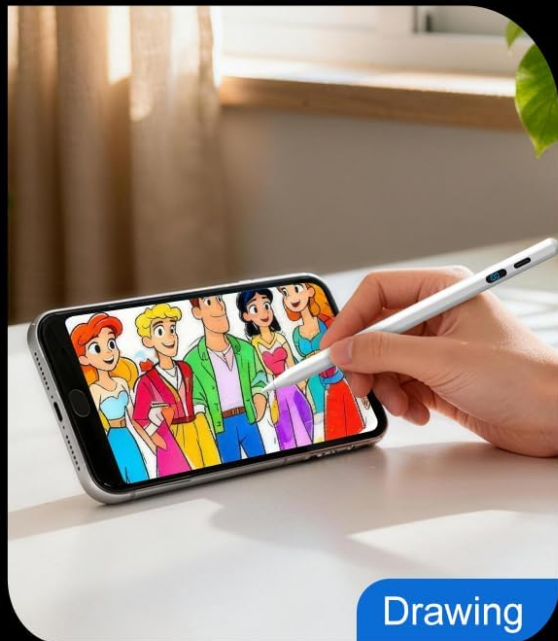

Drawing

Image: A collage of four scenarios demonstrating the stylus in use: writing on a smartphone, playing a game on a Nintendo Switch, working on a tablet, and drawing on a smartphone.

Watch this video for a demonstration of the Digiroot Stylus Pen in action:

Your browser does not support the video tag.

Video: An official product video from Digiroot-US demonstrating the features and usage of the stylus pen with various devices.

4. MAINTENANCE

4.1 Cleaning

- Use a soft, dry cloth to clean the body of the stylus pen.
- For the pen tip, gently wipe with a lint-free cloth. Avoid using harsh chemicals or abrasive materials.

4.2 Tip Care

- Inspect the pen tip regularly for wear and tear.
- Replace the tip if it becomes damaged or less responsive to maintain optimal performance. Refer to section 2.3 for tip replacement instructions.

5. TROUBLESHOOTING

5.1 Stylus Not Responding

- **Check Battery:** Ensure the stylus pen is sufficiently charged. Refer to the LED display for battery level.
- **Power On:** Confirm the pen is turned on by pressing the power button.
- **Device Compatibility:** Verify that your device is listed as compatible in section 3.1.
- **Screen Condition:** Ensure your device's screen is clean and free of debris.
- **Restart Device:** Sometimes, restarting your touchscreen device can resolve connectivity issues.

5.2 Charging Issues

- **Cable Check:** Ensure the Type-C data cable is securely connected to both the pen and the power source.
- **Power Source:** Try a different USB power adapter or port.
- **Cable Damage:** Inspect the charging cable for any signs of damage. Use the original cable or a certified replacement.

6. SPECIFICATIONS

Feature	Detail
Brand	DIGIROOT
Model Number (ASIN)	B0GSDX3LVM
Color	White
Material	Aluminum
Item Dimensions (L x W x H)	7.1 x 3.2 x 0.7 inches
Battery Type	1 Nonstandard Battery (included)
Charging Time	Approx. 15 minutes for 10 hours use

Automatic Shutdown	After 5 minutes of inactivity
Tip Material	POM (1.2 mm)

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Digiroot Stylus Pen comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For further assistance, technical support, or warranty inquiries, please contact Digiroot customer service through the retailer's platform or visit the official Digiroot website.