

hejhncii RM-014S+

Hejhncii Universal Remote Control RM-014S+ User Manual



Model: RM-014S+

1. INTRODUCTION

This user manual provides comprehensive instructions for the Hejhncii Universal Remote Control RM-014S+. Designed for LCD/LED Smart TVs, this remote offers a user-friendly experience for controlling various television and media devices. Please read this manual carefully before use to ensure proper operation and to maximize the remote's capabilities.



Easy To Set Up

1. Setting with Brand:

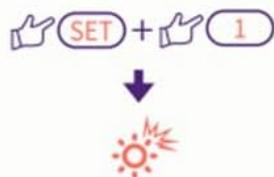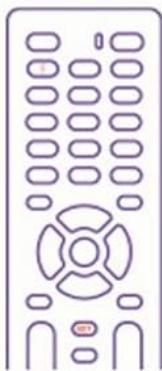


SET+"1"	SET+"2"	SET+"3"	SET+"4"
LG	SONY	SAMSUNG	SHARP
SET+"5"	SET+"6"	SET+"7"	SET+"8"
Panasonic	TOSHIBA	PHILIPS	Haier
SET+"9"	SET+"0"	SET+"INFO"	SET
HITACHI & SANYO	TCL & KONKA	AOC	OTHER BRAND


2. Set up with code:

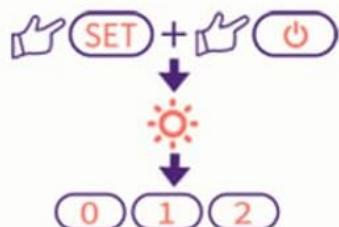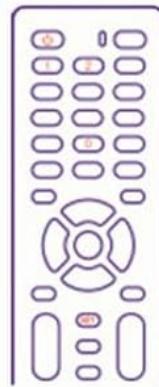

3、One-click search:

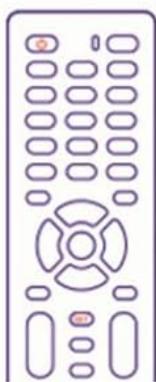

4. One-to-one search:

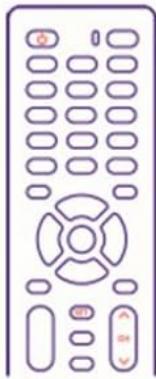

5. Automatic search:

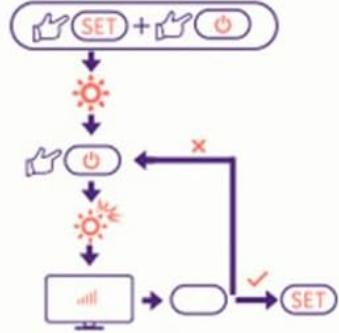
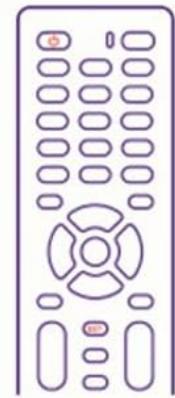


Figure 1: Front and back view of the RM-014S+ Universal Remote Control, showing its overall design and button layout.

2. KEY FEATURES

- **Universal Compatibility:** Controls a wide range of LCD/LED Smart TVs.
- **User-Friendly Design:** Intuitive button layout for easy navigation.
- **Dedicated Hot Keys:** Quick access to popular streaming applications like Netflix and YouTube.
- **Robust Chip Function:** Engineered for long service life and reliable contact.
- **Multiple Setup Methods:** Supports brand-specific setup, code entry, one-click search, one-to-one search, and automatic search.
- **Battery Memory:** Retains settings even after battery replacement.

Original Function

Streaming APPs Hot Keys



Figure 2: The RM-014S+ remote in use, highlighting its original functions and dedicated hot keys for streaming applications.

Chip Function

Long service life, excellent contact



Long Stand
by Time



Sensitive



Intelligent
Protection



Anti-corrosion

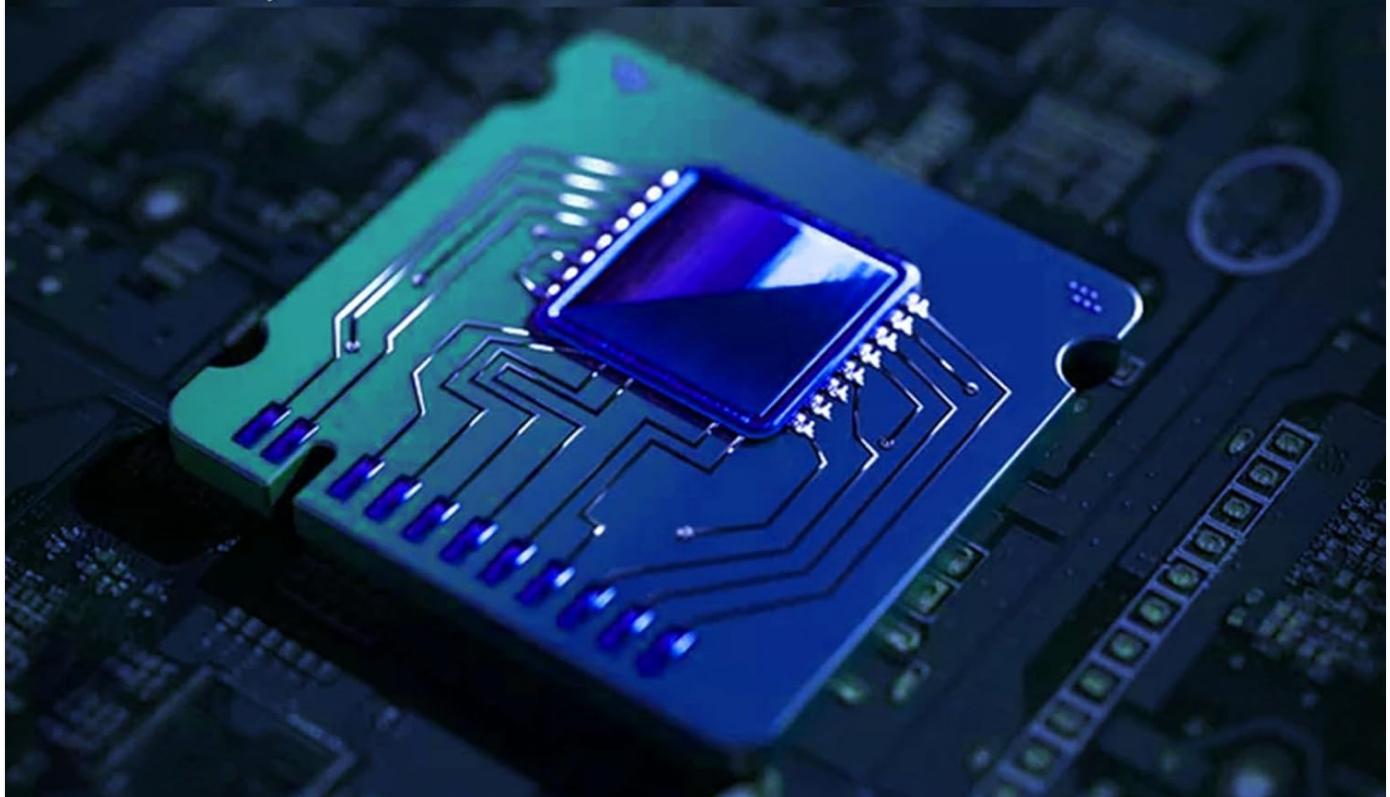


Figure 3: Illustration of the remote's internal chip, emphasizing features like long standby time, sensitivity, intelligent protection, and anti-corrosion properties.



Figure 4: Visual representation of the remote's core features, including support for LCD/LED, stable operation, battery memory, and Smart TV functionality.

3. SETUP INSTRUCTIONS

The RM-014S+ universal remote offers several methods for setup to ensure compatibility with your television. Please follow one of the methods below.





Figure 5: Visual guide detailing the five easy setup methods for the RM-014S+ remote.

3.1. Setting with Brand

1. Ensure your TV is turned on.

2. Press and hold the **SET** button on the remote.
3. While holding **SET**, press the corresponding number button for your TV brand (e.g., 1 for LG, 2 for Sony, 3 for Samsung, 4 for Sharp, 5 for Panasonic, 6 for Toshiba, 7 for Philips, 8 for Haier, 9 for Hitachi/Sanyo, 0 for TCL/Konka, CH.LIST for AOC, P.MODE for Other Brand).
4. Release both buttons. The remote should now control your TV.

3.2. Set Up with Code

1. Turn on your TV.
2. Press and hold the **SET** button.
3. While holding **SET**, press the **POWER** button. The indicator light on the remote will turn on.
4. Enter the 3-digit code for your TV brand (refer to the code list, usually provided with the remote or found online).
5. After entering the code, the indicator light will turn off. Test the remote. If it doesn't work, try another code for your brand.

3.3. One-Click Search

1. Turn on your TV.
2. Press and hold the **SET** button.
3. While holding **SET**, press the **POWER** button. The indicator light will turn on.
4. Point the remote at the TV and repeatedly press the **POWER** button (or **VOL+**) slowly until the TV turns off or the volume changes.
5. Once the TV responds, immediately press the **SET** button to save the code. The indicator light will turn off.

3.4. One-to-One Search

1. Turn on your TV.
2. Press and hold the **SET** button.
3. While holding **SET**, press the **POWER** button. The indicator light will turn on.
4. Point the remote at the TV and repeatedly press the **VOL+** button slowly until the volume changes on the TV.
5. Once the TV responds, immediately press the **SET** button to save the code. The indicator light will turn off.

3.5. Automatic Search

1. Turn on your TV.
2. Press and hold the **SET** button.
3. While holding **SET**, press the **POWER** button. The indicator light will turn on.
4. Release both buttons. The remote will now automatically search for the correct code. The indicator light will flash.
5. When the TV turns off or responds, immediately press the **SET** button to stop the search and save the code.

4. OPERATING INSTRUCTIONS

Once the remote is successfully set up with your TV, you can use its various functions.

Button	Function
POWER	Turns the TV on or off.

Button	Function
MUTE	Mutes or unmutes the TV sound.
0-9 (Number Pad)	Direct channel selection.
VOL +/-	Adjusts the volume up or down.
CH +/-	Changes the channel up or down.
Navigation (Up, Down, Left, Right, OK)	Navigates menus and confirms selections.
MENU	Opens the TV's main menu.
SOURCE	Selects input source (HDMI, AV, etc.).
RETURN / EXIT	Goes back to the previous screen or exits a menu.
NETFLIX / YouTube (Hot Keys)	Direct access to specified streaming applications.

5. MAINTENANCE

5.1. Battery Replacement

The remote control requires two AAA batteries (not included).

1. Open the battery compartment cover on the back of the remote.
2. Remove the old batteries.
3. Insert two new AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

Note: The remote features battery memory, so settings should be retained after battery replacement.





Figure 6: Back view of the RM-014S+ remote control, illustrating the battery compartment cover for battery replacement.

5.2. Cleaning

To clean the remote, wipe it with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the remote's surface or internal components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Remote does not work.	Batteries are dead or inserted incorrectly.	Replace batteries, ensuring correct polarity.
Remote does not work.	Remote is not programmed correctly for your TV.	Repeat the setup process (Section 3) using a different method or code.
Remote works for some functions but not others.	Partial code match or specific functions not supported by the universal code.	Try another setup code or method. Some advanced TV functions may not be universally supported.
Indicator light does not turn on during setup.	Batteries are low or dead.	Replace batteries.

7. SPECIFICATIONS

- Model:** RM-014S+
- Brand:** Hejhncii
- Connectivity Technology:** Infrared (IR)
- Compatible Devices:** Television, Set Top Box, Audio/Video Receiver
- Max Number of Supported Devices:** 1 (at a time, universal for many brands)
- Special Feature:** Universal compatibility for LCD/LED Smart TVs
- Power Source:** 2 x AAA Batteries (not included)
- Manufacturer:** YueQiaO

For further assistance, please contact Hejhncii customer support.