

manuals.plus /

› [soges](#) /

› [soges Electric Height Adjustable Desk User Manual - Model EU1-10NBZYELT-160YEU-TC](#)

soges EU1-10NBZYELT-160YEU-TC

soges Electric Height Adjustable Desk User Manual

Model: EU1-10NBZYELT-160YEU-TC

INTRODUCTION

Thank you for choosing the soges Electric Height Adjustable Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read these instructions carefully before use and retain them for future reference.



An overview of the soges Electric Height Adjustable Desk, showcasing its spacious teak desktop and white frame, set up with multiple computer monitors and office accessories.

SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please observe the following warnings:

- **Maximum Weight Capacity:** Do not exceed the maximum weight capacity of 80 kg (176 lbs) on the desktop. Overloading can cause instability and damage.
- **Level Surface:** Always ensure the desk is placed on a flat, stable, and level surface to prevent tipping or uneven operation.
- **Finger Safety:** Exercise caution when operating the electric motor. Keep fingers and other body parts clear of moving parts to avoid pinching or injury.
- **Children and Pets:** Keep children and pets away from the desk during operation to prevent accidents.
- **Power Cord:** Ensure the power cord is not pinched or damaged. Do not operate the desk with a damaged cord or plug.
- **Liquid Spills:** Avoid spilling liquids on the control panel or motor components. In case of a spill, immediately unplug the desk and allow it to dry completely before resuming use.
- **Maintenance:** Do not attempt to disassemble or repair the motor or control system yourself. Contact qualified service

personnel for repairs.

PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desktop sections (Teak)
- Desk legs (2)
- Foot pads (4)
- Crossbars and side plates
- Transmission rod
- Control panel
- Motor and power adapter
- Cable management tray
- Headphone hook
- All necessary screws and tools

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your soges Electric Height Adjustable Desk. It is recommended to have two people for assembly.

1. **Prepare the Desktop:** Lay the desktop sections upside down on a soft, clean surface to prevent scratches.
2. **Attach Side Plates:** Secure the side plates to the desk legs using the provided screws.
3. **Assemble Crossbars:** Connect the crossbars between the two desk legs.
4. **Install Transmission Rod:** Insert the transmission rod to connect the two lifting mechanisms within the frame.
5. **Attach Desk Legs to Desktop:** Carefully align the assembled frame with the pre-drilled holes on the underside of the desktop. Secure the frame to the desktop using the appropriate screws.
6. **Install Control Panel:** Mount the smart control panel to the underside of the desktop in the designated area.
7. **Connect Wiring:** Connect the motor and control panel cables to the power adapter. Ensure all connections are secure.
8. **Attach Cable Management and Headphone Hook:** Install the cable management tray and headphone hook to the underside of the desk as desired.
9. **Final Check:** Double-check all screws and connections to ensure they are tight and secure.

Your browser does not support the video tag.

This video demonstrates the assembly process for a similar height-adjustable desk model, providing a visual guide for installation.



An image showing the underside of the desk, highlighting the cable management tray and headphone hook for a tidy workspace.

OPERATING INSTRUCTIONS

Your soges Electric Height Adjustable Desk features a smart control panel for easy height adjustments and memory functions.

Height Adjustment

 
- **Raise Desk:** Press and hold the **Up Arrow (^)** button to raise the desk to your desired height.
- **Lower Desk:** Press and hold the **Down Arrow (v)** button to lower the desk to your desired height.
- The LED display on the control panel will show the current height in centimeters.

Memory Presets

The desk allows you to save up to four preferred height settings for quick adjustments.

- **Save a Preset:** Adjust the desk to your desired height. Press the **Memory (M)** button, then immediately press one of the number buttons (**1, 2, 3, or 4**). The current height will be saved to that preset.

- **Recall a Preset:** Simply press the corresponding number button (1, 2, 3, or 4) to automatically move the desk to the saved height.

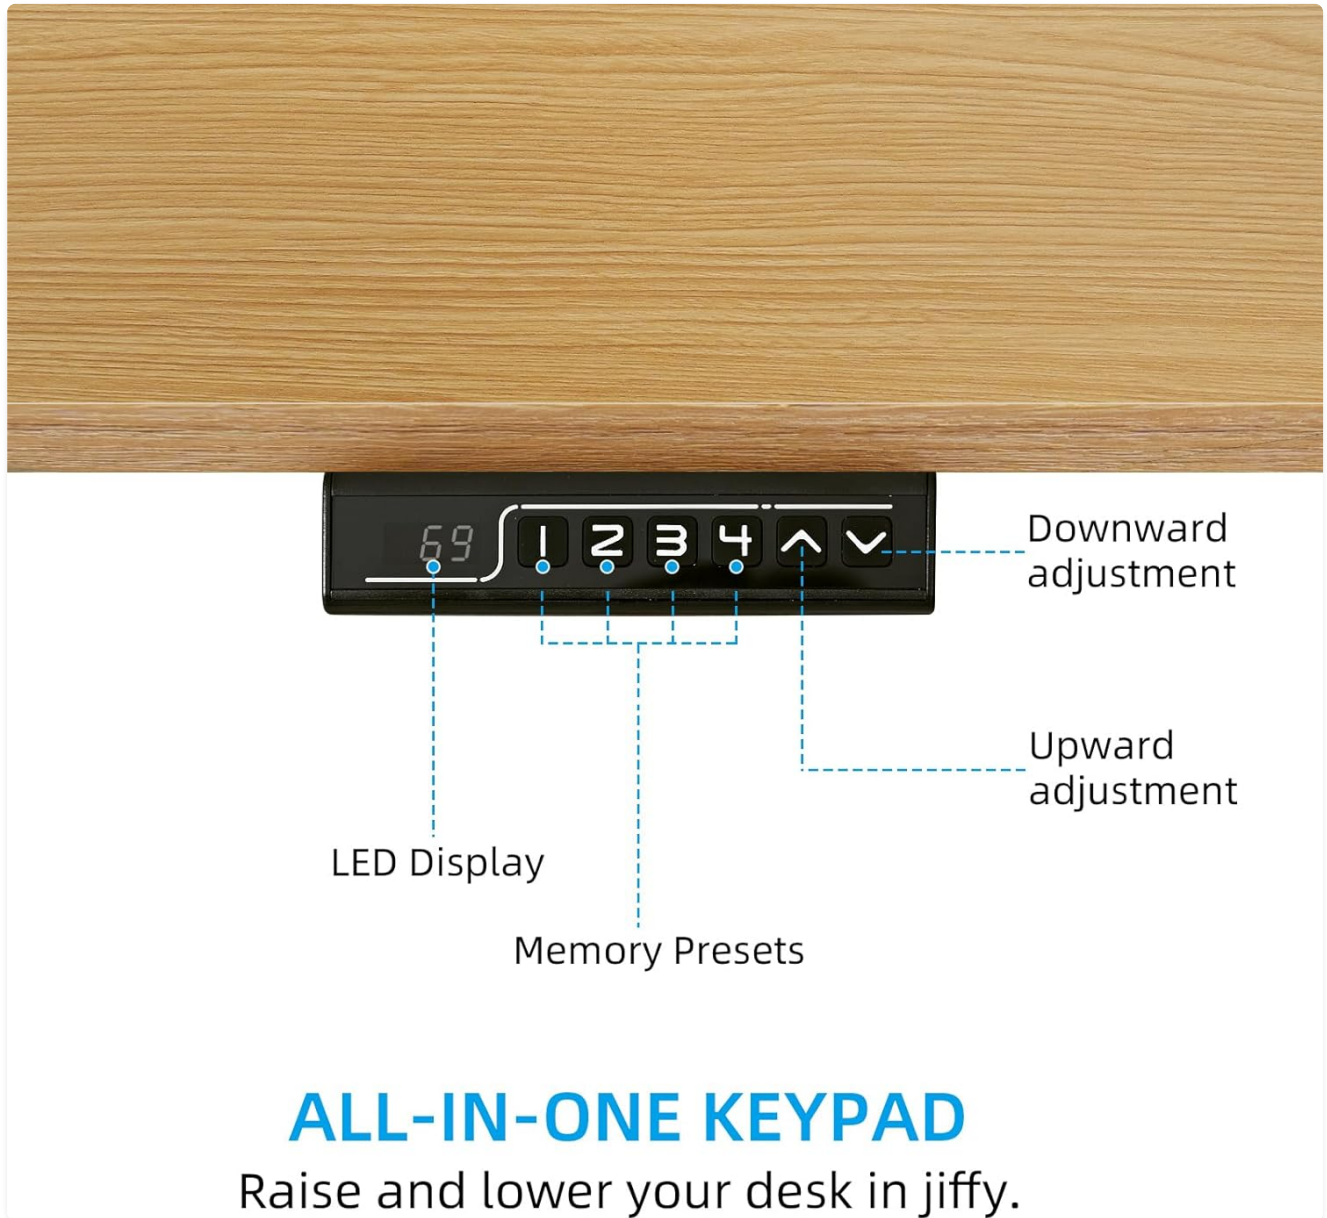

A detailed view of the desk's smart control panel, featuring an LED display, memory presets (1, 2, 3, 4), and up/down adjustment buttons.



 
This image highlights the desk's ability to switch between sitting and standing positions, showing two desks at different heights. A close-up of the control panel is also visible.

FEATURES

The soges Electric Height Adjustable Desk is designed with several features to enhance your workspace:

- **Robust Construction:** The desk is built with a solid spliced board and a sturdy metal frame, ensuring durability and stability. The high-quality motor mechanism provides smooth height adjustment and low noise operation.
- **Spacious Desktop:** The 160cm x 60cm desktop offers ample space for monitors, keyboards, mice, and other office accessories, suitable for home, office, conference rooms, schools, and libraries. Maximum load capacity is 80kg.
- **Electric Height Adjustment:** The desk's height can be adjusted electrically from 73 cm to 120 cm at a speed of 25mm/s. Simply press a button to raise or lower the desktop to your preferred height.
- **All-in-One Smart Keypad:** The integrated smart keypad allows you to reserve four common heights (e.g., sitting, standing, bed height). The exact desk height is displayed on an LED screen, which automatically turns off when stationary to conserve power.
- **Integrated Cable Management:** Features two wire grommets on the desktop and a cable management tray underneath to help keep your workspace tidy and organized.

- **Headphone Hook:** A convenient headphone hook is included on the side of the desk for easy storage and access.

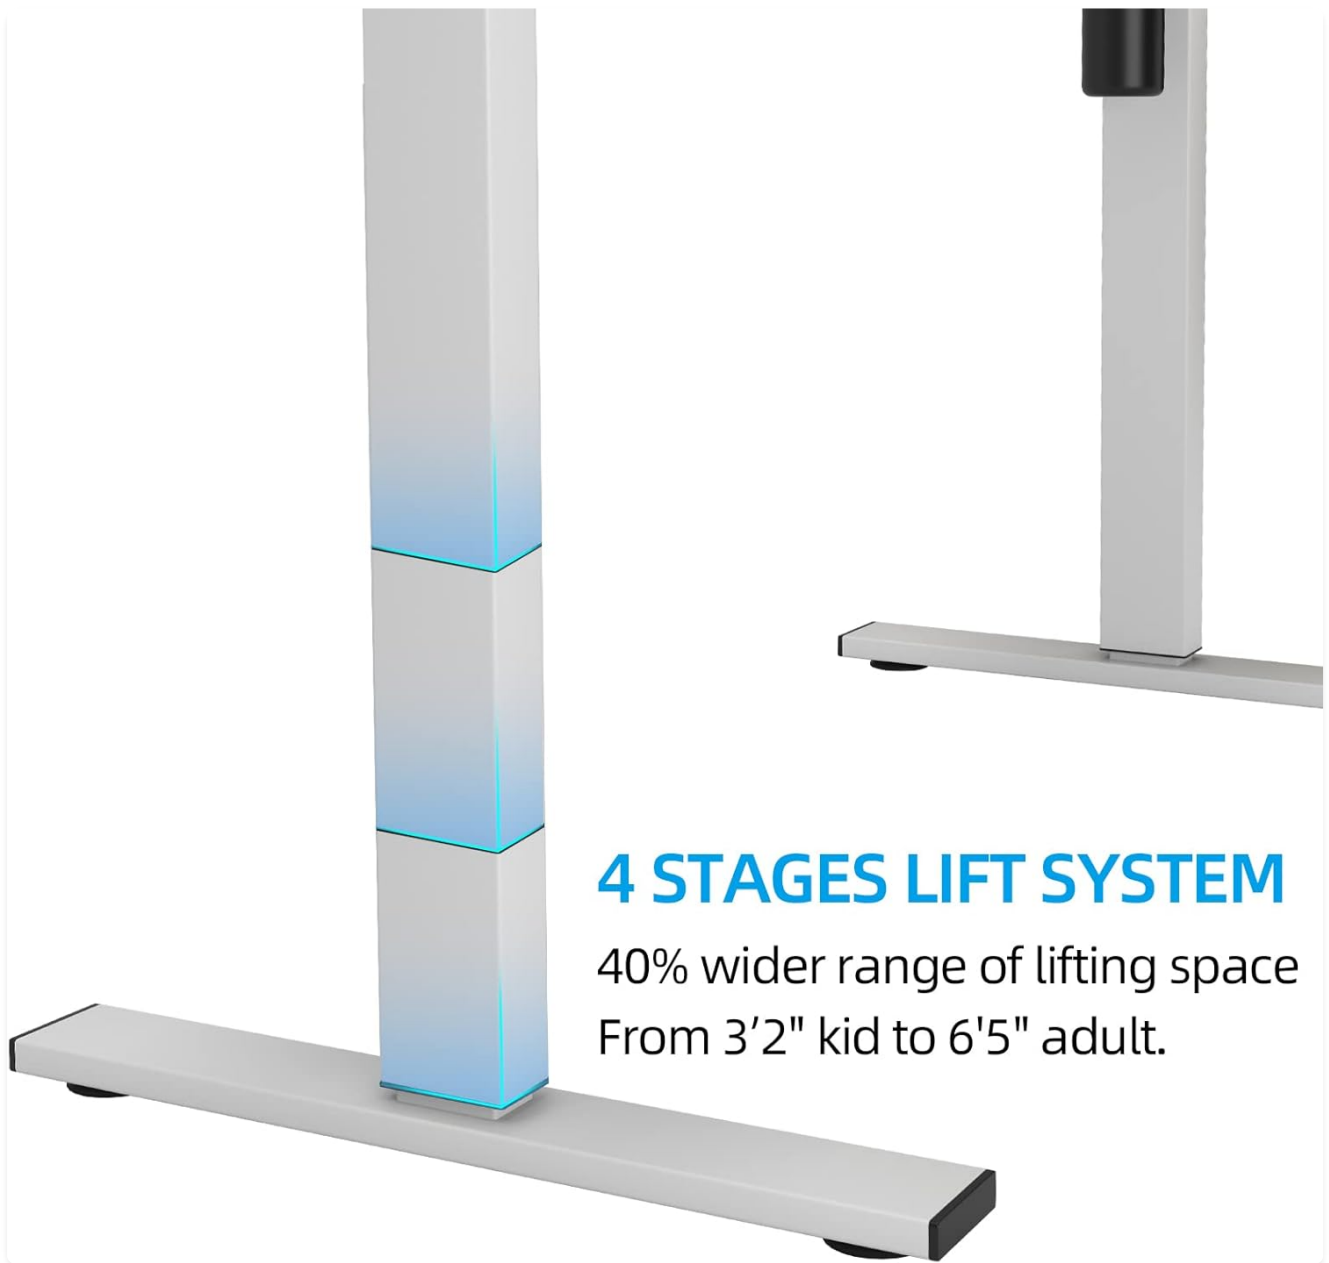

A visual representation of the desk's robust 4-stage lift system, emphasizing its wide range of height adjustment for various user heights.



A close-up view of one of the two cable grommets integrated into the desktop, designed for organized cable management.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Tighten any loose fasteners.
- **Cable Management:** Keep cables neatly organized to prevent tangling or damage, especially during height adjustments.
- **Avoid Overloading:** Do not place excessive weight on the desk, as this can strain the motor and frame.

TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common problems and solutions:

- **Desk Not Moving:**
 - Check if the power cord is securely plugged into both the desk and the wall outlet.
 - Ensure there are no obstructions preventing the desk from moving up or down.
 - Try resetting the desk by unplugging it for 30 seconds and then plugging it back in.

- **Uneven Movement:**
 - Verify that the desk is placed on a level surface.
 - Check for any loose screws in the frame or legs and tighten them.
- **Error Code on Display:**
 - Refer to the specific error code in a more detailed product manual if available. Often, a simple reset (unplugging and replugging) can resolve temporary errors.
- **Noise During Operation:**
 - A slight motor sound is normal. If the noise is excessive or unusual, check for any loose components or obstructions.

If these solutions do not resolve the issue, please contact customer support for further assistance.




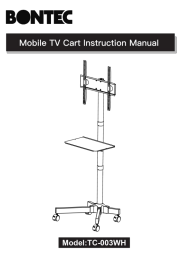
SPECIFICATIONS

Attribute	Detail
Brand	soges
Model Number	EU1-10NBZYELT-160YEU-TC
Desktop Material	Teak Wood
Color	Teak
Product Dimensions (L x W x H)	160 cm x 60 cm x 73-120 cm
Height Adjustment Range	73 cm to 120 cm
Height Adjustment Speed	25 mm/s
Maximum Load Capacity	80 kg
Weight of Item	26.9 Kilograms
Special Features	Electric Height Adjustable, Memory Presets, Cable Grommets, Headphone Hook
Assembly Required	Yes

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact soges customer service directly. Keep your purchase receipt as proof of purchase.

Related Documents - EU1-10NBZYELT-160YEU-TC

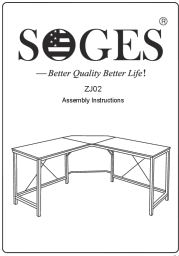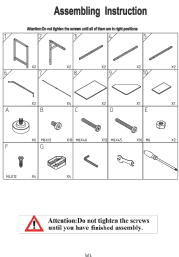 <p>The cover of the SOGES ZJ02 L-Shaped Desk Assembly Instructions manual. It features the SOGES logo at the top, followed by the tagline '—Better Quality Better Life!'. Below this, the model number 'ZJ02' and 'Assembly Instructions' are printed. A line drawing of the L-shaped desk is shown at the bottom.</p>	<p>SOGES ZJ02 L-Shaped Desk Assembly Instructions</p> <p>Step-by-step assembly guide for the SOGES ZJ02 L-shaped desk, including parts list, hardware details, and assembly steps. Learn how to build your SOGES desk efficiently.</p>
 <p>The cover of the Soges L-Shaped Desk Assembly Instructions manual. It features the title 'Assembling Instruction' at the top. Below the title is a grid of 16 small diagrams illustrating the assembly steps. At the bottom, there is a warning icon and text: 'Attention: Do not tighten the screws until you have finished assembly.'</p>	<p>Soges L-Shaped Desk Assembly Instructions</p> <p>Step-by-step assembly guide for the Soges L-Shaped Desk, detailing parts and assembly process for a sturdy corner office desk.</p>
 <p>The cover of the Electric Height Adjustable Desk User Manual and Assembly Guide. It features a list of languages: USER'S MANUAL, BENUTZERHANDBUCH, MANUEL D'UTILISATION, MANUAL DEL USUARIO, MANUALE D'USO, GEBRUIKERSHANDLEIDING, and INSTRUCȚIA DE UTILIZĂRI. Below the list is a line drawing of the electric height adjustable desk. At the bottom, the model numbers '10NBZYELT-140BEU-TC' and '10NBZYELT-160BEU-TC' are listed.</p>	<p>Electric Height Adjustable Desk User Manual and Assembly Guide - 10NBZYELT-140BEU-TC, 10NBZYELT-160BEU-TC</p> <p>Comprehensive user manual and assembly guide for the electric height adjustable desk, including setup instructions, safety warnings, and control panel operation. Features model numbers 10NBZYELT-140BEU-TC and 10NBZYELT-160BEU-TC.</p>
 <p>The cover of the BONTEC TC-003WH Mobile TV Cart Instruction Manual. It features the BONTEC logo at the top. Below the logo is the title 'Mobile TV Cart Instruction Manual'. A line drawing of the mobile TV cart is shown in the center. At the bottom, the model number 'Model TC-003WH' is printed.</p>	<p>BONTEC TC-003WH Mobile TV Cart Instruction Manual</p> <p>Assembly instructions and parts list for the BONTEC TC-003WH Mobile TV Cart, a height-adjustable stand for flat panel televisions up to 25kg.</p>