

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [MINISO](#) /

> [MINISO Woodland Home Fragrance Flameless Essential Oil Diffuser - Ambered Rose User Manual](#)

MINISO Ambered Rose

MINISO Woodland Home Fragrance Flameless Essential Oil Diffuser - Ambered Rose User Manual

INTRODUCTION

This manual provides instructions for the safe and effective use of your MINISO Woodland Home Fragrance Flameless Essential Oil Diffuser, Ambered Rose model. Please read these instructions carefully before use and retain them for future reference.

PRODUCT OVERVIEW

The MINISO Woodland Home Fragrance is a flameless essential oil diffuser designed to disperse fragrance using diffuser sticks. It offers a continuous scent experience without the need for an open flame.

- **Flameless Design:** Utilizes diffuser sticks to release fragrance, eliminating the need for heat or flame.
- **Included Diffuser Sticks:** Comes with premium diffuser sticks for immediate use.
- **Ambered Rose Scent:** Features a specific Ambered Rose fragrance.
- **Aesthetic Design:** Designed to complement home decor.

SETUP INSTRUCTIONS

1. **Unpack the Product:** Carefully remove the diffuser bottle and diffuser sticks from the packaging.



Image: The product packaging for the MINISO Woodland Home Fragrance, Ambered Rose.

2. **Remove the Cap:** Unscrew and remove the decorative cap and the inner stopper from the fragrance bottle.



Image: The MINISO Woodland Home Fragrance bottle with its cap securely in place.

- 3. Insert Diffuser Sticks:** Place the diffuser sticks directly into the bottle, ensuring they are submerged in the essential oil. The number of sticks can be adjusted to control scent intensity.



Image: The MINISO Woodland Home Fragrance bottle with diffuser sticks absorbing the essential oil.

- 4. Position the Diffuser:** Place the assembled diffuser on a stable, level surface away from direct sunlight, heat sources, and drafts. Ensure it is out of reach of children and pets.



Image: The MINISO Woodland Home Fragrance diffuser positioned on a surface, ready for use.

OPERATING INSTRUCTIONS

Once the diffuser sticks are inserted into the essential oil, they will naturally absorb the fragrance and release it into the air. No further action is required for continuous operation.

- **Scent Intensity Adjustment:** To increase the scent intensity, add more diffuser sticks. To decrease intensity, remove some sticks. For a stronger initial scent, carefully flip the sticks after a few hours, ensuring to handle them over a sink or protective surface to avoid spills.
- **Duration:** The fragrance duration depends on factors such as room size, ventilation, and the number of sticks used.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the bottle with a soft, dry cloth if it becomes dusty. Avoid using harsh chemicals or abrasive materials.
- **Replacing Sticks:** If the scent diminishes over time, the diffuser sticks may become saturated. Replace them with new, clean diffuser sticks to refresh the fragrance.
- **Refilling:** When the essential oil is depleted, the bottle can be refilled with MINISO Woodland Home Fragrance refills of the same scent.

TROUBLESHOOTING

Problem: No or very mild scent.

Solution:

- Ensure all diffuser sticks are fully submerged in the oil.
- Add more diffuser sticks to increase the surface area for diffusion.
- Carefully flip the diffuser sticks to expose saturated ends to the air.
- Consider the room size and ventilation; larger rooms or highly ventilated areas may require more diffusers or more frequent stick flipping.
- Replace old sticks with new ones if they appear saturated or clogged.

Problem: Oil spillage.

Solution:

- Immediately wipe up any spilled oil with a damp cloth to prevent damage to surfaces.
- Ensure the diffuser is placed on a stable, level surface where it cannot be easily knocked over.
- Avoid placing the diffuser near edges or in high-traffic areas.

SPECIFICATIONS

Feature	Detail
Brand	MINISO
Model Name	Ambered Rose
Scent	Ambered Rose
Material	Glass
Power Source	Manual
Product Dimensions	7.5L x 7.5W x 24.5H Centimeters
Item Weight	100 Grams
Net Quantity	1 Count
Included Components	Reed Diffuser

SAFETY INFORMATION

- Store in a cool and dry place, away from direct sunlight and heat.
- Keep out of reach of children and pets.
- Avoid contact with skin and eyes. In case of contact, rinse thoroughly with water.
- Do not ingest the essential oil. If swallowed, seek immediate medical attention.
- Place the diffuser on a stable surface to prevent spills. Essential oils can damage furniture finishes.
- Do not light the diffuser sticks. This product is flameless.

WHAT'S IN THE BOX

- 1 x MINISO Woodland Home Fragrance Flameless Essential Oil Diffuser (Ambered Rose)
- Set of Diffuser Sticks

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact MINISO customer service directly. Keep your purchase receipt for any warranty claims.