

Generic 52065056108340126

Yuan Qin 2x Air Filter Cover Screws - Instruction Manual

1. INTRODUCTION

This manual provides essential information regarding the Yuan Qin 2x Air Filter Cover Screws. These professional repair parts are designed for easy installation and secure fitting of your vehicle's air filter housing. Please read this manual thoroughly before installation to ensure proper use and longevity of the product.

2. PRODUCT OVERVIEW

2.1. Components

The package includes:

- 2x Air Filter Housing Screws

2.2. Material and Dimensions

These screws are manufactured from high-quality Carbon Steel with a Color Zinc finish, providing durability and resistance to rust for long-term use.

Each Air Filter Cover Screw measures approximately 3.35 cm (1.32 inches) in length and 1 cm (0.39 inches) in width, with a thread diameter of 5 mm (0.20 inches). These dimensions ensure a precise fit for compatible vehicle air filter housings.



Figure 2.2.1: Dimensions of the Air Filter Cover Screws. The image displays three screws, highlighting their length (33.5mm), head diameter (10mm), and thread diameter (5mm).

3. INSTALLATION

The Air Filter Housing Screws are designed for straightforward installation. Follow these general steps:

1. Ensure the vehicle's engine is off and cool before beginning any work.
2. Locate the air filter housing on your vehicle.
3. Remove any old or damaged screws from the air filter housing.
4. Align the new Air Filter Housing Screws with the designated holes on the air filter housing.
5. Insert the screws and tighten them securely. Do not overtighten to avoid damaging the housing or the screws.
6. Verify that the air filter housing is firmly secured and does not move.

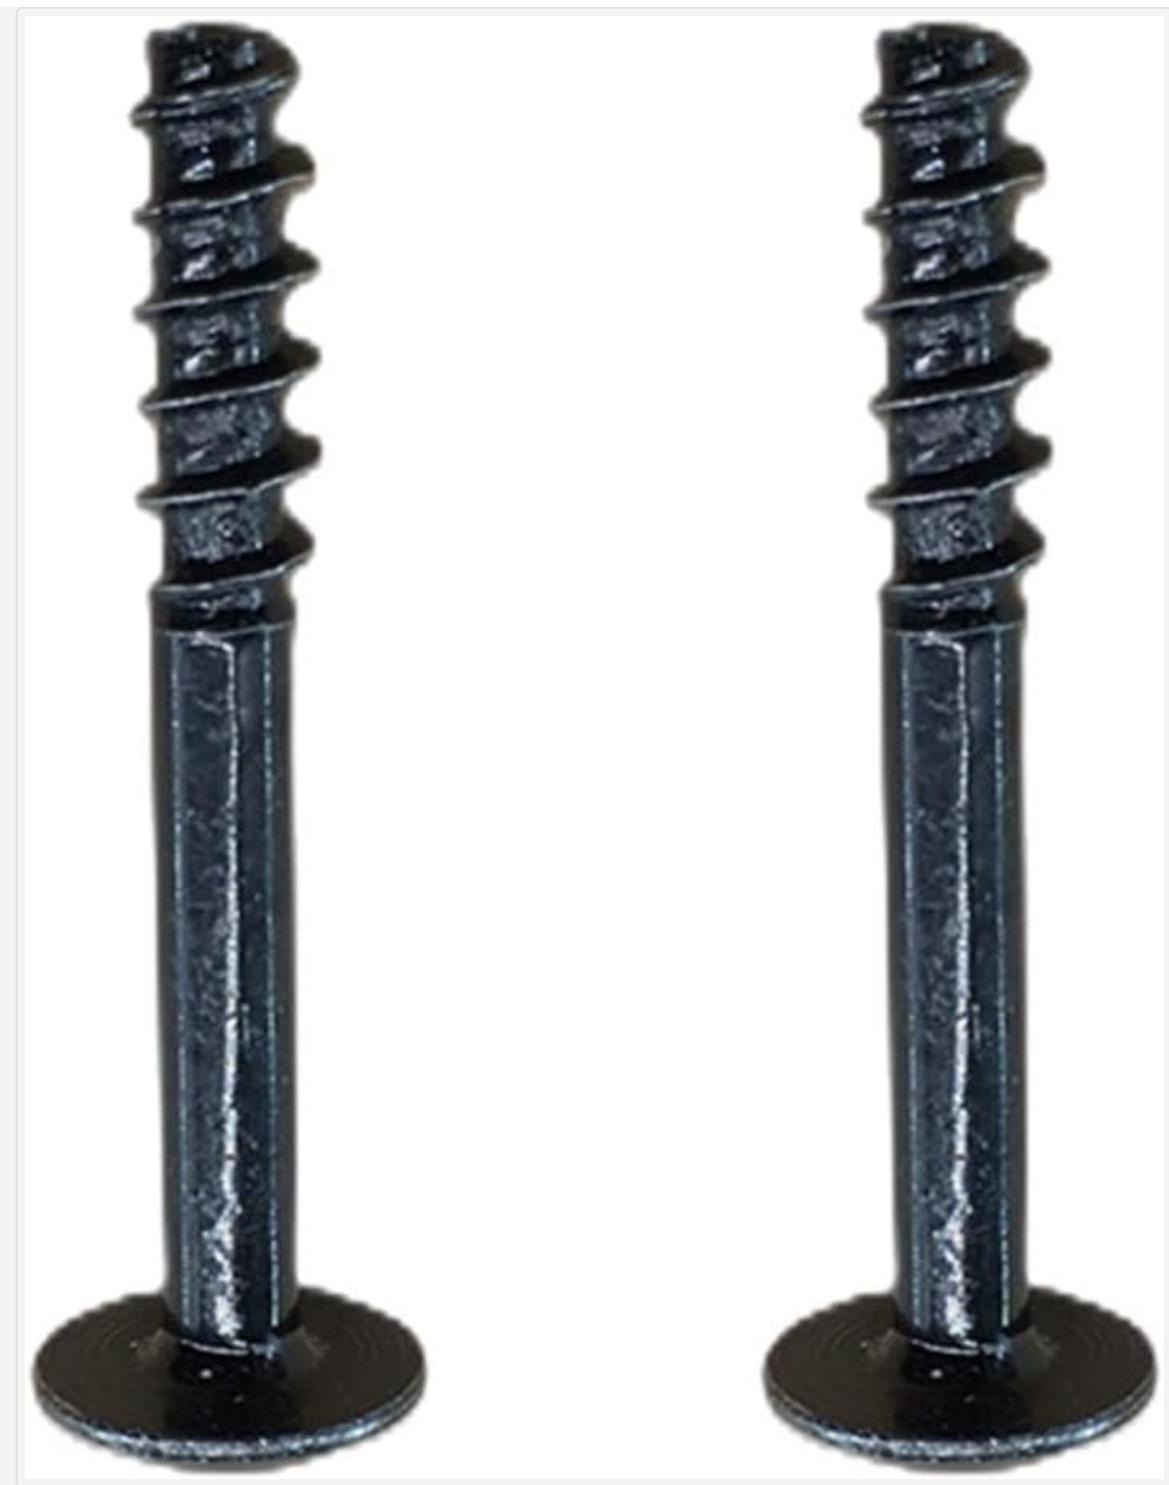


Figure 3.1: Two Air Filter Cover Screws. These screws are essential for securing the air filter housing.

4. MAINTENANCE AND CARE

These air filter housing screws are designed for durability and long service life. Regular maintenance is generally not required for the screws themselves. However, it is recommended to periodically inspect the screws for any signs of loosening or corrosion, especially during routine vehicle maintenance or air filter replacement. If any damage or excessive wear is observed, replace the screws to ensure the air filter housing remains securely fastened.

5. TROUBLESHOOTING

Given the nature of this product as a simple fastening component, extensive troubleshooting is typically not required. If you encounter issues, consider the following:

- **Screws do not fit:** Verify that the screws' dimensions (length, thread diameter) match the specifications required for your vehicle's air filter housing. Refer to your vehicle's service manual for correct screw specifications.
- **Air filter housing is loose after installation:** Ensure the screws are fully tightened. Avoid overtightening, which can strip threads. If the housing remains loose, inspect the housing itself for damage or wear that might prevent a secure fit.
- **Screws are difficult to install:** Check for any debris or damage in the screw holes. Clean the threads if necessary. Do not force the screws, as this can cause cross-threading or damage.

6. SPECIFICATIONS

Attribute	Value
Brand	Generic
Model	as described
Item Weight	0.352 ounces
Country of Origin	China
Manufacturer Part Number	52065056108340126
OEM Part Number	52065056108340126
ASIN	B0CLP1PYCP
Product Dimensions	1.32" L x 0.39" W x 0.39" H

7. WARRANTY AND SUPPORT

As these are replacement parts, specific warranty information may vary depending on the retailer or original manufacturer. For any questions regarding installation, compatibility, or product performance, please contact the seller or refer to your vehicle's official service documentation.

For general inquiries, you may refer to the product listing on Amazon:[Product Page](#)