

## WOCKODER HQ-KZ018

# WOCKODER HQ-KZ018 Vinyl Record Player Instruction Manual

Model: HQ-KZ018 | Brand: WOCKODER

## INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your WOCKODER HQ-KZ018 Vinyl Record Player. Please read this manual thoroughly before using the product to ensure safe and optimal performance. This high-fidelity turntable system is designed to deliver a superior vinyl listening experience with its integrated stereo speakers and versatile connectivity options.

## SAFETY INFORMATION

Always adhere to the following safety precautions to prevent electric shock, fire, or damage to the unit:

- Do not expose the unit to rain, moisture, or excessive humidity.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Ensure proper ventilation around the unit. Do not block any ventilation openings.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## PACKAGE CONTENTS

---

Please ensure all items listed below are included in your package:

- 1 x Turntable Unit
- 1 x Detachable Dust Cover
- 1 x Slip Mat
- 1 x Counterweight
- 1 x Die-cast Aluminum Platter
- 1 x Durable Rubber Belt
- 1 x 45 RPM Adapter
- 1 x AT3600L Moving Magnetic Stylus (pre-installed)
- 1 x DC12V 1500mA Power Adapter
- 1 x User Manual

## PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your WOCKODER HQ-KZ018 turntable.



Overall view of the WOCKODER HQ-KZ018 Vinyl Record Player with its clear dust cover in an open position, showcasing the turntable platter and tonearm.

# RICH DETAIL CLASSIC TECHNOLOGY



A top-down perspective emphasizing the turntable's anti-vibration design, user-friendly control buttons, and the precision moving magnet stylus.

## Built-in Surround Sound Speakers

Using 2\*10W tweeters and 2\*15W speakers for bass, it has a more layered sound effect.




An illustrative diagram detailing the internal structure of the built-in surround sound speakers, comprising two 10W tweeters and two 15W bass speakers for a layered audio experience.

## SETUP

Follow these steps to set up your turntable for the first time:

1. **Dust Cover Installation:** Carefully attach the clear dust cover to the hinges at the back of the turntable unit. Ensure it opens and closes smoothly.
2. **Platter and Belt Installation:** Place the die-cast aluminum platter onto the turntable spindle. Locate the durable rubber belt on the underside of the platter. Using the red strap provided, pull the belt over the motor pulley (the small brass wheel) through the opening in the platter. Rotate the platter a few times to ensure the belt is properly seated and moves freely.
3. **Counterweight Adjustment:** Slide the counterweight onto the rear of the tonearm. Remove the tonearm safety lock. Adjust the counterweight by rotating it until the tonearm floats in a neutral, balanced position, parallel to the platter. Once balanced, hold the rear part of the counterweight steady and rotate the

 numbered ring to align '0' with the line on the tonearm. Then, rotate the entire counterweight to the recommended tracking force (e.g., 1.0 to 2.0 grams, consult your stylus specifications for exact value).

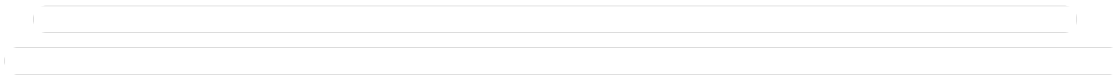

Detailed views of the stylus and the adjustable counterweight for precise tonearm balance.



4. **Slip Mat Placement:** Place the felt slip mat on top of the platter.
5. **Stylus Protector Removal:** Gently remove the clear plastic stylus protector from the cartridge by pulling it forward. Be careful not to touch the stylus needle.
6. **Power Connection:** Connect the DC12V 1500mA power adapter to the 'DC IN 12V' port on the rear of the turntable and plug it into a wall outlet.

## OPERATING INSTRUCTIONS

Learn how to operate your WOCKODER HQ-KZ018 Vinyl Record Player.

The main control panel with power, volume, and speed selection buttons.

1. **Power On/Off:** Press the 'ON/OFF MODE' button to turn the unit on. The indicator light will illuminate. Long-press the 'ON/OFF MODE' button to turn the unit fully off.
2. **Speed Selection:** Select the appropriate playback speed (33 1/3 RPM or 45 RPM) using the dedicated buttons on the control panel. For 45 RPM records, place the 45 RPM adapter on the spindle before placing the record.
3. **Playing a Record:**
  - Place a vinyl record on the platter.
  - Release the tonearm from its rest by moving the tonearm lock.
  - Lift the tonearm using the cueing lever.
  - Manually position the tonearm over the desired track on the record.
  - Gently lower the tonearm onto the record using the cueing lever. The record will begin to play.
4. **Auto-Stop Function:** The turntable features an auto-stop function. When the record finishes playing, the platter will automatically stop spinning. To continue playing, lift the tonearm and return it to its rest, or place another record.
5. **Volume Control:** Adjust the audio output volume using the main rotary knob on the control panel.
6. **Bluetooth Pairing:** Press the 'ON/OFF MODE' button until the indicator light blinks blue rapidly, indicating Bluetooth pairing mode. On your Bluetooth-enabled device (e.g., smartphone), search for 'Turntable' in the Bluetooth settings and connect. Once paired, the light will turn solid blue, and you can stream audio through the turntable's speakers.
7. **Aux-in/RCA Output Usage:**

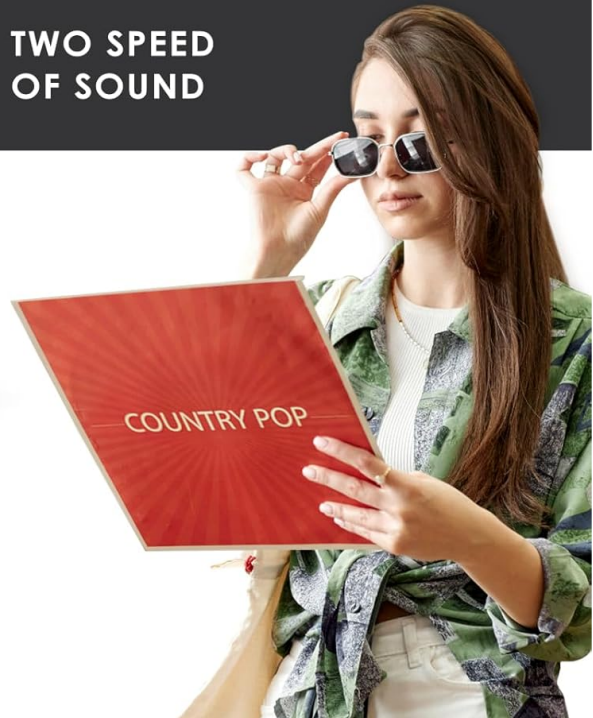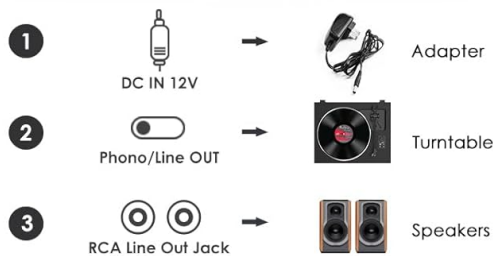

Rear panel connections including Phono/Line Out switch, Aux-in, and RCA outputs.

- **Aux-in:** Connect an external audio device (e.g., MP3 player) to the 'AUX IN' port using a 3.5mm audio cable. Switch the mode to Aux-in (green light).
- **RCA Output:** For connecting to external active speakers or an amplifier, use RCA cables (not included) to connect the 'AUX OUT (R/L)' ports to your audio system. Ensure the 'PHONO/LINE OUT' switch is set correctly based on your external equipment's input type (Phono for phono input, Line Out for line input).

## MAINTENANCE

Proper care will extend the life and performance of your record player.

- **Cleaning the Stylus:** Use a soft brush (not included) to gently clean the stylus. Always brush from back to front along the stylus.
- **Cleaning Records:** Use a dedicated record cleaning brush or cloth to remove dust and debris from your vinyl records before and after each play.
- **Cleaning the Unit:** Wipe the turntable unit and dust cover with a soft, dry, lint-free cloth. Avoid using

harsh chemicals or abrasive cleaners.

- **Storage:** When not in use, keep the dust cover closed to protect the turntable from dust. If storing for an extended period, disconnect the power adapter.

## TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected; Power outlet faulty.	Ensure power adapter is securely connected; Try a different power outlet.
No sound or low volume	Volume too low; Stylus protector still on; External speakers not connected/powering; Incorrect PHONO/LINE OUT switch setting.	Increase volume; Remove stylus protector; Check external speaker connections and power; Adjust PHONO/LINE OUT switch.
Skipping or distorted sound	Record is dirty/damaged; Stylus is dirty/worn; Turntable not level; Tracking force incorrect.	Clean or replace record; Clean or replace stylus; Place turntable on a stable, level surface; Re-adjust counterweight.
Bluetooth not connecting	Turntable not in pairing mode; Device too far; Interference.	Ensure turntable is in fast-blinking blue mode; Move device closer; Reduce interference from other devices.

## SPECIFICATIONS

Feature	Detail
Brand	WOCKODER
Model Name	HQ-KZ018
Connectivity Technology	Bluetooth
Maximum Rotational Speed	45 RPM (supports 33 1/3 RPM)
Special Features	Includes both phono and RCA line outputs, Built-in anti-vibration turntable, Wireless input, Built-in treble and bass 4 full-range stereo speakers, Adjustable counterweight and Audio-Technica AT3600 moving magnet stylus
Material	Engineered Wood
Color	Black
Item Weight	17.81 pounds
Package Dimensions	22 x 17.2 x 10.7 inches
Manufacturer	WOCKODER

## WARRANTY AND SUPPORT

For warranty information or technical support, please contact WOCKODER directly through their official channels or the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.