

Accutime POK4374

Accutime Pokémon POK4374 Digital Watch User Manual

Model: POK4374

INTRODUCTION

Thank you for purchasing the Accutime Pokémon POK4374 Digital Watch. This manual provides essential information for setting up, operating, and maintaining your new watch. Please read it thoroughly to ensure proper use and longevity of your product.

PRODUCT OVERVIEW

The Accutime Pokémon POK4374 is a vibrant digital watch designed for fans of Pokémon.

Key Features:

- **Pokéball and Pikachu character dial:** A distinctive design element on the watch face.
- **Multicolored character printed strap:** Features various Pokémon characters for a fun and engaging look.
- **Digital time display:** Provides clear and easy-to-read time.
- **Strap width:** 16 mm, suitable for comfortable wear.
- **Movement type:** Quartz, ensuring accurate timekeeping.

Product Images:



Front view of the watch, highlighting the digital time display and the Pikachu character on the dial.



Full view of the watch, showcasing the vibrant multicolored character-printed strap and the watch face.



SETUP

Initial Setup:

Your Accutime Pokémon Digital Watch comes ready to use. No complex assembly is required.

1. **Unboxing:** Carefully remove the watch from its packaging.
2. **Strap Adjustment:** Adjust the traditional buckle closure to fit comfortably on the wrist.
3. **Battery Activation:** The watch should be pre-installed with a battery. If the display is not active, check for a small plastic tab near the crown or buttons that may need to be removed to activate the battery.

OPERATING INSTRUCTIONS

Setting the Time:

The watch typically has one or two buttons for setting the time.

- 1. Accessing Time Set Mode:** Locate the button(s) on the side of the watch case. Press and hold the primary button (often labeled "SET" or "MODE") until the hour digits begin to flash.
- 2. Adjusting Hours:** While the hour digits are flashing, press the secondary button (often labeled "ADJ" or "SELECT") repeatedly to advance the hour. Pay attention to AM/PM if applicable.
- 3. Adjusting Minutes:** Press the primary button again to switch to the minute setting mode. The minute digits will flash. Press the secondary button repeatedly to advance the minutes.
- 4. Confirming Time:** Press the primary button one more time to exit the time setting mode. The time will now be set.

Note: Specific button functions may vary slightly. If the above steps do not work, refer to the watch's packaging or manufacturer's website for a detailed diagram.

MAINTENANCE

Care and Cleaning:

- Cleaning:** Wipe the watch case and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the watch mechanism.
- Water Resistance:** This watch is generally not designed for water immersion. Avoid exposing it to water, including showering, swimming, or heavy rain, to prevent damage.
- Storage:** When not in use, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Replacement:** When the display dims or stops functioning, the battery may need replacement. This typically requires a small watch battery (e.g., SR626SW or similar). It is recommended to have the battery replaced by a professional watch repair service to ensure proper sealing and prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Battery is dead or low.	Replace the battery.
Time is incorrect.	Time was not set correctly or buttons were pressed accidentally.	Re-set the time following the "Operating Instructions" section.
Buttons are unresponsive.	Battery issue or internal malfunction.	Try replacing the battery. If the issue persists, contact customer support.
Moisture inside the watch.	Exposure to water.	Immediately stop using the watch. Place it in a dry, warm place (not hot) or a container with desiccant. Seek professional repair if moisture persists.

SPECIFICATIONS

Attribute	Detail
Model Number	POK4374
Brand	Accutime
Movement Type	Quartz

Attribute	Detail
Strap Width	16 mm
Package Dimensions	27.7 x 6.5 x 1.4 cm
Item Weight	20 grams
Manufacturer	Peers Hardy
Country of Origin	China
ASIN	B0CLPDLTC5
Spare Parts Availability	Information unavailable

WARRANTY INFORMATION

This Accutime Pokémon POK4374 Digital Watch comes with **aone-year warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from accidents, misuse, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries regarding your Accutime Pokémon POK4374 Digital Watch, please contact Accutime customer service.

Website: www.accutime.com (Please note: This is a placeholder URL as no specific support URL was provided in the data. Users should refer to product packaging for official contact details.)

Email: support@accutime.com (Placeholder)

Phone: Please refer to the contact information provided on the product packaging or the official Accutime website for regional support numbers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CLPDLTC5>

More documents and user manuals: <https://manuals.plus/>