

manuals.plus /

> [Nuliving](#) /

> [Universal Remote Control Instruction Manual](#)

Nuliving RC-G008

Universal Remote Control Instruction Manual

Model: RC-G008 | Brand: Nuliving

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Nuliving Universal Remote Control, model RC-G008. This remote is designed to replace multiple remote controls for a wide range of television brands, offering a simplified and convenient user experience.

2. PRODUCT OVERVIEW

The Nuliving RC-G008 is a versatile universal remote control compatible with numerous TV brands. Its intuitive layout allows for easy navigation and control of your television's functions.





Figure 2.1: Front view of the RC-G008 Universal Remote Control. This image displays the entire remote, highlighting the power button, input button, navigation pad, volume and channel controls, and dedicated brand buttons for various TV manufacturers.

The remote features dedicated buttons for common functions such as power, input, volume, channel, and a central navigation pad. It also includes specific brand buttons for quick setup and access to popular streaming services or features depending on the TV model.

- **Universal 2023 Series TV**
- Universal 2020 Series TV
- Universal 2022 Series TV

- Universal 2019 Series TV
- Universal 2021 Series TV
- 2018 2017 2016 Series TV



Figure 2.2: The RC-G008 remote being held, demonstrating its ergonomic design and use with a modern smart TV. The image emphasizes the remote's universal compatibility across different TV series and models from 2016 to 2023.



Figure 2.3: Universal Remote Control for All Brand TVs. This image showcases the remote's ability to control multiple television brands, highlighting its versatility.

3. SETUP AND PROGRAMMING

The RC-G008 universal remote offers multiple methods for programming to your television. Choose the method that best suits your needs.

3.1. Automatic Setting Method

1. Simultaneously press and hold the **Power** and **Mute** buttons on the remote.
2. The indicator light on the remote will stay on continuously.
3. Release the **Power** and **Mute** buttons.
4. Press the **Mute** button again to enter automatic search mode.
5. Point the remote control at your television.
6. Observe the TV screen. If the volume button appears on the TV, immediately press the **Power** button again to save the current code.

3.2. Brand Setting Method

This method allows for quick setup if your TV brand has a dedicated button on the remote.

1. Identify the corresponding brand button on the remote for your television (e.g., LG, Samsung, Sony).
2. Press and hold the corresponding brand button for 5 seconds.
3. The LED indicator on the remote will flash three times, indicating that the setting is complete.

Brand Search

Turn on TV. Press the button of the corresponding brand for 5 sec, the LED flashes three times, then the setting is completed.



Figure 3.1: Brand Setting Method. This diagram visually explains how to program the remote by holding down the specific brand button for 5 seconds until the LED flashes three times.

3.3. Code Setting Method

This method requires a 3-digit TV code from a provided code list (not included in this manual, typically found with product packaging or online).

1. Press and hold the **Mute** and **Power** buttons together.
2. The LED indicator light will turn on. Release both buttons.
3. Input your 3-digit TV code using the number buttons on the remote.
4. If the code is correct, the LED light will go out. If the code is incorrect, the light will remain on, indicating you should try another code.

4. OPERATING INSTRUCTIONS

Once programmed, your RC-G008 remote control functions similarly to your original TV remote. Point the remote directly at your television for optimal performance.

- **Power Button:** Turns the TV on or off.
- **Volume Buttons (+/-):** Adjusts the TV's volume up or down.
- **Channel Buttons (CH +/-):** Changes the TV channel up or down.
- **Mute Button:** Mutes or unmutes the TV's audio.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Pad (Up/Down/Left/Right/OK):** Used for menu navigation and selection.
- **Number Buttons (0-9):** Directly input channel numbers.
- **Brand Buttons (e.g., LG, Samsung, Sony):** May function as direct access buttons for specific TV features or apps depending on the TV model.

5. COMPATIBILITY

The Nuliving RC-G008 is a universal replacement remote control designed to work with a wide array of television brands. It supports direct use with or can be programmed for the following brands:



Figure 5.1: Compatible TV Brands. This image lists numerous brands including AIWA, EMERSON, POLAROID, AOC, FIRE-TV, PROSCAN, APPLE, FUNAI, PYLE, AVOL, GE, ROKU.BOX, COBY, HITACHI, ROKU.TV, CURTIS, IMPERIAL, ROKU.TV2, DAEWOO, OLEVIA, SCEPTRE, DYNEX, ONN, SKYWORTH, ELEMENT, OPTIMUS, SYLVANIA, Panasonic, SHARP, HAIER, PHILIPS, SONY, HISENSE, SAMSUNG, TCL, INSIGNIA, SANYO, JVC, TOSHIBA, SEIKI, LG, VESTEL, MAGNAVOX, RCA, VIZIO, WESTINGHOUSE.

This remote is compatible with various TV series from 2016 to 2023, ensuring broad applicability for many modern and older television sets.

6. MAINTENANCE

6.1. Battery Replacement

The remote control requires two AAA batteries (not included). To replace batteries:

1. Open the battery compartment cover on the back of the remote.
2. Remove the old batteries.
3. Insert two new AAA batteries, ensuring correct polarity (+ and -).

4. Close the battery compartment cover securely.

The remote features one-time setting and permanent power-off memory, meaning your settings will not be lost when changing batteries.

6.2. Cleaning

To clean the remote, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.

7. TROUBLESHOOTING

If you encounter issues with your universal remote control, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Remote does not respond or control the TV.	<ul style="list-style-type: none">• Ensure batteries are inserted correctly and are not depleted. Replace if necessary.• Verify the remote is programmed correctly using one of the setup methods (Automatic, Brand, or Code Setting). Re-attempt programming if unsure.• Ensure there are no obstructions between the remote and the TV's infrared receiver.• Confirm the remote is pointed directly at the TV.
Remote requires excessive pressure on buttons to work.	<ul style="list-style-type: none">• This can indicate low battery power. Replace batteries.• Dirt or debris may be under the buttons. Gently clean the remote's surface.
Remote loses programming or does not stay programmed.	<ul style="list-style-type: none">• The remote has power-off memory, so settings should not be lost during battery changes. If this occurs, re-program the remote carefully.• Ensure the programming steps are followed precisely.
Specific functions (e.g., smart TV features, specific inputs) do not work.	<ul style="list-style-type: none">• While universal, some advanced or brand-specific functions may not be fully supported.• Ensure the correct programming code or method was used for your specific TV model.

8. SPECIFICATIONS

Feature	Detail
Model Number	RC-G008
Brand	Nuliving
Connectivity Technology	Infrared
Compatible Devices	Television, DVD/Blu-ray Player, Set Top Box (Primary function is TV control)
Max Number of Supported Devices	3 (Universal TV control is primary)

Feature	Detail
Special Feature	No Programming Required (for some brands), Universal
Item Weight	2.08 ounces
Package Dimensions	6.93 x 2.28 x 0.75 inches



Figure 8.1: Remote Control Dimensions. This image provides a visual representation of the remote's physical size, showing its length, width, and thickness.

9. WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your Nuliving Universal Remote Control, please contact the seller or manufacturer directly through your purchase platform.

Manufacturer: Tianwei Electronics

Seller: Nuliving



© 2024 Nuliving. All rights reserved.