

[Manuals.plus](#) /

> [Ultimaxx](#) /

> Ultimaxx 4K Camera Camcorder 42MP Video Recorder Camera Support Vlogging YouTube TikTok Digital Camcorder with 3" LCD Screen, 18X Digital Zoom for Adults Kids Teens Beginners User Manual

Ultimaxx Ultimaxx0715834464323

Ultimaxx 4K Camera Camcorder User Manual

Model: Ultimaxx0715834464323 | Brand: Ultimaxx



Figure 1: The Ultimaxx 4K Camera Camcorder and its included accessories.

This manual provides comprehensive instructions for the operation and maintenance of your Ultimaxx 4K Camera Camcorder. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your recording experience.

WHAT'S IN THE BOX

Upon unboxing, please verify that all the following items are included:

- Ultimaxx 4K Camera Camcorder
- Battery
- Padded Bag
- USB-C Cable
- Remote Control
- User Manual (this document)

KEY FEATURES

- **4K Ultra HD Video Recording:** Capture high-resolution videos with exceptional clarity.
- **42MP Photo Capture:** Snap high-quality still images.
- **18X Digital Zoom:** Zoom in for detailed shots.
- **3" LCD Screen:** Large flip-out display for framing and review.
- **Webcam Functionality:** Connect to your computer via USB for live streaming or video calls.
- **Anti-Shake Feature:** Helps stabilize footage for smoother recordings.
- **Multiple Shooting Modes:** Includes Slow Motion, Time-Lapse, Continuous Shooting, and Self Timer.
- **Pause Function:** Pause and resume recordings without creating new files.
- **Built-in LED Fill Light:** Provides additional illumination in low-light conditions.



Figure 2: Overview of the camcorder's versatile features.

SETUP

1. Battery Installation

1. Locate the battery compartment on the bottom of the camcorder.

2. Slide the battery compartment latch to open the cover.
3. Insert the provided Lithium Ion battery, ensuring the correct orientation according to the diagram inside the compartment.
4. Close the battery compartment cover until it clicks securely into place.

2. Memory Card Insertion

The camcorder uses SD (Secure Digital) memory cards. A 32GB SD card is recommended for optimal performance.

1. Locate the SD card slot, typically near the battery compartment or on the side of the camcorder.
2. Insert the SD card with the metal contacts facing down (or as indicated by the slot diagram) until it clicks into place.
3. To remove, gently push the card in until it springs out.

3. Initial Power On

1. Open the LCD screen. This action typically powers on the camcorder.
2. Alternatively, press and hold the **POWER** button located near the LCD screen hinge.
3. Follow any on-screen prompts for initial setup, such as setting the date and time.





Figure 3: Bottom view of the camcorder, highlighting the battery and SD card access.

OPERATING INSTRUCTIONS

1. Basic Operation

- **Power On/Off:** Open/close the LCD screen or press the **POWER** button.
- **Mode Selection:** Press the **MODE** button to cycle through available modes (Video, Photo, Playback, Slow Motion, Time-Lapse, etc.).
- **Navigation:** Use the **UP/DOWN** buttons to navigate menus and the **OK** button to confirm selections.

2. Recording Video

1. Ensure the camcorder is in Video mode.
2. Press the **RECORD** button (usually a red button) to start recording.
3. Press the **RECORD** button again to stop recording.
4. To use the pause function during recording, press the **OK** button. Press **OK** again to resume recording in the same file.

Your browser does not support the video tag.

Video 1: Demonstration of the Ultimaxx 4K Camera Camcorder's video recording capabilities and features. This video showcases the camcorder in use, highlighting its ease of operation and the quality of its output.

3. Taking Photos

1. Switch to Photo mode using the **MODE** button.
2. Frame your shot using the LCD screen.
3. Press the **PHOTO** button (often integrated with the record button or a separate shutter button) to capture the image.

4. Zoom Function

The camcorder features 18X digital zoom. Use the zoom lever (usually located near the top or side of the camcorder) to zoom in or out.



Figure 4: Visual representation of the 18X digital zoom.

5. LCD Screen Usage

The 3-inch LCD screen can be rotated for various viewing angles, including facing forward for vlogging or selfies. It also serves as your primary interface for menu navigation and playback.



Figure 5: The LCD screen displaying video quality comparison.

6. Webcam Function

Your camcorder can function as a webcam. Connect it to your computer using the supplied USB-C cable. Select the "Webcam" option on the camcorder's screen if prompted. This allows for live streaming or video calls through compatible software.



Figure 6: Camcorder used as a webcam with a laptop.

7. Remote Control

The included remote control allows for convenient operation from a distance, including starting/stopping recording, taking photos, and navigating menus.

Digital CAMCORDER

It can be used as a webcam by connecting to your computer via USB included

- Padded Bag
- USB-C Cable
- Remote
- Digital Camcorder



Figure 7: The remote control for the camcorder.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camcorder body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- **Storage:** Store the camcorder in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Fully charge the battery before first use. Do not expose batteries to excessive heat.

TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Camcorder does not power on.	Battery is not charged or not inserted correctly. Ensure battery is charged and properly seated.
Cannot record video/take photos.	Memory card is full, not inserted, or corrupted. Check card status, insert a new card, or format the existing one (this will erase all data).
Poor audio quality.	The built-in microphone may have limitations. If using an external microphone, ensure it is a powered external microphone.
Zoom appears jerky during recording.	Digital zoom can sometimes appear less smooth than optical zoom. This is normal for digital zoom.
Video files are not compatible with editing software.	The default recording format might be .AVI. Check camcorder settings to change the video format if available, or use video conversion software.

SPECIFICATIONS

Feature	Detail
Brand	Ultimaxx
Model Number	Ultimaxx0715834464323
Item Weight	1.01 pounds
Package Dimensions	6.81 x 5.63 x 3.54 inches
Batteries	1 Lithium Ion battery required
Color	Black
Special Features	Anti-Shake
Photo Sensor Technology	CMOS
Video Capture Resolution	4K
Maximum Focal Length	7.36 Millimeters
Maximum Aperture	5.58 f
Flash Memory Type	SD
Video Capture Format	MP4 (default may be AVI, check settings)
Screen Size	3 Inches
Connectivity Technology	USB

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your product packaging or visit the official Ultimaxx website. Keep your proof of purchase for warranty claims.

You can also visit the [Ultimaxx Store on Amazon](#) for more product information and support resources.



© 2024 Ultimaxx. All rights reserved.