

Manuals.plus /
 > uehba /
 > uehba Universal Replacement Remote Control for JVC Smart HDTV Android TV (Models RM-C3408, RM-C3362, RM-C3367, RM-C3407, LT-32N3115A, LT-40N5115A, LT-50N7115A, LT-55N7115A, LT-65N7115A) - Instruction Manual

uehba RM-C3362

uehba Universal Replacement Remote Control Instruction Manual

Compatible with JVC Smart HDTV Android TV Models

1. PRODUCT OVERVIEW

This manual provides instructions for the uehba Universal Replacement Remote Control, designed for seamless compatibility with various JVC Smart HDTV Android TV models. This remote control is pre-programmed and does not require any setup or pairing process. Simply insert batteries, and it is ready for use.





Image 1.1: Front view of the uehba Universal Replacement Remote Control, showing all buttons and layout.

Compatible JVC TV Models:

- RM-C3408
- RM-C3362
- RM-C3367
- RM-C3407
- LT-32N3115A
- LT-40N5115A
- LT-50N7115A
- LT-55N7115A
- LT-65N7115A

Note: This remote control does not support voice control functions.

2. SETUP AND BATTERY INSTALLATION

The uehba Universal Replacement Remote Control is designed for immediate use without any programming. Follow these steps to install batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Required Batteries: 2 x AAA (not included)



Image 2.1: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your compatible JVC Smart HDTV Android TV. Point the remote directly at the TV's infrared receiver.

Key Functions:

- **Power Button (Red):** Turns the TV on or off.
- **Number Buttons (0-9):** Direct channel selection.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (P+/P-):** Changes TV channels.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main smart interface or home screen.
- **Netflix, YouTube, Prime Video, Google Play Buttons:** Direct access to streaming applications.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).



Image 3.1: The remote control with visual callouts emphasizing its pre-programmed nature and lack of voice function.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Replacement:

- Replace batteries when the remote's response becomes sluggish or stops working.

- Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

Storage:

- Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Confirm you are within the effective operating range and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
 - This remote is pre-programmed and does not require pairing. If a button is not functioning, ensure it is a standard function supported by your TV model.
 - As noted, this remote does not support voice functions.
 - Clean the remote control, especially around the buttons, to ensure no debris is interfering with button presses.
- **Intermittent Operation:**
 - Weak batteries are a common cause of intermittent operation. Replace them.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

6. SPECIFICATIONS

Feature	Detail
Brand	uehba
Model Number	RM-C3362 (and compatible models listed above)
Product Dimensions	8.23 x 1.65 x 0.63 inches
Item Weight	2.29 ounces
Batteries Required	2 x AAA (not included)
Compatible Devices	JVC Smart HDTV Android Televisions
Special Feature	Pre-setting, no programming required

Voice Function	Not supported
----------------	---------------

© 2024 uehba. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0CLPNLS67>

More documents and user manuals: <https://manuals.plus/>