

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Tamagotchi](#) /
- › [Tamagotchi Original - Lots of Love Instruction Manual](#)

Tamagotchi 42975

Tamagotchi Original - Lots of Love Instruction Manual

Model: 42975

INTRODUCTION

Welcome to the world of Tamagotchi! This manual provides essential information for setting up, operating, and maintaining your Tamagotchi Original - Lots of Love digital pet. The Tamagotchi Original is a virtual pet that requires daily care and interaction to grow and thrive.



Image: The Tamagotchi Original - Lots of Love device, featuring a pink shell adorned with heart patterns and a digital screen displaying the virtual pet.

SAFETY INFORMATION

WARNING: CHOKING HAZARD--Small parts. Not intended for children under 3 years.

Please ensure that the Tamagotchi device and its components, especially the CR2032 battery, are kept out of reach of small children to prevent accidental ingestion.

WHAT'S IN THE BOX

Your Tamagotchi Original - Lots of Love package includes the following items:

- Tamagotchi Original - Lots of Love device
- CR2032 Battery x 1 (pre-installed or included separately)



Image: The Tamagotchi Original - Lots of Love device shown within its retail packaging, indicating the product and its contents.

SETUP

Battery Installation

The Tamagotchi Original requires one CR2032 battery. If the battery is not pre-installed or needs replacement, locate the battery compartment on the back of the device. Use a small screwdriver to open the compartment, insert the CR2032 battery with the positive (+) side facing up, and secure the cover.

Initial Setup and Hatching

Upon first activation or after battery replacement, an egg will appear on the screen. Press the 'A' button (left button) to select, 'B' button (middle button) to confirm, and 'C' button (right button) to cancel or return. Use the buttons to set the current time. Once the time is set, the egg will hatch into your new Tamagotchi character.

OPERATING YOUR TAMAGOTCHI

Your Tamagotchi requires consistent care to grow into a healthy adult. The device features three buttons (A, B, C) for interaction, typically located at the bottom of the unit.

TaMaGoTchi[®]

THE ORIGINAL VIRTUAL REALITY PET
L'ANIMAL DE COMPAGNIE VIRTUEL ORIGINAL

**BAN
DAI**[®]
MD

8+

Asst.
#42800

HATCH
FEED
GROW

ÉCLOSION
NOURRIR
CROISSANCE

GEN1



WARNING: Contains button or coin cell battery. Hazardous if swallowed. See instructions.

AVERTISSEMENT : Contient une pile de type bouton ou pièce. Dangereux si avalé. Voyez les directives.

BAN
DAI
NAMCO

TaMaGoTchi[®]

Image: Diagram on the back of the Tamagotchi packaging illustrating the functions of the three control buttons (A, B, C) and various care icons.

Basic Care Functions

- **Feed:** Select the fork and knife icon to feed your Tamagotchi. Choose between a meal or a snack.
- **Lights:** Select the light bulb icon to turn lights on or off. Turn lights off when your Tamagotchi sleeps.
- **Play:** Select the ball icon to play a game with your Tamagotchi. The "Character game" requires you to guess which way the Tamagotchi will move next.
- **Medicine:** Select the syringe icon if your Tamagotchi becomes sick. Administer medicine to help it recover.
- **Bathroom:** Select the toilet icon to clean up after your Tamagotchi uses the bathroom.
- **Health:** Select the heart icon to check your Tamagotchi's health status, including hunger, happiness, and discipline levels.
- **Discipline:** Select the angry face icon to discipline your Tamagotchi if it calls for attention when it doesn't need anything (e.g., full, happy, clean).

Growth and Evolution

Your Tamagotchi will evolve through different stages: egg, child, and adult. The type of adult character it becomes is determined by how well you care for it and your performance in the games. There are 7 different adult characters you can raise.

MAINTENANCE

Cleaning

To clean your Tamagotchi device, gently wipe the exterior with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, as these may damage the device.

Battery Replacement

When the screen dims or the device becomes unresponsive, it may be time to replace the CR2032 battery. Follow the battery installation steps outlined in the "Setup" section. Ensure proper disposal of used batteries according to local regulations.

TROUBLESHOOTING

- **Device Unresponsive:** Check battery level. Replace the CR2032 battery if necessary.
- **Screen is Blank:** Ensure the battery is correctly installed and has sufficient charge.
- **Tamagotchi Not Growing:** Consistent care (feeding, cleaning, playing) is crucial for growth. Ensure all needs are met regularly.
- **Character is Sick Frequently:** Ensure you are cleaning up after its messes promptly and administering medicine when needed.

SPECIFICATIONS

Model Number	42975
UPC	045557429751

Power Source	1 x CR2032 Battery (included)
Screen Type	LCD
Screen Size	1.9 Inches
Dimensions (L x W x H)	0.75 x 1.75 x 2.13 inches
Item Weight	1.06 ounces (approx. 30 grams)
Material	ABS, Metal, Polycarbonate, Silicone
Recommended Age	8 years and up
Manufacturer	Bandai Namco Toys & Collectibles America

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the manufacturer's official website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Manufacturer: [Bandai Namco Toys & Collectibles America](#)