



Manuals.plus /

› Antteq /

› Antteq AG42F3 42-inch Android Google TV User Manual

Antteq AG42F3

Antteq AG42F3 42-inch Android Google TV User Manual

Model: AG42F3

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Antteq AG42F3 42-inch Android Google TV. Please read these instructions carefully before using the television and retain them for future reference. Your Antteq TV combines a Full HD LED display with the power of Android TV and Google TV, offering integrated Google Assistant, Chromecast, and a triple tuner for versatile entertainment.

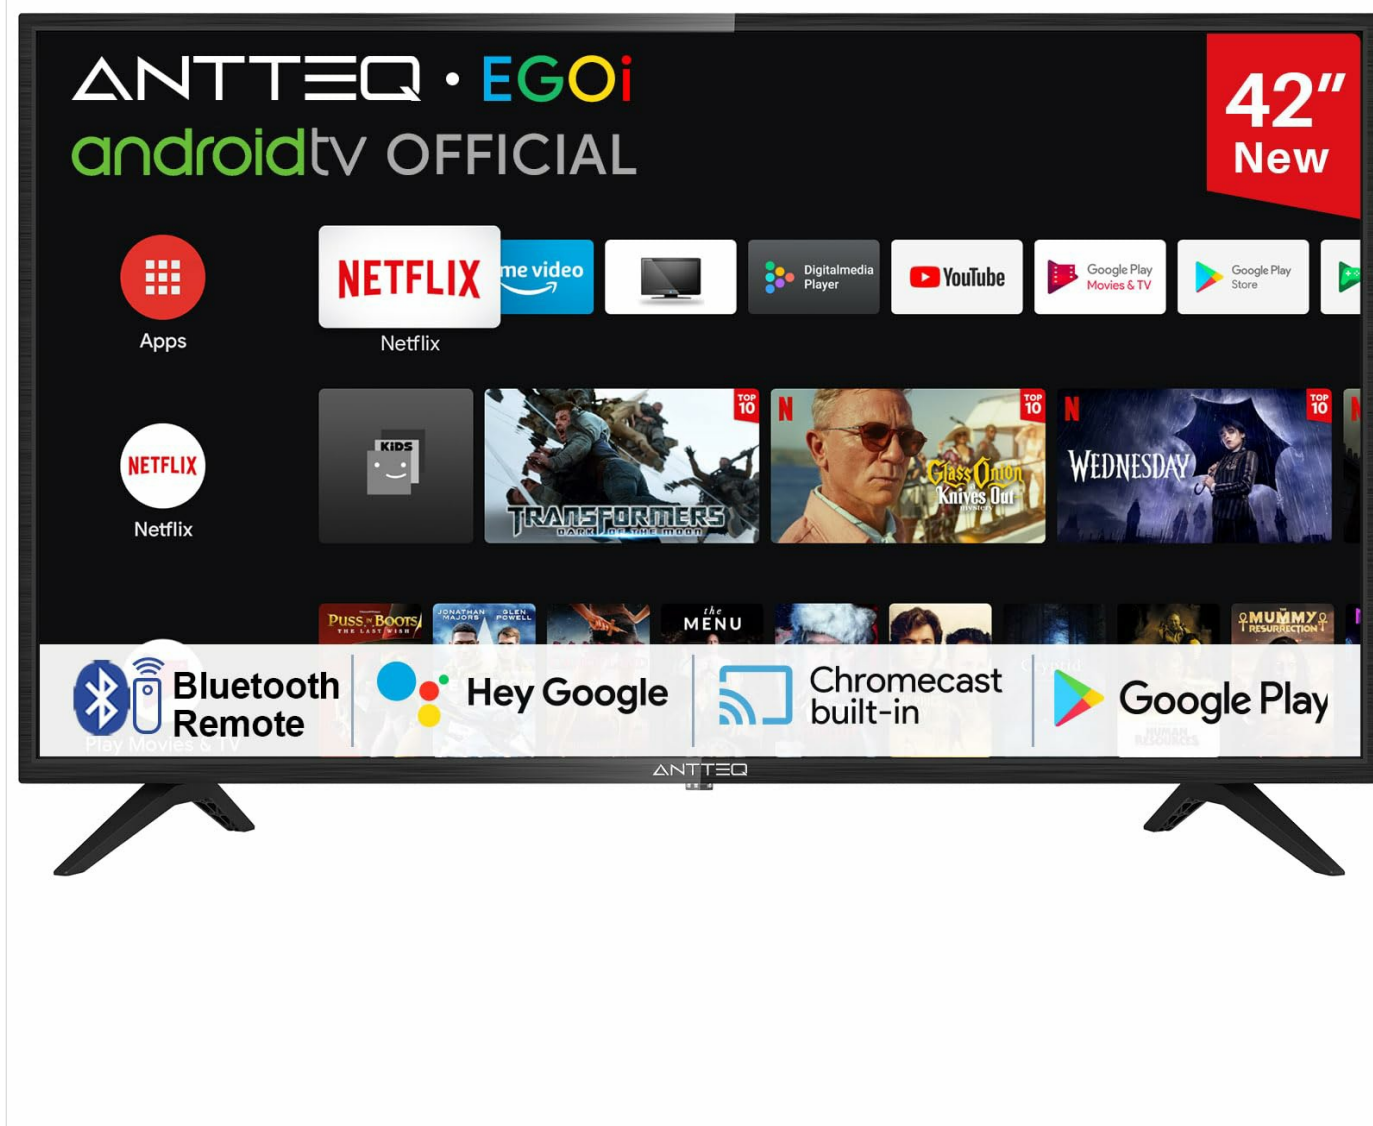


Figure 1: Antteq AG42F3 42-inch Android Google TV

SAFETY INFORMATION

Observe the following safety precautions to prevent fire, electric shock, or injury:

- **Power Supply:** Connect the TV only to an AC power source within the specified voltage range. Ensure the power cord is not damaged or pinched.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow to prevent overheating.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Mounting:** Ensure the TV is installed on a stable surface or securely mounted to a wall using appropriate brackets. Follow all instructions for stand assembly or wall mounting.
- **Lightning:** During lightning storms or when unused for long periods, unplug the TV from the wall outlet and disconnect the

antenna.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Antteq AG42F3 42-inch Android Google TV
- Remote Control (requires 2 AAA batteries, not always included)
- Power Cable
- TV Stand (2 pieces) and Screws
- User Manual (this document)
- Quick Start Guide

SETUP

1. Unpacking and Stand Installation

Carefully remove the TV from its packaging. Place the TV face down on a soft, flat surface to avoid screen damage. Attach the two stand pieces to the bottom of the TV using the provided screws. Ensure the stand is securely fastened before placing the TV upright.

2. Connecting Peripherals

Connect your external devices to the appropriate ports on the rear or side of the TV. Refer to the diagram below for port locations:

CALCUL DE L'INDICE DE RÉPARABILITÉ ET PRÉSENTATION DES PARAMÈTRES AYANT PERMIS DE L'ÉTABLIR		Télévision			
FICHE D'INFORMATION À TRANSMETTRE AUX DEMANDEURS (cf. Article L. 541-9-2 du Code de l'environnement)					
Date du calcul	2025/2/28				
Nom ou marque commerciale du producteur ou de l'importateur	Inno Technology B.V.				
Adresse du producteur ou de l'importateur	Jan Hilgersweg 14, 5657 ES Eindhoven, the Netherlands				
Référence du modèle donnée par le producteur ou l'importateur	AG42F3				
Critère	Sous-critère	Note du sous-critère sur 10	Coefficient du sous critère	Note du critère sur 20	Total des notes des critères sur 100
CRITÈRE 1 : DOCUMENTATION	1.1 Durée de disponibilité de la documentation technique et relative aux conseils d'utilisation et d'entretien	7.7	2	15.4	66.1
CRITÈRE 2 : DÉMONTABILITÉ, ACCÈS, OUTILS, FIXATIONS	2.1 Facilité de démontage des pièces de la liste 2*	7.5	1	16.0	
	2.2 Outils nécessaires (liste 2)	10.0	0.5		
	2.3 Caractéristiques des fixations entre les pièces de la liste 1** et de la liste 2	7.0	0.5		
CRITÈRE 3 : DISPONIBILITÉ DES PIÈCES DÉTACHÉES	3.1 Durée de disponibilité des pièces de la liste 2	8.0	1	14.7	
	3.2 Durée de disponibilité des pièces de la liste 1	10.0	0.5		
	3.3 Délais de livraison des pièces de la liste 2	3.3	0.3		
	3.4 Délais de livraison des pièces de la liste 1	3.3	0.2		
CRITÈRE 4 : PRIX DES PIÈCES DÉTACHÉES	4. Rapport prix des pièces de la liste 2 sur prix de l'équipement neuf	0	2	0	
CRITÈRE 5 : CRITÈRE SPÉCIFIQUE	5.1 Accessibilité compteur d'usage	10.0	1	20.0	
	5.2 Assistance à distance sans frais	10.0	0.5		
	5.3 Possibilité de réinitialisation logicielle	10.0	0.5		
Note de l'indice sur 10					6.6
*liste 2 : liste des 3 à 5 pièces détachées au maximum (selon la catégorie d'équipements concernée) dont la casse ou les pannes sont les plus fréquentes ; **liste 1 : liste de 10 autres pièces détachées au maximum (selon la catégorie d'équipements concernée) dont le bon état est nécessaire au fonctionnement de l'équipement.					

Figure 2: TV Dimensions and Connection Ports

- **HDMI (x3):** Connect Blu-ray players, game consoles, or other HDMI-enabled devices.

- **USB (x2):** For connecting USB storage devices to play media files.
- **AV Input:** For older devices using composite video and stereo audio cables.
- **Earphone Output:** For connecting headphones.
- **RJ45 (Ethernet):** For a wired internet connection.
- **Coaxial Output:** For digital audio output to a sound system.
- **Antenna (RF) Input:** For connecting a terrestrial antenna (DVB-T2).
- **LNB IN (Satellite):** For connecting a satellite dish (DVB-S2).
- **CI/CI+ Slot:** For inserting a Conditional Access Module (CAM) and smart card for encrypted channels.

3. Initial Power On and First-Time Setup

After connecting all necessary cables, plug the power cord into an electrical outlet. Press the power button on the remote control or on the TV. The TV will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Network Connection:** Connect to your Wi-Fi network or use a wired Ethernet connection.
3. **Google Account:** Sign in with your Google account to access Google Play Store, Google Assistant, and other smart features.
4. **Channel Scan:** The TV will prompt you to scan for available channels via DVB-C, DVB-S2, or DVB-T2.
5. **Privacy Settings:** Review and adjust privacy settings as desired.

OPERATING YOUR TV

1. Remote Control Functions

The included remote control allows you to navigate the TV's interface and access various features. Insert 2 AAA batteries (not included) into the remote control, observing polarity.



Stream your favorite shows and movies to the big screen with the built-in Chromecast



Figure 3: Remote Control with Voice Functionality

- **Power Button:** Turns the TV on or off.
- **Google Assistant Button:** Press to activate voice commands.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate menus and select options.
- **Volume Up/Down:** Adjust the sound level.
- **Channel Up/Down:** Change TV channels.
- **Home Button:** Returns to the Android TV home screen.
- **Back Button:** Returns to the previous screen or menu.
- **App Shortcut Buttons:** Direct access to pre-installed apps like Netflix, YouTube, Prime Video.

2. Smart TV Features (Android TV / Google TV)

Your Antteq AG42F3 TV runs on Android TV with Google TV interface, providing access to a wide range of applications and services.

Voice remote control

"Show me the weather"

"Play music"

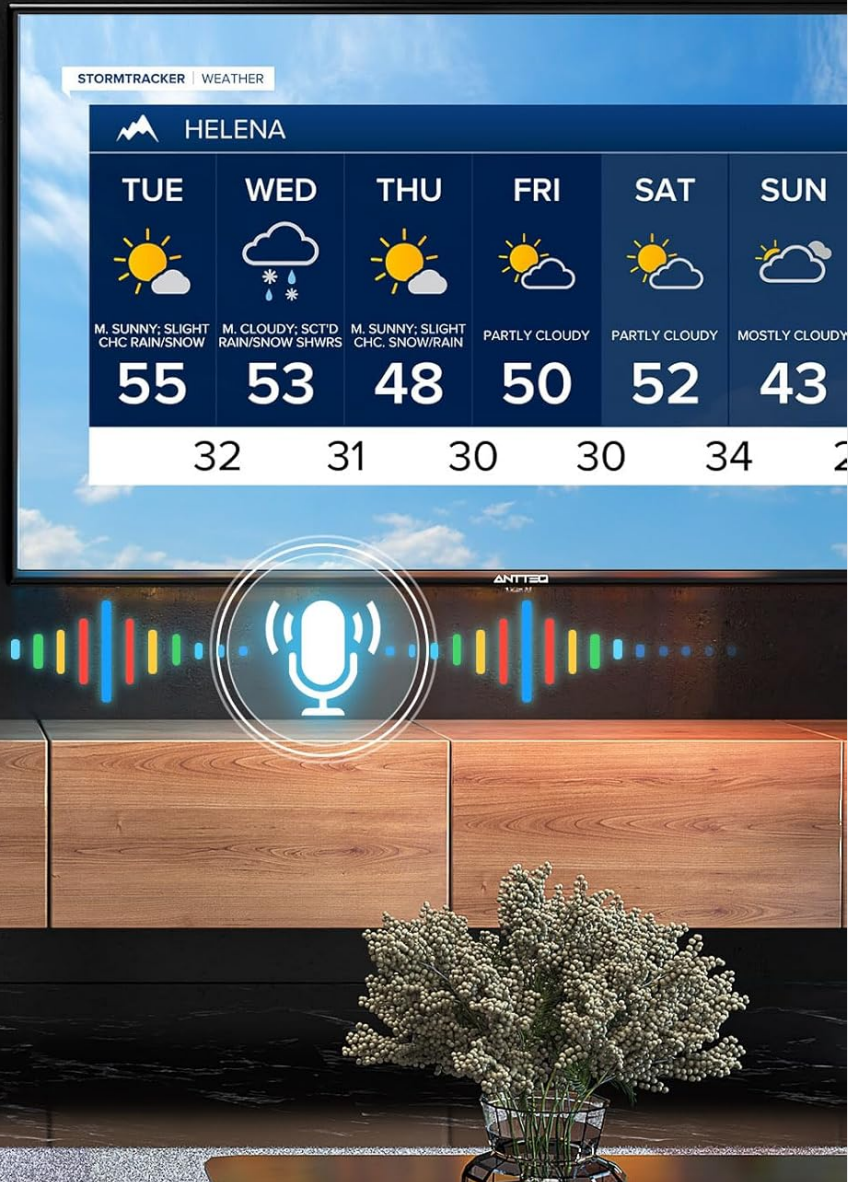


Figure 4: Smart TV Home Screen with Apps

- **Accessing Apps:** From the home screen, you can launch pre-installed applications such as Netflix, Prime Video, and YouTube. Visit the Google Play Store to download thousands of additional apps and games.
- **Google Assistant:** Press the Google Assistant button on your remote and speak into the microphone. You can ask it to find movies, check the weather, control smart home devices, or open applications.
- **Chromecast Built-in:** Stream content (photos, videos, music) from your compatible smartphone, tablet, or computer directly to your TV. Ensure your device and TV are on the same Wi-Fi network.

Dolby Audio

Exceptional audio fidelity Immersive surround sound



Figure 5: Chromecast Functionality

3. Input Source Selection

To switch between connected devices (e.g., HDMI 1, USB, TV tuner), press the 'Input' or 'Source' button on your remote control and select the desired input from the on-screen menu.

4. Picture and Sound Settings

Access the TV's settings menu to adjust picture modes (Standard, Dynamic, Movie, etc.), brightness, contrast, and color. For audio, you can select sound modes and adjust equalizer settings. The TV supports Dolby Audio for enhanced sound quality.

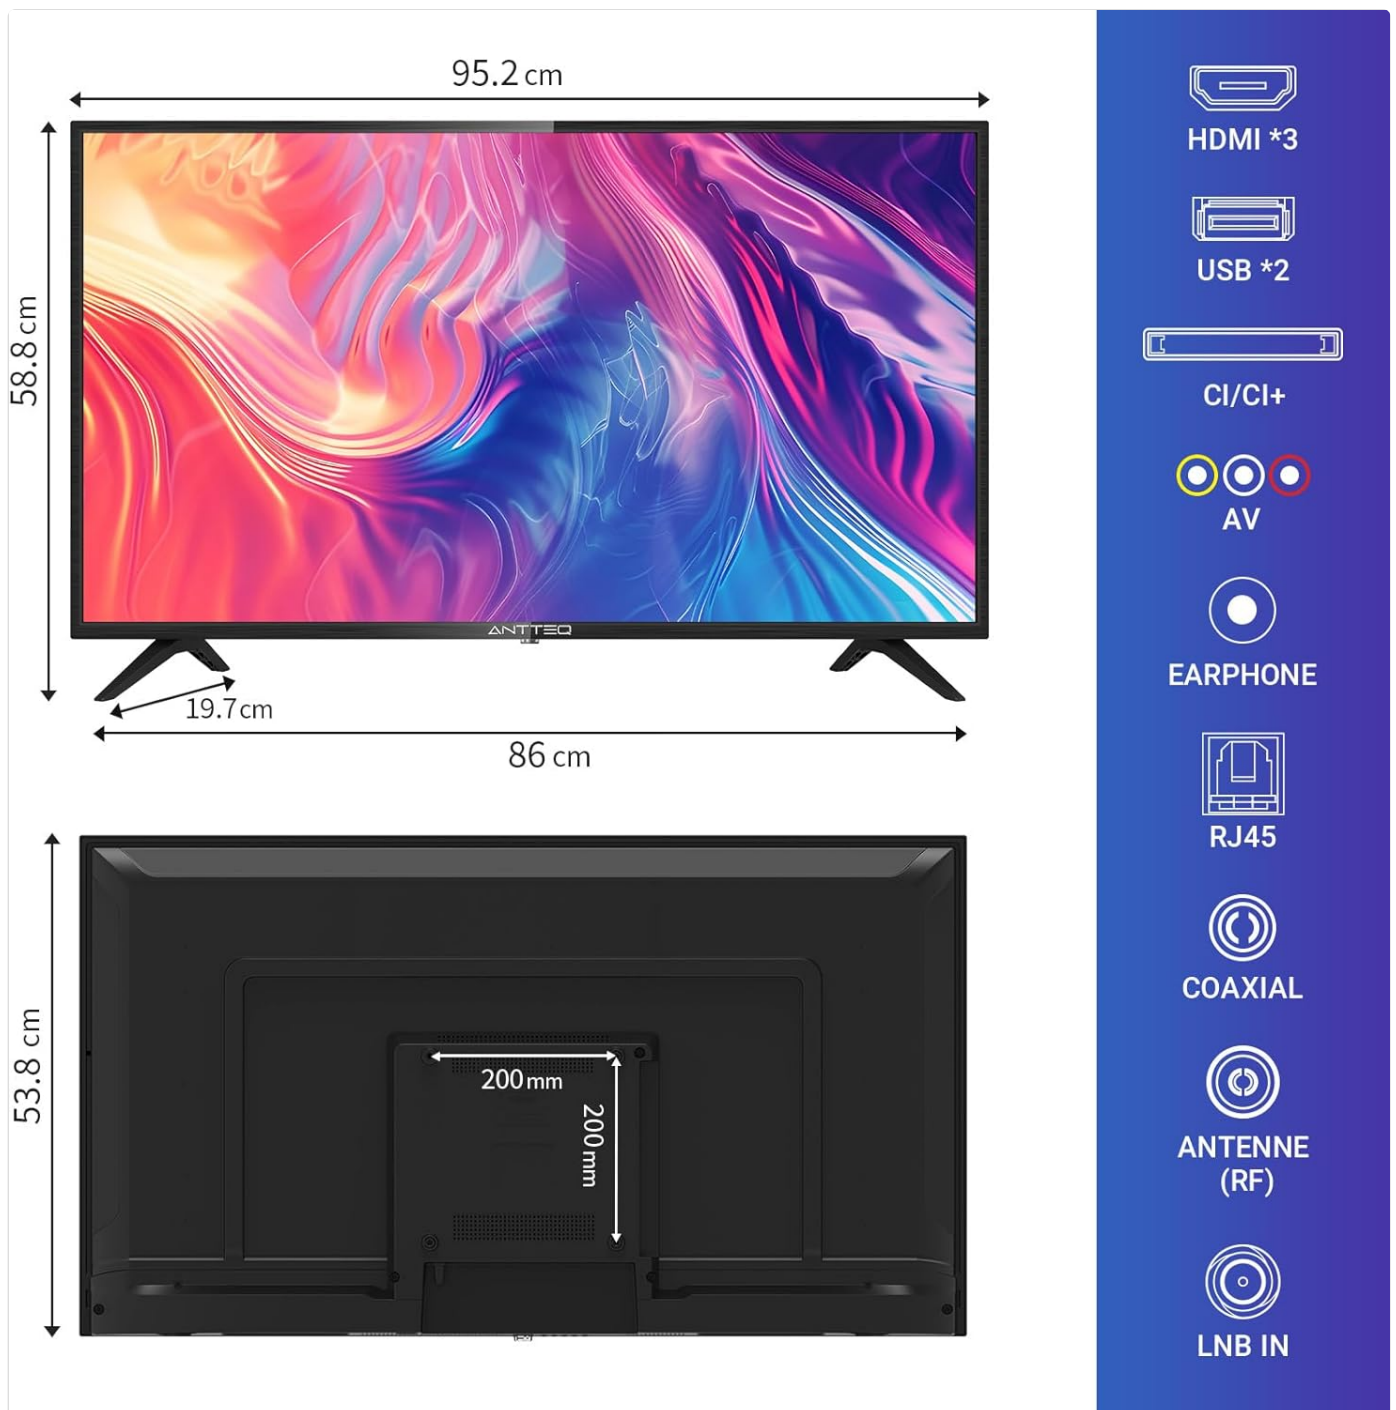


Figure 6: Dolby Audio Experience

5. Triple Tuner (DVB-C/S2/T2)

The integrated triple tuner allows reception of digital terrestrial (DVB-T2), cable (DVB-C), and satellite (DVB-S2) broadcasts. After connecting the appropriate antenna or satellite dish, perform a channel scan through the TV's settings menu to find available channels.

MAINTENANCE

1. Cleaning

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water. Never spray liquid directly onto the screen. For the TV body, use a soft, dry cloth. Avoid using abrasive cleaners or solvents.

2. Software Updates

Your TV may receive software updates to improve performance and add new features. Ensure your TV is connected to the

internet. You can check for updates manually in the TV's settings menu under 'System' or 'About'.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power / TV does not turn on	Check if the power cord is securely plugged into the TV and the wall outlet. Try a different outlet. Ensure batteries in the remote are functional.
No picture / Poor picture quality	Verify the correct input source is selected. Check cable connections (HDMI, antenna). Adjust picture settings. For antenna/satellite, rescan channels.
No sound / Low sound	Check volume level and mute status. Ensure external audio devices are connected correctly. Adjust sound settings.
Remote control not working	Replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled on the TV. Check your router and modem. Re-enter the Wi-Fi password. Try restarting your router.
Smart features not responding	Ensure the TV is connected to the internet. Try restarting the TV. Check for software updates.

SPECIFICATIONS

Key technical specifications for the Antteq AG42F3 TV:

- **Brand:** Antteq
- **Model Number:** AG42F3
- **Screen Size:** 42 Inches (106 cm)
- **Display Technology:** LED
- **Resolution:** 1080p (Full HD)
- **Refresh Rate:** 60 Hz
- **Operating System:** Google TV (Android TV)
- **Connectivity:** Ethernet WLAN (Wi-Fi), Bluetooth
- **Inputs:** 3x HDMI, 2x USB, 1x AV, 1x Antenna (RF), 1x LNB IN (Satellite), 1x CI+ Slot
- **Outputs:** 1x Earphone, 1x Coaxial
- **Special Features:** Multiple Voice Assistance (Google Assistant), Chromecast Built-in, Triple Image Enhancement, Dolby Audio
- **Color:** Black
- **Product Dimensions (with stand):** Approximately 95.5 cm (W) x 19 cm (D) x 57.8 cm (H)
- **Energy Efficiency Class:** F

WARRANTY AND SUPPORT

Your Antteq AG42F3 TV comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Antteq website. For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact Antteq customer support through their official channels.

