

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FanttikRide](#) /

› [FanttikRide C9 Pro Electric Scooter User Manual](#)

FanttikRide C9 Pro

FanttikRide C9 Pro Electric Scooter User Manual

Model: C9 Pro

1. INTRODUCTION

Thank you for choosing the FanttikRide C9 Pro Electric Scooter. This manual provides essential information for the safe operation, assembly, and maintenance of your new electric scooter. Please read this manual thoroughly before first use to ensure optimal performance and safety. This scooter is designed for recreational use by children aged 8-12, with a maximum weight limit of 132 lbs (60 kg).

2. SAFETY INFORMATION

Your safety is paramount. Always follow these guidelines to prevent injury or damage.

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads) when riding.
- Ensure all bolts and fasteners are tightened before each ride.
- Do not ride in wet conditions, on uneven surfaces, or in heavy traffic.
- Maintain a safe distance from other riders and obstacles.
- The scooter is designed for one rider only. Do not carry passengers.
- Children should always be supervised by an adult while riding.
- Familiarize yourself with local laws and regulations regarding electric scooter use.
- Use the rear foot brake for controlled stopping.

3. PACKAGE CONTENTS

Please check the box for the following items:

- FanttikRide C9 Pro Electric Scooter
- Charging Adapter
- User Manual
- Necessary Tools (if any assembly required)

4. SETUP AND ASSEMBLY

The FanttikRide C9 Pro Electric Scooter is designed for easy setup. It comes largely pre-assembled.

1. **Unfolding the Scooter:** Gently pull the handlebar stem upwards until it clicks into place. Ensure the folding mechanism is securely locked.
2. **Adjusting Handlebar Height:** The handlebar height can be adjusted to three positions: 32.5 inches, 35 inches, and 37.5 inches. Locate the quick-release clamp on the handlebar stem, open it, adjust the handlebar to the desired height, and then securely close the clamp. Ensure the handlebar is firmly in place before riding.
3. **Initial Charge:** Before first use, fully charge the scooter's battery. Connect the charging adapter to the charging port on the scooter and then to a power outlet. The LED indicator on the charger will change when fully charged.

3 ADJUSTABLE HEIGHTS



Heights

32.5in / 35in / 37.5in



Rider

4.0ft-5.3ft



Age

8 Years+

Image: The FanticRide C9 Pro features 3 adjustable handlebar heights (32.5in, 35in, 37.5in) to accommodate riders from 4.0ft to 5.3ft tall, suitable for ages 8 and above.

EASY TO FOLD AND CARRY

Folded Size 29" x 14" x 10"



Image: The scooter is easy to fold and carry, with folded dimensions of 29" x 14" x 10", making it highly portable for storage or transport.

5. OPERATING INSTRUCTIONS

Learn how to operate your FanttikRide C9 Pro Electric Scooter.

- Power On/Off:** Press and hold the power button on the LED display to turn the scooter on or off.
- Speed Modes:** The scooter offers three speed selections: 5 mph (Economical), 8 mph (Normal), and 10 mph (Sport). Short press the power button to cycle through these speed modes. The current speed mode will be indicated on the LED display.

3. **LED Display:** The integrated LED display shows important information including battery power, current speed mode (E, N, S), and riding speed.
4. **Activating the Motor:** To engage the motor, kick off with one foot to gain a little speed (around 1.8 mph), then press the accelerator button. The motor will then assist your ride.
5. **Rainbow LED Lights:** The scooter features dynamic rainbow LED lights next to the pedals. These lights activate automatically when the scooter is in use, enhancing visibility and fun.
6. **Braking:** To slow down or stop, apply pressure to the rear fender brake with your foot. This provides safe and fast braking.

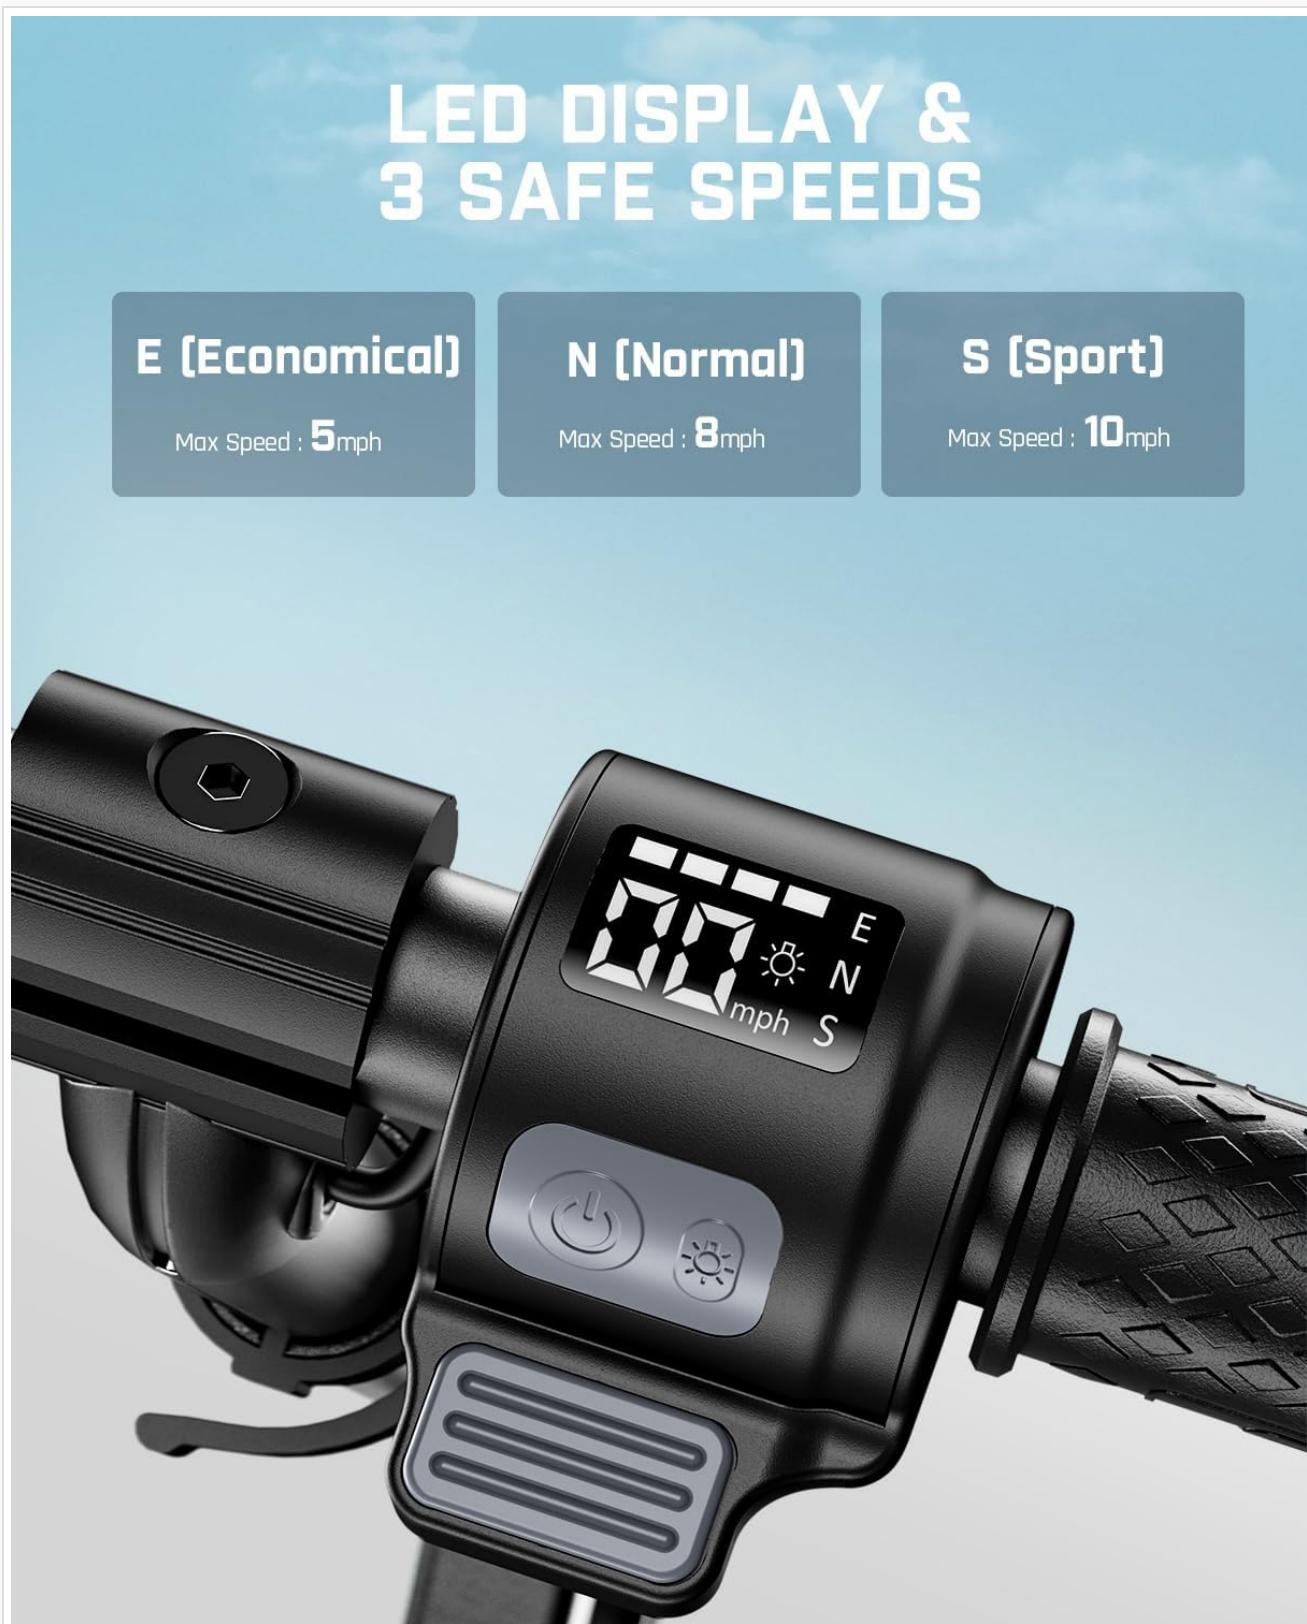


Image: The LED display clearly shows the battery level, current speed mode (Economical, Normal, Sport), and real-time riding

speed.

VISUAL BATTERY LEVEL & 2 SPEEDS



Short Press to Adjust Speed



100%

Battery Percentage



Image: A visual battery level indicator is located on the deck, providing a clear percentage of remaining battery life.

RIDE ON THE RAINBOW

5 Lights Modes



Image: The scooter features vibrant rainbow LED lights along the side of the deck, offering 5 different light modes for enhanced visibility and a fun riding experience.



REAR FOOT BRAKE DESIGN



132 Lbs Max Load



Sturdy Aluminum Frame

Image: The scooter is equipped with a reliable rear foot brake design, allowing riders to safely and quickly stop by pressing down on the rear fender.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- Cleaning:** Wipe the scooter with a damp cloth. Do not use harsh chemicals or spray water directly onto electrical components.
- Battery Care:** Charge the battery regularly, even if not in use, to maintain its health. Do not allow the battery to fully discharge for extended periods. Store in a cool, dry place.

- **Tires:** The scooter uses solid rubber wheels, which are maintenance-free and provide smooth rides. Regularly check for any damage or debris.
- **Brakes:** Periodically check the effectiveness of the rear foot brake. Ensure it responds promptly.
- **Fasteners:** Check all screws and bolts periodically to ensure they are tight.



Image: The FanttikRide C9 Pro is equipped with durable rubber wheels, designed to provide a smooth and stable riding experience on various surfaces.

7. TROUBLESHOOTING

If you encounter issues with your scooter, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Scooter does not turn on	Low battery; Power button not pressed correctly	Charge the battery fully; Press and hold the power button firmly.
Motor not engaging	Not enough initial speed; Accelerator not pressed	Kick off to gain speed (approx. 1.8 mph) before pressing the accelerator.
Reduced range/speed	Low battery; Overweight rider; Uphill riding; Rough terrain	Charge battery; Ensure rider is within weight limit; Ride on flat, smooth surfaces.
Brake not effective	Debris in brake mechanism; Worn brake	Clear any debris; Contact support if brake is worn.

8. SPECIFICATIONS

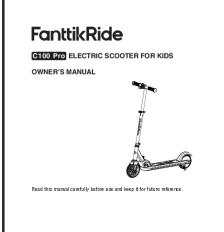
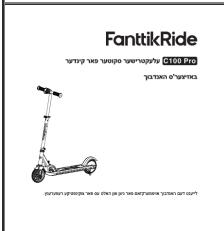
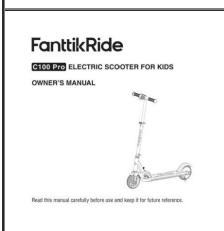
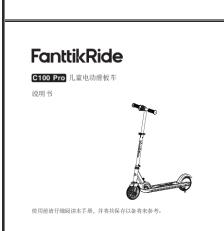
Feature	Detail
Model Name	C9 Pro
Brand	FanttikRide
Color	Black
Weight Limit	132 Pounds (60 kg)
Number of Wheels	2
Wheel Material	Rubber
Frame Material	Aluminum
Handlebar Type	Adjustable (32.5"/35"/37.5")
Brake Style	Rear Braking (Foot Brake)
Maximum Distance Range	5 Miles
Recommended Age	8+ Years
Motor Power	130W Brushless Motor
Folded Dimensions	29" x 14" x 10"

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official FanttikRide website. Keep your purchase receipt as proof of purchase.

FanttikRide Official Store: [Visit the FanttikRide Store on Amazon](#)

Related Documents - C9 Pro

 <p>FanttikRide C100 Pro ELECTRIC SCOOTER FOR KIDS OWNER'S MANUAL Read this manual carefully before use and keep it for future reference.</p>	<p>FanttikRide C100 Pro Electric Scooter for Kids Owner's Manual</p> <p>This owner's manual provides comprehensive instructions for the FanttikRide C100 Pro electric scooter for kids, covering safety warnings, product overview, assembly, charging, riding, maintenance, troubleshooting, and warranty information.</p>
 <p>FanttikRide C100 Pro ELECTRIC SCOOTER FOR KIDS OWNER'S MANUAL Read this manual carefully before use and keep it for future reference.</p>	<p>FanttikRide C100 Pro Electric Scooter for Kids - Owner's Manual & Safety Guide</p> <p>Comprehensive owner's manual for the FanttikRide C100 Pro electric scooter for kids, covering assembly, operation, safety, maintenance, troubleshooting, and warranty information.</p>
 <p>FanttikRide C100 Pro ELECTRIC SCOOTER FOR KIDS OWNER'S MANUAL Read this manual carefully before use and keep it for future reference.</p>	<p>FanttikRide C100 Pro Electric Scooter for Kids Owner's Manual</p> <p>Comprehensive owner's manual for the FanttikRide C100 Pro Electric Scooter for Kids, covering safety warnings, package contents, product overview, assembly, charging, riding instructions, maintenance, troubleshooting, and warranty information.</p>
 <p>FanttikRide C100 Pro SCOOTER ELÉCTRICO PARA NIÑOS MANUAL DEL PROPIETARIO Los de este manual es obligatorio leer de seguridad y guardar para su consulta posterior.</p>	<p>Manual del Propietario del Scooter Eléctrico FanttikRide C100 Pro</p> <p>Guía completa del usuario para el scooter eléctrico FanttikRide C100 Pro, cubriendo seguridad, ensamblaje, carga, conducción, mantenimiento y especificaciones.</p>
 <p>FanttikRide C100 Pro 儿童电动滑板车 说明书 使用说明(请仔细阅读本手册,并将其存放在干燥处)</p>	<p>FanttikRide C100 Pro Electric Scooter User Manual and Safety Guide</p> <p>Comprehensive user manual for the FanttikRide C100 Pro electric scooter, covering assembly, operation, safety instructions, maintenance, troubleshooting, and warranty information. Learn how to safely ride and care for your C100 Pro scooter.</p>
 <p>FanttikRide C100 Pro MONOPATINETTO ELETTRICO PER BAMBINI MANUALE DEL PROPIETARIO Leggere questo manuale con attenzione e conservare per riferimenti futuri.</p>	<p>FanttikRide C100 Pro Electric Scooter User Manual</p> <p>Comprehensive user manual for the FanttikRide C100 Pro electric scooter for kids, covering safety guidelines, package contents, product overview, assembly, charging, riding instructions, maintenance, specifications, troubleshooting, warranty information, and FCC compliance.</p>