

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Chipolino](#) /

› Chipolino Twin Tricycle Hip Hop Instruction Manual

Chipolino TRKHH0234AL

Chipolino Twin Tricycle Hip Hop Instruction Manual

Model: TRKHH0234AL

1. INTRODUCTION

Thank you for choosing the Chipolino Twin Tricycle Hip Hop. This manual provides essential information for the safe assembly, operation, and maintenance of your tricycle. Please read it thoroughly before first use and keep it for future reference. This tricycle is designed for two children, aged 18 months and older, with a maximum combined weight of 40 kg.

2. SAFETY INFORMATION

- **Age Recommendation:** Suitable for children from 18 months up to 5 years.
- **Weight Limit:** The maximum total weight for both children is 40 kg (20 kg per child). Do not exceed this limit.
- **Adult Supervision:** Always ensure children are under constant adult supervision while using the tricycle.
- **Push Handle:** The parent push handle is for steering and pushing only. It is not designed for lifting the tricycle with children in it.
- **Safety Belts:** Always secure children with the provided safety belts on both seats.
- **Front Bar:** Ensure the front bar is properly closed and secured before riding.
- **Foot Protection:** The wheel cover on the front wheel is designed to prevent children's feet from getting pinched by the pedals. Ensure it is correctly installed.
- **Assembly:** Adult assembly is required. Ensure all parts are correctly and securely fastened before use.
- **Environment:** Use the tricycle on flat, even surfaces. Avoid slopes, stairs, or uneven terrain.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Tricycle Frame
- Front Wheel with Mudguard and Wheel Cover

- Rear Wheels (2)
- Seats (2) with Soft Textile Covers and Safety Belts
- Sun Canopies (2) with Sun Visors
- Parent Push Handle
- Front Bars (2)
- Foldable Footrests (2 sets)
- Storage Basket (rear)
- Small Basket (handlebar)

4. ASSEMBLY AND SETUP

The Chipolino Twin Tricycle Hip Hop requires adult assembly. Follow the instructions carefully to ensure proper and safe setup.

1. **Frame Assembly:** Connect the main frame components as per the visual guide.
2. **Wheel Installation:** Attach the front wheel, ensuring the mudguard and wheel cover are correctly positioned. Install the two rear wheels securely.
3. **Seat Attachment:** Mount both seats onto the frame. Ensure they click into place for secure rotation.
4. **Handlebar and Push Handle:** Install the child's handlebar and the parent push handle.
5. **Canopy Installation:** Attach the two sun canopies to their respective seats.
6. **Footrests and Baskets:** Install the foldable footrests, the rear storage basket, and the small handlebar basket.



Image 1: Fully assembled Chipolino Twin Tricycle Hip Hop, showing its overall structure and components.

5. OPERATING INSTRUCTIONS

5.1. Parent Control Mode

The tricycle can be pushed and steered by an adult using the adjustable parent push handle located at the rear. This mode is ideal for younger children or when navigating crowded areas.

5.2. Child-Driven Mode

The front child can propel the tricycle using the pedals. Ensure the child's feet are properly placed on the

pedals and the wheel cover is in position to prevent pinching.

5.3. Seat Rotation (360°)

Both seats can be rotated 360 degrees to allow children to face forward, backward, or towards each other. To rotate a seat, disengage the locking mechanism (refer to the specific lever or button near the seat base) and turn the seat to the desired position until it locks securely.



Image 2: Tricycle with both seats oriented to face forward, allowing children to view the direction of travel.



Image 3: Tricycle with seats rotated to face each other, facilitating interaction between the children.



Image 4: Tricycle with seats rotated to face backward, allowing children to face the adult pushing the tricycle.

5.4. Sun Canopies

Each seat is equipped with a large, foldable sun canopy with a sun visor. Adjust the canopy to provide optimal shade for your child. They can be folded back when not needed.

5.5. Foldable Footrests

The tricycle features foldable and movable footrests for both seats. These can be extended for younger children who cannot reach the pedals or folded away when children are pedaling.

5.6. Brake Pedals

Brake pedals are located on the rear wheels. Press down on these pedals to engage the brakes and secure the tricycle when stationary.

6. MAINTENANCE

- **Cleaning:** Wipe the tricycle frame and plastic parts with a damp cloth and mild soap. Do not use abrasive cleaners. The soft textile covers on the seats can be spot cleaned.
- **Inspection:** Regularly check all screws, bolts, and fasteners to ensure they are tight and secure. Inspect the wheels, pedals, and steering mechanism for any signs of wear or damage.
- **Storage:** Store the tricycle in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Lubrication:** Periodically apply a small amount of lubricant to moving parts like wheel axles and pedal mechanisms if they become stiff.



Image 5: Detailed view highlighting the front wheel with its cover, the rear storage basket, and the design of the sun canopy.

7. TROUBLESHOOTING

- **Tricycle not moving smoothly:** Check for any obstructions in the wheels or pedals. Ensure all wheel axles are clean and free of debris.
- **Seats difficult to rotate:** Verify that the locking mechanism is fully disengaged. Clean any dirt or debris from the rotation mechanism.
- **Loose parts:** If any parts feel loose, refer to the assembly instructions and tighten all fasteners appropriately. Do not overtighten.
- **Brakes not engaging:** Inspect the brake pedals and the rear wheel brake mechanism for any damage or misalignment.

If you encounter issues not covered here, please contact customer support or your retailer.

8. SPECIFICATIONS

Feature	Detail
Model Number	TRKHH0234AL
Recommended Age	18 months - 5 years
Maximum Weight Capacity	40 kg (20 kg per child)
Product Dimensions (L x W x H)	131 x 49 x 95 cm
Item Weight	9.4 kg
Material	Metal frame, EVA tyres
Seat Rotation	360 degrees
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims. For technical support or spare parts, please contact Chipolino customer service or your local distributor.