

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZMISHIBO](#) /

› [ZMISHIBO 52-Inch Ceiling Fan Instruction Manual \(Model Y23FSD0046-4801\)](#)

ZMISHIBO Y23FSD0046-4801

ZMISHIBO 52-Inch Ceiling Fan Instruction Manual

Model: Y23FSD0046-4801

PRODUCT OVERVIEW

The ZMISHIBO 52-inch ceiling fan is designed for both indoor and covered outdoor spaces, offering efficient air circulation with a quiet, reversible DC motor. It features a modern design with double-sided blades, allowing for a brushed nickel or pure white finish. The fan is controlled via a remote, providing 6 wind speeds, a reversible mode for year-round comfort, and a 1/2/4-hour timer function.

- **Indoor and Outdoor Use:** Damp-rated for versatile placement in patios, bedrooms, living rooms, and porches. Includes 4" and 8" downrods for optimal air circulation in rooms up to 10ft. x20ft.
- **Double-Sided Blades:** Features reversible blades with a pure white finish on one side and brushed nickel on the other, allowing customization to match various decor styles.
- **6 Wind Speeds Remote Control:** Offers convenient control over 6 fan speeds, reversible mode, and a 1/2/4-hour timer. The remote can be set to mute for quiet operation.
- **Quiet Reversible DC Motor:** A pure copper DC motor ensures smooth, energy-saving operation with low noise levels (below 35dB). The reversible function provides downward airflow for cooling in summer and upward airflow for warmth circulation in winter.

SAFETY INFORMATION

Please read and understand all instructions before beginning installation. Failure to follow these instructions could result in electric shock, fire, or personal injury.

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes.
- The mounting structure must be capable of supporting the fan's weight (7.3 lbs).
- Do not operate the fan with damaged blades or housing.
- Keep hands, clothing, and other objects away from the fan blades when the fan is in operation.
- This fan is damp-rated, suitable for covered outdoor areas, but not for direct exposure to rain or water.

PACKAGE CONTENTS

Verify that all components are present before proceeding with installation:

- Ceiling Fan Motor Housing
- Fan Blades (3)
- Downrods (4-inch and 8-inch)
- Mounting Bracket
- Canopy
- Remote Control with Wall Cradle
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual

INSTALLATION

Follow these general steps for installing your ZMISHIBO ceiling fan. Refer to the detailed diagrams in the included printed manual for specific instructions.

1. Prepare for Installation

1. Turn off power at the main circuit breaker.
2. Clear the installation area and ensure you have all necessary tools.
3. Determine the appropriate downrod length (4-inch for low ceilings, 8-inch for high ceilings) and assemble it to the motor housing.



Image: Fan dimensions and available downrod lengths (4-inch and 8-inch) for different ceiling heights.

2. Mount the Fan

1. Secure the mounting bracket to the ceiling junction box. Ensure the junction box is securely fastened to the building structure.
2. Hang the fan assembly onto the mounting bracket.

Easy to Install



20m to Finish



Less electrician fee



Image: Illustration of downrod mount and angled mount options for installation.

3. Electrical Connections

1. Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the manual. Use appropriate wire nuts.
2. Ensure all connections are secure.

4. Attach Blades and Canopy

1. Attach the fan blades to the motor housing. Choose either the brushed nickel or pure white side facing down.
2. Slide the canopy up and secure it to the mounting bracket.



Damp Rated

*Not suitable for uncovered outdoor



Image: A fully installed ceiling fan, highlighting the straightforward installation process.

This fan is damp-rated, making it suitable for covered outdoor locations such as patios and porches, provided it is not directly exposed to rain.



Image: A ZMISHIBO ceiling fan installed on a covered outdoor patio, demonstrating its damp-rated suitability.

OPERATION

Your ZMISHIBO ceiling fan is operated using the included remote control. Ensure the remote has batteries installed.

Remote Control Functions



Image: A person using the remote control to operate the ceiling fan, highlighting its multi-functionality.

- **Power On/Off:** Press the "FAN ON/OFF" button to turn the fan on or off.
- **Speed Control:** Use the numbered buttons (1-6) to select the desired fan speed. Speed 1 is the lowest, and Speed 6 is the highest.
- **Reversible Mode:** Press the "R" button to change the direction of the fan blades.
 - *Summer Mode (Downward Airflow):* Blades rotate counter-clockwise to create a cooling breeze.
 - *Winter Mode (Upward Airflow):* Blades rotate clockwise to circulate warm air near the ceiling.
- **Timer Setting:** Press the "1H", "2H", or "4H" button to set the fan to automatically turn off after 1, 2, or 4

hours, respectively.

- **Mute Function:** The remote control can be set to mute to eliminate beeping sounds during operation.



Image: Visual representation of the six adjustable wind speeds, from low soft wind to high cooling wind.



Image: Diagram illustrating the fan's reversible airflow for summer (downward) and winter (upward) modes.

Suitable Ceiling Height

Room Size: 10 ft×20 ft Large Room



Image: A visual showing the 1, 2, and 4-hour timer settings for automatic fan shut-off.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the power is off before cleaning.
- **Blade Inspection:** Periodically check the blade screws for tightness. Loose screws can cause wobbling and noise.
- **Motor:** The DC motor is permanently lubricated and requires no additional oiling.

TROUBLESHOOTING

If you experience issues with your fan, consult the following common troubleshooting steps:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired.	Check circuit breaker; Ensure all wire connections are secure; Replace remote battery or re-pair remote.
Fan wobbles	Loose blade screws; Improperly balanced blades; Loose mounting bracket.	Tighten all blade screws; Use a balancing kit (not included) if necessary; Ensure mounting bracket is securely fastened.
Noisy operation	Loose screws; Fan not properly seated; Obstruction in fan path.	Check and tighten all screws; Ensure fan is correctly installed and seated; Remove any obstructions.
Remote control not working	Dead battery; Remote not paired; Obstruction between remote and receiver.	Replace battery; Follow pairing instructions in the full manual; Ensure clear line of sight to fan receiver.

SPECIFICATIONS

Feature	Detail
Brand	ZMISHIBO
Model Name	Y23FSD0046-4801
Color	Brushed Nickel
Electric Fan Design	Ceiling Fan
Power Source	DC Motor
Style	Modern
Product Dimensions	52"D x 52"W x 10"H
Room Type	Bedroom, Living Room, Patio, Porch
Special Features	6 Wind Speeds, Reversible Motor, Timer Setting
Recommended Uses	Air Circulation

Feature	Detail
Mounting Type	Downrod Mount
Controller Type	Remote Control
Number of Speeds	6
Noise Level	35 Decibels
Wattage	25.2 watts
Number of Blades	3
Indoor/Outdoor Usage	Indoor, Outdoor (Damp Rated)
Material	Copper (Motor), Engineered Wood (Blades)
Item Weight	7.3 Pounds
Included Components	Remote

WARRANTY AND SUPPORT

ZMISHIBO provides a 2-year service for this ceiling fan. We are committed to customer satisfaction and offer support for any product-related issues.

- **2-Year Service:** Your purchase is covered by a 2-year service period.
- **Customer Support:** For any questions or issues, please contact ZMISHIBO customer service. We aim to provide prompt assistance.