

Manuals.plus /

› ZdalaMit /

› ZdalaMit NK12 Replacement Remote Control User Manual for Nakamichi NK12 Soundbar

ZdalaMit NK12

ZdalaMit NK12 Replacement Remote Control User Manual

For Nakamichi NK12 Soundbar

INTRODUCTION

This manual provides detailed instructions for the ZdalaMit NK12 Replacement Remote Control. It is designed to be a direct replacement for the original remote control of the Nakamichi NK12 Soundbar. No programming is required; simply install batteries to begin use.

SETUP: BATTERY INSTALLATION

The ZdalaMit NK12 Replacement Remote Control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Once batteries are installed, the remote is ready for immediate use with your compatible Nakamichi NK12 Soundbar.





Figure 1: Front view of the ZdalaMit NK12 Replacement Remote Control. The battery compartment is located on the reverse side.

This section details the functions of each button on your ZdalaMit NK12 Replacement Remote Control.





Figure 2: ZdalaMit NK12 Replacement Remote Control Button Layout.

Button	Function
Power ()	Turns the Nakamichi NK12 Soundbar on or off.
LED DIM	Adjusts the brightness of the soundbar's LED display.
TV-HDMI	Selects the HDMI input source for the soundbar.
AUX	Selects the Auxiliary input source.
LINE IN	Selects the Line In input source.
OPT	Selects the Optical input source.
Bluetooth (BT)	Selects the Bluetooth input source.
PAIR	Initiates or confirms Bluetooth pairing mode.
MUTE	Mutes or unmutes the soundbar's audio output.
Previous Track ()	Skips to the previous track during media playback.
Play/Pause ()	Plays or pauses media playback.
Next Track ()	Skips to the next track during media playback.
Volume Down (VOL-)	Decreases the soundbar's volume level.
Volume Up (VOL+)	Increases the soundbar's volume level.
MOVIE	Activates the Movie sound mode.
NEWS	Activates the News sound mode.
MUSIC	Activates the Music sound mode.
SPORTS	Activates the Sports sound mode.

COMPATIBILITY

This ZdalaMit NK12 Replacement Remote Control is specifically designed to be compatible with the following Nakamichi Soundbar model:

- **Nakamichi NK12 Soundbar**

No additional programming or setup is required beyond battery installation for these compatible models.

TROUBLESHOOTING

If you encounter issues with your ZdalaMit NK12 Replacement Remote Control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new 1.5V AAA alkaline batteries.
 - Check for any obstructions between the remote control and the soundbar's infrared receiver.
 - Ensure you are within the effective range of the soundbar.
- **Intermittent Functionality:**
 - This may indicate low battery power. Replace batteries.
 - Clean the remote's infrared emitter (the small LED at the front) and the soundbar's receiver window with a soft, dry cloth.
- **Specific Button Not Working:**
 - Ensure the remote is pointed directly at the soundbar.
 - If only one button is unresponsive, it might indicate a physical issue with that button.

If these steps do not resolve the issue, please contact customer support.

SPECIFICATIONS

Brand	ZdalaMit
Model	NK12 Replacement Remote Control
Compatible Devices	Nakamichi NK12 Soundbar
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Product Dimensions	5.9 x 1.57 x 0.55 inches
Item Weight	1.41 ounces
Color	Black

WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your ZdalaMit NK12 Replacement Remote Control, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact information.

While this manual provides general instructions, specific warranty terms may vary by retailer or region. Please retain your proof of purchase for any warranty claims.

