

[Manuals.plus](#) /

> [CKOZESE](#) /

> CKOZESE 22QT Air Fryer Toaster Oven Combo Instruction Manual

CKOZESE FM9011J

CKOZESE 22QT Air Fryer Toaster Oven Combo

INSTRUCTION MANUAL - MODEL: FM9011J

1. Product Overview

The CKOZESE 22QT Air Fryer Toaster Oven Combo is a versatile 5-in-1 kitchen appliance designed to simplify your cooking experience. This unit combines the functionalities of an air fryer, toaster, broiler, baker, and warmer, offering a wide range of cooking possibilities. With its generous 22-quart capacity, it is ideal for preparing meals for larger families and gatherings.



2. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- **Hot Surfaces:** The exterior surfaces of the air fryer toaster oven, including the door and side panels, will become hot during operation. Exercise extreme caution to prevent accidental burns. Always use oven mitts or pot holders when handling hot surfaces or accessories.
- **Ventilation:** Ensure proper ventilation around the appliance. Do not block any ventilation openings. Maintain a minimum distance of 4 inches (10 cm) from walls or other appliances.
- **Power Supply:** Connect the appliance only to a grounded electrical outlet with the correct voltage (1.1E+2 Volts).
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Cleaning:** Always unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

3. Product Features

- **22QT Family-Sized Capacity:** Designed to accommodate large meals, such as a 10-12 inch pizza, up to 22 chicken wings, a 5-pound whole chicken, or 3 pounds of fries.
- **5-In-1 Versatility:** Functions include Warm, Broil, Toast, Bake, and Air Fry, replacing multiple kitchen appliances.
- **Innovative Air Fry Technology:** Utilizes 360° rapid heat circulation for oil-free cooking, reducing oil usage by up to 85% compared to traditional deep frying while maintaining crispiness.
- **Easy-to-Use Knob Controls:** Intuitive 4-knob system for adjusting timer, temperature, function, and fan speed.
- **Premium Construction:** Made with food-grade stainless steel for safety, durability, and easy maintenance. Features a built-in cooking light and large double-wall insulated windows for monitoring food.

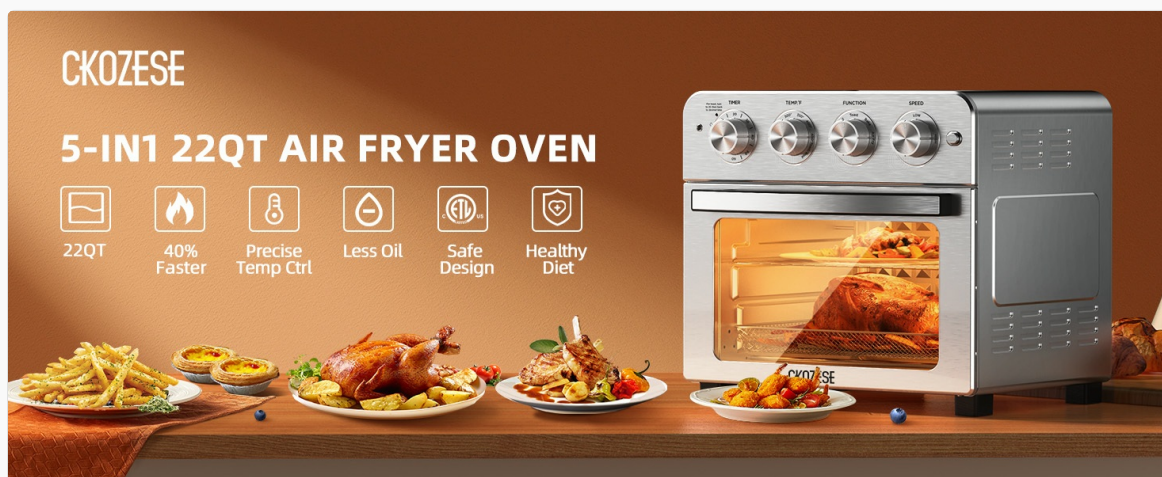


Figure 2: Key Features of the CKOZESE Air Fryer Oven

SPACIOUS 22QT CAPACITY

Ideal for stress-free gatherings
and lively parties



5-Lb Whole
Chicken



6 Pcs
Toaster



1.5 Lbs
of Fries



12-Inch
Pizza



**3-LAYER
GRILL SLOT**



Figure 3: Spacious 22QT Capacity for various foods

4. Parts and Accessories

The CKOZESE Air Fryer Toaster Oven comes with the following accessories:

- CKOZESE Air Fryer Oven (Main Unit)
- Crumb Tray
- Mesh Basket (Frying Basket)
- Baking Pan
- Wire Rack (Grill Rack)
- Tasty Recipes (Cookbook)

All detachable accessories are dishwasher-safe for convenient cleaning.



Figure 4: What's in the Package

5. Before First Use

1. **Unpack:** Carefully remove all packaging materials and accessories.
2. **Clean:** Wash all removable parts (baking pan, grill rack, frying basket, crumb tray) in warm, soapy water. Wipe the interior and exterior of the oven with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the oven on a stable, level, heat-resistant surface. Ensure there is adequate space (at least 4 inches) on all sides for proper ventilation.
4. **Initial Burn-Off:** Before cooking food, operate the oven empty for approximately 15 minutes at 400°F (200°C) on the 'Bake' function. This helps to burn off any manufacturing residues and odors. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.

6. Operating Instructions

Control Panel

The oven features four intuitive control knobs:

- **Timer Knob:** Sets the cooking time (up to 60 minutes). For toast, turn to 20 minutes then back to desired toast level. This knob also acts as the ON/OFF switch; turning it from 'OFF' activates the oven, and turning it to 'OFF' turns it off.
- **Temperature Knob:** Adjusts the cooking temperature from 100°F to 450°F.
- **Function Knob:** Selects the cooking mode: Warm, Broil, Toast, Bake, or Air Fry.
- **Speed Knob:** Controls the fan speed for convection cooking (Low or High).
- **Light Button:** Activates the interior cooking light for easy food monitoring.

KNOB CONTROL SIMPLE OPERATION

Rotate gently, adjust the temperature
& functions at will

200-450

• TEM (°F)

10-60

• TIME (min)

• **FUNCTION**

Warm Toast Broil
Bake Air Fry



Figure 5: Easy-to-Use Knob Controls

Cooking Functions

To begin cooking, place food on the appropriate accessory (baking pan, mesh basket, or wire rack) and insert it into the oven. Close the oven door.

1. **Select Function:** Turn the Function knob to your desired cooking mode (Warm, Broil, Toast, Bake, Air Fry).
2. **Set Temperature:** Turn the Temperature knob to the required temperature.
3. **Set Time:** Turn the Timer knob to the desired cooking duration. The oven will begin heating.
4. **Adjust Fan Speed (if applicable):** For Air Fry or other convection-assisted modes, adjust the Speed knob to Low or High as needed.
5. **Monitor Food:** Use the Light button to illuminate the interior and check cooking progress.
6. **Completion:** The oven will automatically turn off and chime when the set time expires.

5-IN-1 AIR FRYER OVEN COMBO

Satisfy all your culinary requirements



Warm



Broil



Toast



Bake



Air Fry



Figure 6: 5-In-1 Air Fryer Oven Combo Functions

Video 1: CKOZESE Air Fryer Toaster Oven (Preview). This short video demonstrates the basic operation and features of the oven.

Video 2: Air Fryer Oven, CKOZESE 22QT Toaster Oven Air Fryer (Preview). This video highlights the oven's capacity and various cooking modes.

7. Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

- **Before Cleaning:** Always unplug the oven and allow it to cool completely before cleaning.
- **Accessories:** The baking pan, grill rack, frying basket, and crumb tray are dishwasher-safe. For stubborn food residue, soak them in warm, soapy water before washing.

- **Interior:** Wipe the interior surfaces with a damp cloth and mild detergent. For baked-on grease, a non-abrasive cleaner can be used. Avoid abrasive pads or harsh chemicals that could damage the non-stick coating (if present) or stainless steel.
- **Exterior:** Clean the exterior with a soft, damp cloth. Dry thoroughly.
- **Crumb Tray:** The crumb tray should be emptied and cleaned regularly to prevent grease buildup and potential fire hazards.

8. Troubleshooting Guide

If you encounter issues with your CKOZESE Air Fryer Toaster Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Timer not set.	Ensure the power cord is securely plugged into a working outlet. Turn the Timer knob to the desired cooking time.
Food is not cooking evenly.	Overcrowding; Incorrect temperature/time.	Avoid overcrowding the basket/pan. Cook in smaller batches if necessary. Adjust temperature and time according to recipe or food type. Ensure fan speed is appropriate for convection cooking.
Excessive smoke during cooking.	Grease buildup; High-fat food.	Clean the crumb tray and interior thoroughly. For high-fat foods, use a baking pan to catch drippings.
Oven exterior is very hot.	Normal operation.	This is normal. Always use oven mitts and ensure proper ventilation. Do not touch hot surfaces directly.

If the problem persists after trying these solutions, please contact CKOZESE customer support.

9. Technical Specifications

- **Model Name:** Air Fryer Toaster Oven
- **Model Number:** FM9011J
- **Brand:** CKOZESE
- **Capacity:** 22 Quarts (20 Liters)
- **Product Dimensions:** 16.34"D x 15.35"W x 14.76"H
- **Item Weight:** 13 Pounds
- **Output Wattage:** 1700 Watts
- **Voltage:** 110 Volts
- **Min Temperature Setting:** 100 Degrees Fahrenheit
- **Max Temperature Setting:** 450 Degrees Fahrenheit
- **Material:** Stainless Steel (Inner and Outer)

- **Control Method:** Hand Control (Knobs)
- **Dishwasher Safe Accessories:** Yes
- **Country of Origin:** China
- **Manufacture Year:** 2024

10. Warranty and Support

For detailed warranty information and customer support, please refer to the official CKOZESE website or the included warranty card with your purchase. You can also find additional resources and a downloadable PDF version of the Instructions for Use (IFU) via the following link:

[Download Official User Guide \(PDF\)](#)

For any questions or assistance, please contact CKOZESE customer service.