

[Manuals.plus](#) /

> [HOOBRO](#) /

> HOOBRO Slim Laundry Hamper BF24XY01G2 User Manual

## HOOBRO BF24XY01G2

# HOOBRO Slim Laundry Hamper BF24XY01G2 User Manual

Model: BF24XY01G2

## 1. INTRODUCTION

---

Thank you for choosing the HOOBRO Slim Laundry Hamper. This manual provides essential information for the safe assembly, operation, and maintenance of your new laundry hamper. Please read these instructions carefully before use and retain them for future reference.





Image 1: The HOOBRO Slim Laundry Hamper with its lid open, revealing the internal fabric laundry bag.

## 2. SAFETY INFORMATION

---

- **Read all instructions:** Familiarize yourself with the assembly and usage guidelines before operating the product.
- **Keep children away:** Do not allow children to climb on or play with the laundry hamper to prevent injury.
- **Weight limits:** Do not exceed the maximum load capacity of 44 lbs (20 kg) for the top surface and 33 lbs (15 kg) for the fabric bag. Overloading can cause damage or instability.
- **Stable surface:** Always place the hamper on a flat, stable surface. Use the lockable casters to secure its position when not moving.
- **Avoid moisture:** While the Oxford fabric is durable, prolonged exposure to excessive moisture should be avoided to prevent mold or damage.
- **Proper assembly:** Ensure all parts are correctly assembled and tightened according to the instructions to maintain structural integrity.

## 3. PACKAGE CONTENTS

---

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Metal Frame Components
- Wooden Lid
- Oxford Fabric Laundry Bag with Side Pockets
- 4 x Casters (Wheels), 2 of which are lockable
- Side Metal Handle
- Assembly Hardware (screws, Allen key)
- Instruction Manual

## 4. SETUP AND ASSEMBLY

---

Follow these steps to assemble your HOOBRO Slim Laundry Hamper. An Allen key is included for your convenience.

1. **Attach Casters:** Secure the four casters to the bottom of the metal frame using the provided screws. Ensure the two lockable casters are positioned on the same side for easier access.
2. **Assemble Frame:** Connect the vertical and horizontal metal frame components according to the diagrams in the included paper manual. Tighten all screws firmly.
3. **Install Fabric Bag:** Insert the Oxford fabric laundry bag into the assembled metal frame. The bag should hang securely within the frame. Ensure the side pockets are facing outwards as desired.
4. **Attach Side Handle:** Fasten the metal side handle to the designated holes on the frame.
5. **Place Lid:** Position the wooden lid on top of the frame. The lid is designed to flip open for easy access.



Image 2: Dimensional diagram of the laundry hamper, illustrating its compact size and the removable 11-gallon fabric bag.



01  
Practical Handle



02  
Portable Design



03  
Side Pockets



04  
Lockable Casters

Image 3: A visual guide highlighting key features: the practical handle, the portable design of the fabric bag, convenient side pockets, and the lockable casters for stability.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Using the Hamper

- **Accessing Contents:** Lift the wooden lid to deposit or retrieve laundry. The lid helps contain odors and keeps contents out of sight.
- **Moving the Hamper:** Unlock the casters by flipping the lever on the two lockable wheels. Use the side handle to push or pull the hamper to your desired location. Once in place, lock the casters to prevent unintended movement.
- **Utilizing Side Pockets:** The two side pockets are ideal for storing smaller items such as socks, underwear, laundry detergent pods, or other accessories.
- **Removing the Bag:** The Oxford fabric bag can be easily lifted out of the frame using its integrated handles, allowing for convenient transport of laundry to the washing machine.



## Flip Cover

A unique flip top to hide the odor of dirty clothes and prevent the dust.

Image 4: The laundry hamper positioned in a bathroom, demonstrating the flip cover in an open position for easy access to contents.

### 5.2 Lockable Casters

The hamper is equipped with four 360-degree rotating wheels for smooth movement. Two of these casters are lockable to ensure stability when the hamper is stationary.

- **To Lock:** Press down on the lever located on the top of the lockable casters until it clicks into place.
- **To Unlock:** Lift the lever on the lockable casters until it releases.



## 6. MAINTENANCE

---

- **Cleaning the Fabric Bag:** The Oxford fabric bag can be wiped clean with a damp cloth and mild detergent. Allow it to air dry completely before reinserting into the frame. Do not machine wash or tumble dry.
- **Cleaning the Frame and Lid:** Wipe the metal frame and wooden lid with a soft, dry or slightly damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary to maintain stability.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Hamper is wobbly or unstable.	Screws are loose; casters are not locked.	Check and tighten all assembly screws. Ensure lockable casters are engaged.
Wheels do not roll smoothly.	Casters are locked; debris caught in wheels.	Unlock casters. Clean any lint or debris from the wheels.
Fabric bag sags or does not fit correctly.	Bag is overloaded; incorrect installation.	Do not exceed the 33 lbs (15 kg) capacity. Re-install the bag, ensuring it is properly seated within the frame.
Lid does not close properly.	Obstruction; frame misalignment.	Check for items blocking the lid. Verify the frame is assembled squarely.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Number	BF24XY01G2
Product Dimensions (L x W x H)	15.7" x 9.5" x 29.1" (40cm x 24cm x 74cm)
Capacity	11 Gallons (43.4 Liters)
Material	Engineered Wood, Metal, Oxford Fabric
Color	Rustic Brown + Black
Item Weight	7.92 lbs (3.6 kg)
Max. Load Capacity (Top)	44 lbs (20 kg)
Max. Load Capacity (Bag)	33 lbs (15 kg)
Special Features	Handle, Removable Bag, Wheeled, Lockable Casters, Side Pockets

## 9. WARRANTY AND SUPPORT

---

For warranty information or customer support, please refer to the purchase documentation or contact HOOBRO customer service directly. Keep your purchase receipt as proof of purchase.

You can often find support contact details on the [HOOBRO Brand Store on Amazon](#).

## 10. PRODUCT VIDEOS

---

No official product videos from the seller were found in the provided data for this model.

