

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [NWOUIIAY](#) /

› [NWOUIIAY 1200W 6-in-1 Handheld Multi-functional Blender User Manual](#)

NWOUIIAY 6-in-1 Handheld Multi-functional Blender

NWOUIIAY 1200W 6-in-1 Handheld Multi-functional Blender User Manual

Model: 6-in-1 Handheld Multi-functional Blender

1. INTRODUCTION

Thank you for choosing the NWOUIIAY 1200W 6-in-1 Handheld Multi-functional Blender. This versatile appliance is designed to simplify your cooking tasks, offering powerful blending, chopping, and whisking capabilities. With its robust 1200W motor and multiple attachments, it is perfect for preparing a wide range of dishes, from smoothies and soups to whipped cream and baby food. Please read this manual carefully before first use to ensure safe and optimal operation of your new appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids. Only the detachable parts are washable.
- Always unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving blades during operation to prevent injury and/or damage to the appliance.
- Blades are sharp. Handle with extreme care when cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use only attachments and accessories recommended by the manufacturer.
- Do not use outdoors.

3. PACKAGE CONTENTS

Your NWOUIIAY 6-in-1 Handheld Multi-functional Blender package includes the following components:

- Motor Unit (Main Body)
- Blending Wand (Stick Blender Attachment)
- Chopper Bowl with Blade and Lid
- Egg Whisk Attachment
- Measuring Beaker (Mixing Cup)
- Stand/Holder



Image: All components included in the package, showing the motor unit, blending wand, chopper, whisk, and measuring cup.



Image: The complete set of the NWOUIIAY blender, including all attachments and the product packaging.

4. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the different parts of your blender for proper assembly and use.

- **Motor Unit:** The main body containing the 1200W motor and control buttons.
- **Blending Wand:** Stainless steel shaft with sharp blades for blending soups, sauces, and smoothies directly in pots or tall containers. Features an anti-splash shield.
- **Chopper:** A bowl with a sharp blade for chopping vegetables, nuts, meat, and other ingredients.
- **Egg Whisk:** For whisking eggs, cream, and light batters.
- **Measuring Beaker:** A clear cup for measuring ingredients and blending smaller quantities.
- **Speed Control Buttons:** 'L' for Low Speed and 'H' for High Speed (Turbo).

Product Features

Safe and Ergonomic design



Image: Detailed diagram highlighting key features such as the detachable metal wand, 304 stainless steel sharp blades, anti-splash shield, antiskid handle, turbo boost button, and 2 speed settings.

2 Speed Control

Easy to adjust your desired speed to handle foods



Switch
(Low Speed)

Turbo
(High Speed)



Image: A close-up view of the blender's handle, showing the 'L' (Low Speed) and 'H' (Turbo High Speed) buttons for easy speed adjustment.

Product Details



Image: Visual representation of the dimensions for the main product, blending stick, egg whisk, food chopper, and mixing beaker.

5. SETUP AND ASSEMBLY

Before first use, clean all parts that will come into contact with food. Ensure the motor unit is unplugged before attaching or detaching any accessories.

5.1 Attaching the Blending Wand

1. Align the blending wand with the motor unit.
2. Twist the blending wand clockwise until it clicks securely into place.



Image: Illustration showing how to detach the blending wand by twisting it counter-clockwise from the motor unit.

5.2 Assembling the Chopper

1. Carefully place the chopper blade onto the central pin inside the chopper bowl.
2. Add your ingredients to the chopper bowl.
3. Place the chopper lid onto the bowl, ensuring it is properly seated.
4. Align the motor unit with the top of the chopper lid and twist clockwise to lock it into place.

5.3 Attaching the Egg Whisk

1. Insert the whisk attachment into the gear box.
2. Align the gear box with the motor unit and twist clockwise until it clicks securely.

6. OPERATING INSTRUCTIONS

Always ensure the appliance is properly assembled and plugged into a suitable power outlet before operation.

6.1 Blending (Using Blending Wand)

1. Attach the blending wand to the motor unit.
2. Place the blending wand into the ingredients you wish to blend (e.g., in a pot for soup, or the measuring beaker for smoothies). Ensure the blade guard is fully submerged to prevent splattering.
3. Press and hold the 'L' button for low speed or the 'H' (Turbo) button for high speed.
4. Move the blender up and down gently to ensure even blending.
5. Release the button to stop operation.



Image: The handheld blender being used to blend ingredients directly in a cooking pot, ideal for soups and sauces.

Blender for Delicious Smoothie and Sauce



Image: The blender being used with the measuring beaker to prepare a smoothie, demonstrating its versatility for various liquid preparations.

6.2 Chopping (Using Chopper Attachment)

1. Assemble the chopper as described in Section 5.2.
2. Ensure the motor unit is securely attached to the chopper lid.
3. Press and hold the 'L' button for coarse chopping or the 'H' (Turbo) button for finer chopping. Use short pulses for better control.
4. Release the button to stop operation.



Image: The chopper attachment with meat, illustrating its use for processing solid ingredients.

6.3 Whisking (Using Egg Whisk Attachment)

1. Attach the egg whisk to the motor unit.
2. Place the whisk into the ingredients (e.g., eggs, cream) in a suitable bowl.
3. Press and hold the 'L' button for gentle whisking or the 'H' (Turbo) button for faster whisking.
4. Move the whisk in a circular motion to incorporate air evenly.
5. Release the button to stop operation.



Image: The whisk attachment in action, demonstrating its effectiveness for beating eggs or whipping cream.

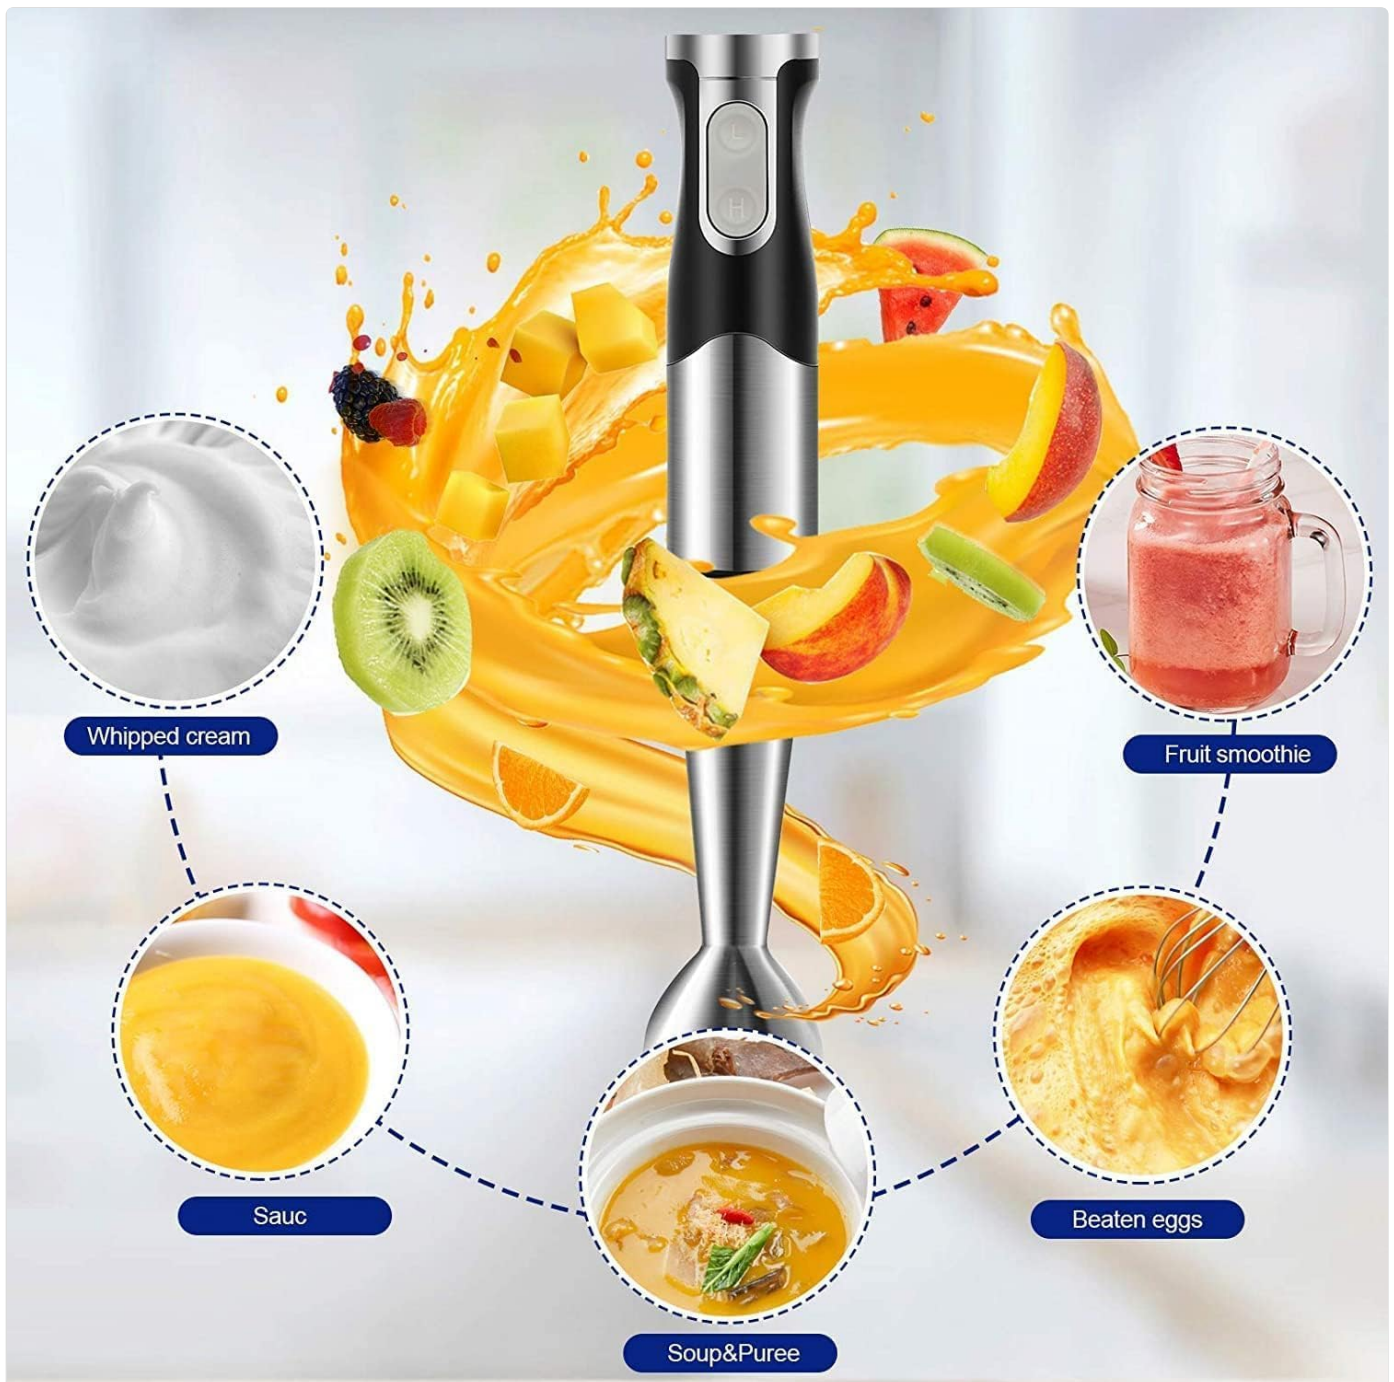


Image: A visual guide showcasing the diverse applications of the blender, including whipped cream, fruit smoothies, sauces, soups/purees, and beaten eggs.

7. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your appliance.

7.1 Cleaning

1. Always unplug the appliance before cleaning.
2. **Motor Unit:** Wipe the motor unit with a damp cloth. *Do not immerse the motor unit in water or any other liquid.*
3. **Blending Wand, Chopper Bowl/Blade, Egg Whisk, Measuring Beaker:** These parts are detachable and can be washed with warm soapy water or placed in the dishwasher (top rack recommended).
4. For stubborn food residue on the blending wand, you can blend it in a glass of warm water with a drop of dish soap for a few seconds, then rinse thoroughly.
5. Handle blades with extreme care as they are very sharp.
6. Dry all parts thoroughly before storing.



Image: The blending wand being rinsed under running water, demonstrating the ease of cleaning its stainless steel components.

7.2 Storage

Store the appliance and its accessories in a dry place, away from direct sunlight and out of reach of children. The included stand can be used for convenient storage of the main unit and attachments.

8. TROUBLESHOOTING

If you encounter any issues with your blender, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; motor unit not properly attached to accessory.	Ensure plug is firmly in outlet; test outlet with another appliance; re-attach motor unit securely until it clicks.
Motor runs, but blades do not move.	Attachment not properly secured to motor unit.	Ensure attachment is twisted and locked into place.
Blender stops during operation.	Overheating due to continuous use or processing too hard ingredients; food jammed in blades.	Unplug and let cool for 15-20 minutes; remove any jammed food (unplug first and use caution). Avoid continuous operation for more than 1 minute.
Food is not blending/chopping evenly.	Too much food; not enough liquid (for blending); ingredients too large.	Reduce quantity of food; add more liquid; cut ingredients into smaller pieces. Use pulsing action for chopping.
Loud noise/vibration.	Attachment not properly secured; hard ingredients.	Check attachment connection; ensure ingredients are suitable for the appliance.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Detail
Model	6-in-1 Handheld Multi-functional Blender
Power/Wattage	1200 W
Voltage	Refer to product label (typically 220-240V for AU)

Feature	Detail
Number of Speeds	2 (Low and Turbo High Speed)
Material	Stainless Steel (blades, blending wand), BPA-free Plastic (chopper bowl, measuring beaker)
Item Weight	Approx. 1.38 kg
Dimensions (Assembled)	Approx. 25D x 13W x 23H cm (varies with attachment)
Special Features	Adjustable Speed Control, Ergonomic Handle, Anti-Splash Shield

10. WARRANTY AND SUPPORT

Your NWOUIIAY 1200W 6-in-1 Handheld Multi-functional Blender comes with a standard manufacturer's warranty against defects in material and workmanship under normal household use. Please refer to the warranty card included in your packaging for specific terms and conditions, including the warranty period and coverage details.

For product support, troubleshooting assistance, or to inquire about warranty claims, please contact NWOUIIAY customer service through the retailer where you purchased the product or visit the official NWOUIIAY website for contact information.

Please have your purchase receipt and product model information ready when contacting support.