

[Manuals.plus](#) /

› [Oprisen](#) /

› Oprisen Power Recliner Chair with Heat & Massage Instruction Manual (Model YM1008)

Oprisen YM1008

Oprisen Power Recliner Chair with Heat & Massage Instruction Manual

Model: YM1008

INTRODUCTION

Thank you for choosing the Oprisen Power Recliner Chair. This manual provides essential information for the safe and efficient use of your new recliner, featuring heat, massage, LED lighting, and a USB charging port. Please read these instructions carefully before assembly and operation, and retain them for future reference.

SAFETY INSTRUCTIONS

- **Weight Limit:** Do not exceed the maximum weight capacity of 330 pounds (150 kg). Overloading can cause damage or injury.
- **Children and Pets:** Keep children and pets away from the moving parts of the recliner, especially during operation.
- **Power Cord:** Ensure the power cord is not pinched, tangled, or placed under the chair. Avoid placing heavy objects on the cord.
- **USB Port Usage:** The built-in USB port is designed for low-power devices only, such as smartphones (iPhone) and tablets (iPad). Do not attempt to charge high-power devices, as this may damage the port or the device.
- **Liquid Spills:** Avoid spilling liquids on the chair, especially near electrical components. In case of a spill, unplug the chair immediately and allow it to dry completely before use.
- **Maintenance:** Do not attempt to disassemble or repair the chair yourself. Contact qualified service personnel for any repairs.

PACKAGE CONTENTS

Before beginning assembly, ensure all components are present:

- Power Recliner Chair components
- Heating & Massage Remote Control
- Lumbar Pillow

SETUP AND ASSEMBLY

The Oprisen Power Recliner Chair is designed for simple assembly. Detailed instructions are included in the box. Typically, assembly can be completed within 10 minutes.

1. Unpack all components from the packaging.
2. Refer to the separate assembly instruction manual provided in the box for step-by-step guidance.
3. Ensure all connections are secure and the chair is stable before use.



Image: The Oprisen Power Recliner Chair fully assembled, ready for use.

CHAIR DIMENSIONS



Image: Chair dimensions for proper placement and space planning.

OPERATING INSTRUCTIONS

Reclining Function

The chair features a power reclining mechanism controlled by a side-push button located on the armrest. This allows for smooth adjustment to various positions:

- **90° Reading:** Upright position suitable for reading or working.
- **110° Gaming:** Slightly reclined for comfortable gaming.
- **130° Watching TV:** Relaxed recline for television viewing.
- **160° Napping:** Deep recline for resting or napping.

Side-Push Button

Easily adjust the position you want



Image: Side-push button for easy reclining adjustment and integrated USB port.

Heat and Massage Functions

Your recliner is equipped with 8 vibration points and a lumbar heating point for enhanced relaxation. Use the included remote control to customize your experience:

- **Vibration Modes:** Choose from 5 different vibration modes.
- **Intensity Levels:** Select between 2 intensity levels for vibration.
- **Lumbar Heat:** Activate the lumbar heating function independently for targeted warmth.

These features are designed to help alleviate muscle soreness and fatigue, promoting relaxation. The heating function can be used separately from the massage.



MASSAGE FUNCTION

- 15/30/60 Timer Control •
- 8 Ponits Vibration Massage •
- Heating Function for Lumbar •
- 2 Massage Intensity •



Image: Massage points and remote control for heat and massage functions.

LED Lighting

The integrated LED lights provide ambient lighting, enhancing the home theater experience. The lights are controlled via the side panel buttons.

Your browser does not support the video tag.

Video: Demonstration of the LED light show feature on the Oprisen Power Recliner Chair.

Your browser does not support the video tag.

Video: Overview of the LED light feature on the Oprisen Power Recliner Chair.

USB Charging Port

A USB charging port is conveniently located on the armrest control panel. This allows you to charge low-power electronic devices like smartphones and tablets while relaxing. Refer to the safety instructions regarding appropriate device

charging.

Cup Holders and Side Pockets

The chair includes two built-in cup holders for beverages and two large side pockets for storing books, remote controls, or other small items, keeping them within easy reach.



Image: Key features of the recliner, including cup holders, side pockets, and the control panel.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your Oprisen Power Recliner Chair, follow these simple care instructions:

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as they may damage the faux leather finish.

- **Spills:** Promptly blot any spills with a clean, dry cloth.
- **Inspection:** Periodically check all connections and fasteners to ensure they are tight.

TROUBLESHOOTING

If you encounter any issues with your Oprisen Power Recliner Chair, please consider the following common solutions:

- **Chair Not Reclining/No Power:**
 - Ensure the power cord is securely plugged into both the chair and a working wall outlet.
 - Check if the wall outlet is functional by plugging in another device.
 - Verify that all internal connections within the chair are properly seated (refer to assembly instructions).
- **Massage/Heat Not Working:**
 - Ensure the chair has power.
 - Check the remote control batteries (if applicable) and ensure it is pointed correctly at the receiver.
 - Confirm that the massage and heat functions are activated on the remote.
- **USB Port Not Charging:**
 - Ensure the chair is powered on.
 - Verify that the device being charged is a low-power device (e.g., smartphone, tablet).
 - Try a different USB cable.

If these steps do not resolve the issue, please contact Oprisen customer support for further assistance.

SPECIFICATIONS

Brand	Oprisen
Model Name	YM1008
Color	Black
Material	Faux Leather (Upholstery), Sponge (Fill)
Frame Material	Wood
Product Dimensions (D x W x H)	40" x 33" x 44" (101.6 cm x 83.8 cm x 111.8 cm)
Item Weight	152 pounds (68.9 kg)
Maximum Weight Recommendation	330 pounds (150 kg)
Reclining Positions	5
Additional Features	Adjustable Backrest, Cup Holders, Foot Rest, LED Light, Side Pocket, Heat, Massage, USB Port

UPC

728683115834

WARRANTY INFORMATION

Warranty details for your Oprisen Power Recliner Chair are typically included with your purchase documentation or can be obtained directly from the manufacturer. Please refer to the warranty card or contact Oprisen customer service for specific terms and conditions.

CUSTOMER SUPPORT

For any questions, technical assistance, or support regarding your Oprisen Power Recliner Chair, please contact Oprisen customer service. Refer to your purchase receipt or the manufacturer's website for the most current contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question