

Manuals.plus /

> [T4TREAM](#) /

> T4TREAM Farmhouse 5-Drawer Dresser (Model VSC5DRSC-RBW) Instruction Manual

T4TREAM VSC5DRSC-RBW

T4TREAM Farmhouse 5-Drawer Dresser

Model: VSC5DRSC-RBW | Brand: T4TREAM

1. INTRODUCTION

Thank you for choosing the T4TREAM Farmhouse 5-Drawer Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

2. SAFETY INFORMATION

WARNING: Furniture Tip-Over Hazard

Serious or fatal crushing injuries can occur from furniture tip-overs. To help prevent tip-over:

- Always install the anti-tipping device provided with the dresser.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Place the heaviest items in the lowest drawers.
- Do not place heavy objects on top of the dresser unless it is securely anchored.
- Never open more than one drawer at a time.

This dresser is designed to meet current stability standards. Ensure all parts are securely fastened before use.

NOTICE: Safety is a top priority, this new country rustic collection dressers are designed to meet the most current standard for stability



Image: T4TREAM Farmhouse 5-Drawer Dresser with key dimensions and a visual warning about furniture tip-over, highlighting the importance of the anti-tipping device.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the parts list included in your packaging. Typically, your package will contain:

- Dresser panels (top, bottom, sides, back)
- Drawer components (fronts, sides, backs, bottoms)
- Hardware (screws, dowels, cam locks, drawer slides, handles, anti-tipping kit)
- Assembly instructions

If any parts are missing or damaged, please contact customer support immediately.

4. SETUP AND ASSEMBLY

Assembly is required for this dresser. We recommend having a second person assist with the assembly process for ease and safety. Follow the clear, step-by-step instructions provided in your package. All parts are labeled for straightforward identification.

Tools Recommended:

- Phillips head screwdriver
- Hammer
- Power drill (use with caution and low torque settings)

Important: Do not overtighten screws. Avoid using power tools on high settings to prevent damage to the wood components.

Your browser does not support the video tag.

Video: Official T4TREAM overview of the Farmhouse 5-Drawer Dresser, demonstrating its features and design. This video provides a visual guide to the product's appearance and functionality.

5. OPERATING INSTRUCTIONS

The T4TREAM Farmhouse 5-Drawer Dresser features smooth-gliding drawers for easy access to your belongings. Each drawer is designed for ample storage capacity.

- To open a drawer, gently pull on the handle.
- To close a drawer, push it firmly until it is fully seated.
- Avoid slamming drawers to ensure longevity of the slides and frame.



Image: Close-up view of the dresser's natural wood grain texture, highlighting its authentic and rustic charm.



Image: Detailed view of the Roman column-style drawer handles, showcasing their vintage design and elegant finish.

6. MAINTENANCE

To maintain the beauty and longevity of your T4TREAM dresser, follow these simple care instructions:

- **Cleaning:** Wipe with a dry cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading.
- **Heat/Moisture:** Keep away from direct heat sources and excessive moisture. Use coasters under beverages.



Image: Close-up of the dresser's unique feet design, emphasizing its stable foundation and aesthetic detail.



Image: Detailed view of the specially beveled edges on the dresser, contributing to its sophisticated design.

7. TROUBLESHOOTING

If you encounter any issues with your dresser, please refer to the following common solutions:

- **Wobbly Dresser:** Ensure all screws and fasteners are tightened. Check that the dresser is on a level surface. Adjust any leveling feet if present.
- **Sticking Drawers:** Verify that the drawer slides are correctly installed and aligned. Ensure no objects are obstructing the drawer's path. Lubricate slides with a silicone-based spray if necessary.
- **Damaged Parts:** If any part arrived damaged or becomes damaged during assembly/use, do not attempt to repair it yourself. Contact customer support for replacement parts.

8. SPECIFICATIONS

Feature	Detail
Brand	T4TREAM
Model Name	VSC5DRSC-RBW
Product Dimensions	15.5"D x 31.2"W x 48"H
Color	Dark Brown

Material	Engineered Wood, Wood
Number of Drawers	5
Item Weight	126 pounds
Assembly Required	Yes
Care Instructions	Wipe with Dry Cloth

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact T4TREAM customer service directly. Keep your purchase receipt for any warranty claims.

Customer Service: Please visit the [T4TREAM Store on Amazon](#) for contact details and further assistance.

© 2026 T4TREAM. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CLS4P4G3>

More documents and user manuals: <https://manuals.plus/>