

[Manuals.plus](#) /

> [Piudekei](#) /

> Piudekei Universal Remote Control Instruction Manual for Apple TV (Models A2843, A2737, A2169, A1842, A1625, A1427, A1469, A1378, A1218)

Piudekei 751314634756

Piudekei Universal Remote Control Instruction Manual

FOR APPLE TV 4K, APPLE TV BOX (2ND, 3RD, 4TH GEN), APPLE TV HD

Compatible Models: A2843, A2737, A2169, A1842, A1625, A1427, A1469, A1378, A1218

Introduction

This manual provides instructions for the Piudekei Universal Remote Control, designed as a replacement for various Apple TV models. It covers setup, operation, and troubleshooting to ensure optimal use of your device.

Safety Information

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of batteries according to local regulations.
- Avoid exposing the remote to extreme temperatures or moisture.

Package Contents

- 1 x Piudekei Universal Remote Control
- (Batteries not included)

Product Overview

The Piudekei Universal Remote Control is an infrared (IR) remote designed for ease of use with compatible Apple TV models. It features essential navigation and playback controls, along with dedicated buttons for TV power and volume for certain brands.



Image Description: A silver-colored Piudekei Universal Remote Control is shown on the left, featuring a circular navigation pad with an 'OK' button at its center, surrounded by directional arrows. Above the navigation pad are 'MENU' and 'Power' buttons. Below it are 'Back', 'Mute', 'Volume Up', 'Volume Down', 'Channel Up', 'Channel Down', 'Previous Track', 'Stop', 'Next Track', 'Rewind', 'Play/Pause', and 'Fast Forward' buttons. To the right, various Apple TV remotes are displayed for comparison, illustrating the replacement nature of the Piudekei remote.

Button Functions:

- **Power (Red Button):** Turns the Apple TV on/off. Also controls TV power for compatible brands (Samsung, LG, Sony, Westinghouse, Insignia, Vizio, Toshiba).
- **MENU:** Accesses the main menu or goes back to the previous screen. For Apple TV 4K, press to turn on the device.
- **Navigation Pad (Up, Down, Left, Right):** Navigates through menus and content.
- **OK:** Confirms selections.
- **Back (<):** Returns to the previous screen or menu.
- **Mute (Speaker with X):** Mutes/unmutes TV audio for compatible brands.
- **Vol+ / Vol-:** Increases/decreases TV volume for compatible brands.
- **CH+ / CH-:** Changes channels (functionality depends on Apple TV app/service).
- **Rewind (<<):** Rewinds playback.

- **Play/Pause (>||)**: Plays or pauses content.
- **Fast Forward (>>)**: Fast forwards playback.
- **Previous Track (<|)**: Skips to the previous track/chapter.
- **Stop (Square)**: Stops playback.
- **Next Track (>|)**: Skips to the next track/chapter.

Setup

1. Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

2. Initial Use:

No programming is needed. Once batteries are installed, the remote is ready for use with compatible Apple TV models. Point the remote directly at your Apple TV device.

Operating Instructions

Controlling Apple TV:

- Ensure the remote has a clear line of sight to your Apple TV.
- Use the **Navigation Pad** to move through menus and select items.
- Press **OK** to confirm a selection.
- Press **MENU** to return to the previous screen or the main menu. For Apple TV 4K, press MENU to power on the device.
- Use the **Play/Pause**, **Rewind**, **Fast Forward**, **Previous Track**, and **Next Track** buttons for media playback control.

Controlling TV (Volume/Power):

The **Power On/Off**, **Vol+**, **Vol-**, and **Mute** buttons are designed to work with specific TV brands: Samsung, LG, Sony, Westinghouse, Insignia, Vizio, and Toshiba. These functions do not require additional setup and should work directly if your TV is one of the supported brands. Note that these buttons are not compatible with ROKU TVs.

Troubleshooting

- **Remote not responding:**
 - Check battery orientation and ensure they are fresh. Replace if necessary.
 - Ensure there is a clear line of sight between the remote and the Apple TV.
 - Move closer to the Apple TV.
- **TV volume/power buttons not working:**
 - Verify your TV brand is listed as compatible (Samsung, LG, Sony, Westinghouse, Insignia, Vizio, Toshiba).
 - These functions are not supported for ROKU TVs.
- **No Voice Function, Siri Function, or Touchpad Function:**
 - This remote is an IR remote and does not support these advanced features found on some original Apple TV remotes.

Specifications

Brand	Piudekei
Model	751314634756

Compatible Devices	Apple TV 4K, Apple TV Box (2nd, 3rd, 4th Gen), Apple TV HD (Models: A2843, A2737, A2169, A1842, A1625, A1427, A1469, A1378, A1218); Select TVs (Samsung, LG, Sony, Westinghouse, Insignia, Vizio, Toshiba)
Connectivity Technology	Infrared (IR)
Special Features	Ergonomic design
Power Source	Battery Powered
Battery Type	2 x AAA batteries (not included)
Product Dimensions	13.97 x 3.81 x 1.27 cm
Item Weight	41 g

Maintenance

- Clean the remote with a soft, dry cloth. Do not use liquid cleaners.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

Warranty and Support

For any questions or issues regarding your Piudekei Universal Remote Control, please contact the seller or manufacturer's customer support. Specific warranty details may vary and are typically provided at the point of purchase or on the manufacturer's official website.