

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Best Choice Products](#) /

› [Best Choice Products Wooden Farmhouse Kitchen Set for Kids \(Model: SKY7045\) - Instruction Manual](#)

## Best Choice Products SKY7045

# Best Choice Products Wooden Farmhouse Kitchen Set for Kids

Model: SKY7045

## 1. PRODUCT OVERVIEW

This Best Choice Products Wooden Farmhouse Kitchen Set is designed for children to engage in imaginative pretend play. It features a classic farmhouse design with interactive elements and storage solutions.

### Key Features:

- Classic farmhouse design with 4-paned windows and a pretend stovetop.
- Spacious oven with realistic clicking knobs for an immersive cooking experience.
- Built-in toy storage for accessories and other play items.
- Includes 5 accessories: 3 pretend cooking utensils, a pot, and a pan.
- Constructed from engineered wood with metal components for durability.

## 2. SAFETY INFORMATION

**WARNING:** Not for children under 3 years old. This product contains small parts which may pose a choking hazard.

Always supervise children during play. Ensure all components are securely fastened before allowing use. Regularly inspect the product for any loose parts or damage that could compromise safety. This playset meets ASTM & CPSIA-certified material standards.

## 3. SETUP AND ASSEMBLY

Assembly of the Best Choice Products Wooden Farmhouse Kitchen Set requires careful attention to the included instruction manual. Due to numerous screws and fasteners, assembly may take some time but results in a sturdy play structure.

### Included Components:

- All necessary wooden panels and structural pieces.
- Hardware (screws, fasteners, dowels).
- 5 play accessories (3 cooking utensils, 1 pot, 1 pan).
- Detailed Assembly Guide.

## Assembly Steps:

1. Unpack all components and verify against the parts list in the Assembly Guide.
2. Identify and separate similar hardware for easier access.
3. Follow the step-by-step instructions in the provided Assembly Guide, ensuring all connections are tight and secure.
4. Attach the back panel and any decorative elements as instructed.
5. Install the sink, faucet, and stove knobs.
6. Place the included accessories in their designated spots or storage areas.
7. Consider mounting the playset to a wall for added stability, if desired (mounting parts may be included).



Image: The fully assembled Best Choice Products Wooden Farmhouse Kitchen Set in Beveled White, showcasing its design and included accessories.

## 4. OPERATING INSTRUCTIONS

This play kitchen is designed for imaginative play. Children can interact with various features to simulate cooking and kitchen activities.

### Interactive Features:

- Clicking Knobs:** Turn the knobs on the pretend stovetop and oven for realistic clicking sounds.
- Oven Door:** Open and close the oven door to place or remove play food items.
- Sink and Faucet:** Use the pretend sink and faucet for washing play dishes or preparing ingredients.
- Storage:** Utilize the built-in shelves and compartments to organize play food and accessories.

## 5. MAINTENANCE

To ensure the longevity and cleanliness of your play kitchen, follow these maintenance guidelines:

- Cleaning:** Wipe down all surfaces with a soft, damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals.
- Inspection:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten if necessary to maintain structural integrity.
- Storage:** Store the playset in a dry environment away from direct sunlight or extreme temperatures to prevent warping or fading.
- Accessory Care:** Clean play accessories as needed with mild soap and water.

## 6. TROUBLESHOOTING

If you encounter any issues with your play kitchen, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Loose or wobbly parts	Screws or fasteners have loosened over time.	Carefully re-tighten all visible screws and fasteners. Do not overtighten.
Oven door not closing properly	Hinges are misaligned or loose.	Check and adjust hinge screws. Ensure no obstructions are preventing closure.
Missing accessories	Items may have been misplaced during play or storage.	Check all storage compartments and play areas. Contact customer support if items were missing upon initial receipt.

## 7. SPECIFICATIONS

Feature	Detail
Product Dimensions	25"(L) x 13.5"(W) x 35.5"(H)
Item Weight	20 pounds

Feature	Detail
Model Number	SKY7045
Recommended Age	36 months - 10 years
Materials	Engineered wood with metal components
Certifications	ASTM & CPSIA-certified

## Play-Friendly Materials

Crafted with wood and metal accessories that allow your little one to play for years



*\*Cream Color Shown*

Image: Visual representation of the Best Choice Products Wooden Farmhouse Kitchen Set with key dimensions labeled.

## 8. WARRANTY AND SUPPORT

Best Choice Products stands behind the quality of its products. For specific warranty details, please refer to the documentation included with your purchase or visit the official Best Choice Products website. If you require assistance with assembly, missing parts, or have any questions, please contact Best Choice Products customer support.

**Note on Videos:** No official seller-created product videos were available for embedding in this manual. User-generated content videos were excluded as per instructions.

## Related Documents - SKY7045

 <b>INSTRUCTION MANUAL</b> Kitchen Playset	<p><a href="#"><b>Best Choice Products Kitchen Playset Instruction Manual</b></a></p> <p>Comprehensive instruction manual for assembling the Best Choice Products Kitchen Playset, including parts lists, hardware details, and step-by-step assembly instructions for models SKY5969, SKY6009, SKY6346, SKY6850, SKY6851, SKY6852, and SKY6853.</p>
 <b>INSTRUCTION MANUAL</b> Farmhouse Kitchen Set	<p><a href="#"><b>Best Choice Products Farmhouse Kitchen Set Instruction Manual</b></a></p> <p>Instruction manual for the Best Choice Products Farmhouse Kitchen Set (Models SKY6344 + SKY6345), detailing assembly, parts, and safety information.</p>
 <b>INSTRUCTION MANUAL</b> Kids Electric Guitar Play Set	<p><a href="#"><b>Best Choice Products Kids Electric Guitar Play Set Instruction Manual</b></a></p> <p>Official instruction manual for the Best Choice Products Kids Electric Guitar Play Set (SKY3017, SKY3018, SKY7142, SKY7143). Learn how to set up, operate, and maintain your toy guitar, amplifier, and microphone.</p>
 <b>INSTRUCTION MANUAL</b> Kids Kitchen Playset	<p><a href="#"><b>Best Choice Products Kids Kitchen Playset Instruction Manual SKY4954</b></a></p> <p>Detailed instruction manual for assembling the Best Choice Products Kids Kitchen Playset (Model SKY4954). Includes a list of parts, required tools, hardware, step-by-step assembly instructions, and product warranty information.</p>
 <b>110-PIECE MULTICOLOR MAGNETIC BUILDING TILES</b> BUILDING EXAMPLES	<p><a href="#"><b>Best Choice Products 110-Piece Magnetic Building Tiles - Building Examples</b></a></p> <p>Explore creative building possibilities with the Best Choice Products 110-Piece Multicolor Magnetic Building Tiles. This guide showcases various examples of structures that can be created, encouraging imagination and skill development in children aged 3-8.</p>