

Bigben S7192807

BIGBEN Cat Alarm Clock (Round, Salmon) - Instruction Manual

Model: S7192807

INTRODUCTION

Welcome to the instruction manual for your new BIGBEN Cat Alarm Clock, Model S7192807. This device is designed to be a fun and functional alarm clock for children, featuring a night light, dimmable display, and interactive volume control. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.

SAFETY INFORMATION

Please observe the following safety precautions:

- Do not expose the device to water or excessive moisture.
- Do not disassemble or attempt to repair the device yourself. Refer all servicing to qualified personnel.
- Use only the provided or recommended AC adapter.
- Keep the device away from direct heat sources and open flames.
- This product is intended for indoor use only.
- Ensure the device is placed on a stable, flat surface.

PACKAGE CONTENTS

Verify that all items are present in the package:

- BIGBEN Cat Alarm Clock Unit (Model S7192807)
- AC Power Adapter
- Instruction Manual (this document)

PRODUCT OVERVIEW

The BIGBEN Cat Alarm Clock features a digital display, integrated night light, and user-friendly controls. Below is an image illustrating the product's general appearance and dimensions.



Image: Front view of the BIGBEN Cat Alarm Clock, salmon color, with a digital display. The image highlights the product's height (27.2 cm) and width (17.4 cm). The display shows time and indicators for AM/PM and Alarm. The clock

features a friendly cat face design.

Key components include:

- **Digital Display:** Shows time and alarm status. Dimmable for comfort.
- **Control Buttons:** (Located on the back or bottom, typically for Time Set, Alarm Set, Volume, Night Light, Snooze).
- **Night Light:** Integrated light for gentle illumination.
- **Speaker:** For alarm sound.
- **AC Adapter Port:** For power connection.

SETUP

1. Power Connection

1. Connect the AC power adapter to the DC input port on the back of the alarm clock.
2. Plug the AC adapter into a standard wall outlet. The display should light up.

2. Setting the Time

1. Press and hold the **TIME SET** button (location may vary, typically on the back or bottom). The hour digits will start flashing.
2. Use the **HOUR** and **MINUTE** buttons (or +/- buttons) to adjust the hour and minute. Pay attention to AM/PM indicators if present.
3. Press **TIME SET** again to confirm and exit time setting mode.

3. Setting the Alarm

1. Press and hold the **ALARM SET** button. The alarm hour digits will flash.
2. Use the **HOUR** and **MINUTE** buttons to set your desired alarm time.
3. Press **ALARM SET** again to confirm. The alarm indicator (e.g., "AL") will appear on the display.
4. To activate/deactivate the alarm, press the **ALARM ON/OFF** button (or toggle switch).

4. Adjusting Display Brightness (Dimmable Display)

The display brightness can be adjusted for comfort, especially at night.

- Locate the **DIMMER** button or control (often combined with other buttons).
- Press the button repeatedly to cycle through different brightness levels (e.g., High, Medium, Low, Off).

OPERATING THE ALARM CLOCK

1. Using the Alarm

- When the alarm sounds, press the **SNOOZE** button (if available) to temporarily silence it. The alarm will sound again after a few minutes.
- To turn off the alarm completely, press the **ALARM OFF** button or the **POWER** button.

2. Using the Night Light

The integrated night light provides a soft glow.

- Press the **NIGHT LIGHT** button to turn the night light on or off.
- Some models may have multiple brightness settings for the night light; press the button repeatedly to cycle through them.

3. Adjusting Volume (Interactive Volume Control)

The alarm clock features an interactive volume control for the alarm sound.

- Locate the **VOLUME** control (e.g., a dial or buttons).
- Adjust the volume to your preferred level.

MAINTENANCE

To ensure the longevity and proper functioning of your alarm clock:

- **Cleaning:** Wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or strong chemicals, as these may damage the plastic or resin material.
- **Storage:** If storing the device for an extended period, disconnect it from the power source and store it in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display is off or not working.	No power, loose connection, or display dimmer set to off.	Check if the AC adapter is securely plugged into the clock and the wall outlet. Ensure the dimmer setting is not set to off.
Alarm does not sound.	Alarm not activated, volume too low, or incorrect alarm time set.	Verify the alarm is activated (AL indicator on display). Check the alarm volume. Re-set the alarm time.
Time is incorrect.	Time was not set correctly or power interruption.	Re-set the current time following the "Setting the Time" instructions.
Night light is not working.	Night light feature is off.	Press the NIGHT LIGHT button to turn it on.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Brand	Bigben
Model Number	S7192807

Color	Salmon
Display Type	Digital
Special Features	Dimmable display, Night light, Interactive volume control
Product Dimensions (W x H)	20 cm x 15 cm (approx. 17.4 cm x 27.2 cm as per image)
Power Source	AC Adapter
Room Type	Children's Room
Shape	Round (Cat design)
Usage	Indoor
Material	Plastic or Resin
Alarm Function	Yes

Note: Dimensions may vary slightly. The image indicates 17.4cm width and 27.2cm height, while specifications list 20cm x 15cm. Please refer to the physical product for exact measurements.

WARRANTY

This BIGBEN Cat Alarm Clock (Model S7192807) comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact your retailer or the manufacturer, Bigben, directly. Refer to the product packaging or Bigben's official website for the most up-to-date contact information.

Manufacturer: Bigben

Country of Origin: Spain