

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Conair](#) /
- › [Conair SHV1000CT Rechargeable Rotary Head Shaver User Manual](#)

Conair SHV1000CT

CONAIR SHV1000CT Rechargeable Rotary Head Shaver User Manual

Model: SHV1000CT

[Introduction](#) [Safety Information](#) [Package Contents](#) [Product Features](#) [Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Conair SHV1000CT Rechargeable Rotary Head Shaver. This manual provides important information regarding the safe operation, maintenance, and care of your new shaver. Please read these instructions thoroughly before first use and retain them for future reference.



Figure 1: The Conair SHV1000CT Rechargeable Rotary Head Shaver. This image shows the shaver with its ergonomic design and rotary heads.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, injury, or damage to the appliance, always follow these basic safety precautions:

- **Read all instructions before use.**
- Always hold the shaver gently and use it carefully to avoid cuts or skin irritation.
- Do not use the shaver near water, such as in a bathtub, shower, or sink.
- Do not use the shaver while it is charging to avoid the risk of electric shock.
- Keep the appliance away from heated surfaces.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been dropped or damaged.
- This appliance is for household use only.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Conair SHV1000CT Rechargeable Rotary Head Shaver
- Charging Cord (Adapter)
- Cleaning Brush
- Instruction Manual (this document)

4. PRODUCT FEATURES

The Conair SHV1000CT is designed for a comfortable and efficient shaving experience. Key features include:

- **Cordless Operation:** Provides flexibility and ease of use without being tethered to an outlet.
- **Portable Design:** Compact and lightweight for travel and on-the-go grooming.
- **Rechargeable Battery:** Offers up to 90 minutes of cordless shaving on a full charge.
- **Three Rotary Heads:** Designed to contour to the curves of your face for a close shave.
- **Pop-Up Trimmer:** Integrated for precise detailing of sideburns and mustaches.
- **Stainless Steel Blades:** Durable and sharp for effective hair removal.

5. SETUP

5.1 Initial Charging

Before using your shaver for the first time, it is recommended to fully charge it for approximately 8-12 hours. This ensures optimal battery performance and longevity.

1. Ensure the shaver is turned off.
2. Insert the charging cord into the shaver's charging port.
3. Plug the adapter into a standard electrical outlet.
4. The charging indicator light (if present) will illuminate to show that the shaver is charging.
5. Once fully charged, unplug the adapter from the outlet and then from the shaver.

A full charge provides approximately 90 minutes of cordless operation.

6. OPERATING INSTRUCTIONS

6.1 Shaving Your Face

1. Ensure your face is clean and dry for best results.
2. Press the power button to turn on the shaver.
3. Hold the shaver at a right angle to your skin.
4. Move the shaver in small, circular motions against the direction of hair growth.
5. Apply gentle pressure; do not press too hard, as this can cause irritation.
6. Stretch your skin with your free hand to make the hairs stand up, especially in difficult areas like the neck.
7. After shaving, press the power button to turn off the shaver.

6.2 Using the Pop-Up Trimmer

The integrated pop-up trimmer is ideal for shaping sideburns, mustaches, and detailing around the beard line.

1. With the shaver turned on, slide the trimmer release button (usually located on the back or side of the shaver) upwards to engage the pop-up trimmer.
2. Hold the shaver so the trimmer blades are perpendicular to your skin.
3. Use short, controlled strokes to trim and shape.
4. When finished, push the trimmer release button downwards to retract the trimmer.

7. MAINTENANCE

7.1 Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene. Clean your shaver after each use.

1. Ensure the shaver is turned off and unplugged from any power source.
2. Open the shaver head assembly (refer to the diagram in the manual for specific release buttons, if applicable).
3. Use the provided cleaning brush to remove loose hair from the rotary blades and the shaver head chamber.
4. For a more thorough cleaning, the shaver heads can be rinsed under running water. Ensure the shaver body remains dry.
5. Allow all parts to air dry completely before reassembling the shaver head.
6. Close the shaver head assembly securely.

7.2 Blade Replacement

For optimal shaving performance, it is recommended to replace the rotary blades every 12-18 months, depending on usage. Replacement blades can be purchased from authorized Conair retailers.

1. Ensure the shaver is turned off and unplugged.
2. Open the shaver head assembly.
3. Carefully remove the old rotary blades and screens.
4. Insert the new blades and screens, ensuring they are correctly seated.
5. Close the shaver head assembly until it clicks into place.

8. TROUBLESHOOTING

If you encounter issues with your shaver, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for the recommended time.
Shaver does not turn on.	Power button not pressed correctly.	Ensure the power button is fully pressed.
Poor shaving performance / pulling hair.	Blades are dull or clogged with hair.	Clean the shaver heads thoroughly. Consider replacing the blades if they are old.
Shaver stops during use.	Battery is low.	Recharge the shaver.
Skin irritation after shaving.	Applying too much pressure or blades are dull.	Use gentle pressure. Ensure blades are clean and sharp. Shave in small, circular motions.

9. SPECIFICATIONS

Model Number	SHV1000CT
Brand	Conair
Type	Rechargeable Rotary Head Shaver
Head Type	Rotary (3 heads)
Blade Material	Stainless Steel
Power Source	Battery Powered (Rechargeable)
Battery Life	Approximately 90 minutes (cordless operation)
Features	Cordless, Portable, Pop-Up Trimmer
Recommended Use	Face
Product Dimensions	6 x 2.5 x 3.3 inches
Weight	2 Pounds
Color	White
UPC	074108369338

10. WARRANTY AND CUSTOMER SUPPORT

Conair products are manufactured to the highest standards and are thoroughly inspected. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Conair website. For customer support, replacement parts, or service inquiries, please contact Conair Customer Service through their official channels.

Please note: Keep your purchase receipt as proof of purchase for warranty claims.



© 2023 Conair Corporation. All rights reserved.