

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Our Place](#) /

› [Our Place Wonder Oven 12.7 Quarts Steam Instruction Manual](#)

## Our Place Wonder Oven

# Our Place Wonder Oven 12.7 Quarts Steam Instruction Manual

Model: Wonder Oven

## INTRODUCTION

The Our Place Wonder Oven is a versatile 6-in-1 countertop appliance designed to simplify your cooking experience. It combines the functions of an air fryer, toaster, roaster, baker, reheater, and broiler, enhanced with steam infusion technology. This manual provides essential information for safe and effective use of your Wonder Oven.

- **Versatile 6-in-1 Functions:** Air fry, toast, roast, bake, reheat, and broil.
- **Steam Infusion Technology:** Locks in moisture for enhanced flavor, aroma, and texture.
- **Rapid Preheat & Cooking:** Designed for faster preheating and cooking times compared to traditional ovens.
- **Efficient, Space-Saving Design:** Compact footprint with ample capacity for various meals.
- **360-Degree Air Circulation:** Ensures even cooking and crispy results with less oil.

## IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Wonder Oven. Failure to follow these safety guidelines may result in injury or damage to the appliance.

- Always place the oven on a stable, heat-resistant surface with adequate ventilation.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot components.
- Ensure the appliance is unplugged when not in use and before cleaning.
- Keep children and pets away from the appliance during operation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Avoid using abrasive cleaners or scouring pads, which can damage the surfaces.
- Only use accessories recommended by the manufacturer.

## WHAT'S INCLUDED

Your Our Place Wonder Oven package includes the following components:

- 1x Wonder Oven Unit
- 1x Wire Rack
- 1x Bake Pan
- 1x Air Fryer Basket
- 1x Crumb Tray

## Explore What's Included



x1 Wonder Oven

x1 Wire Rack

x1 Bake Pan

x1 Air Fryer Basket

x1 Crumb Tray

The Wonder Oven comes with a wire rack, bake pan, air fryer basket, and a removable crumb tray for easy cleaning.

### SETUP

Before first use, follow these steps to set up your Wonder Oven:

1. **Unpack:** Carefully remove all packaging materials, including any protective films or inserts.
2. **Clean:** Wash all removable accessories (wire rack, bake pan, air fryer basket, crumb tray) with warm, soapy water. Wipe the interior and exterior of the oven with a damp cloth. Ensure all parts are completely dry before use.

3. **Placement:** Place the oven on a flat, stable, heat-resistant surface. Ensure there is at least 4-6 inches of clearance on all sides and above the oven for proper ventilation.
4. **Power:** Plug the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

The Wonder Oven features intuitive knob controls for temperature, function, and time. Refer to the image below for a visual guide to the controls.



The Wonder Oven features three control knobs for precise temperature, function, and time settings.

### General Operation:

1. **Select Temperature:** Turn the left knob to set the desired temperature (200°F - 450°F).
2. **Select Function:** Turn the middle knob to choose your cooking function (Air Fry, Toast, Roast, Bake, Reheat, Broil).
3. **Set Timer:** Turn the right knob to set the cooking time (0-60 minutes). The oven will begin cooking once the timer is set.

## Specific Functions:

- **Air Fry:** Use the air fryer basket for crispy results with minimal oil. The 360-degree air circulation ensures even cooking.
- **Toast:** Select the toast function and adjust the timer for desired browning (light, medium, dark).
- **Roast/Bake/Broil/Reheat:** Use the bake pan or wire rack as appropriate for your food item. Adjust temperature and time according to your recipe.

## Steam Infusion:

The Wonder Oven features revolutionary steam infusion technology to enhance moisture and flavor. To use this feature:

1. Locate the water reservoir on the top of the oven.
2. Carefully add 1-2 teaspoons of water into the reservoir.
3. Proceed with your desired cooking function. The steam will be infused during the cooking process.



Add a small amount of water to the designated reservoir for steam-infused cooking, which helps retain moisture and flavor.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your Wonder Oven.

- **Always unplug** the oven and allow it to cool completely before cleaning.
- **Crumb Tray:** The removable crumb tray located at the bottom of the oven can be easily pulled out and washed with warm, soapy water. This helps prevent grease buildup and makes cleaning simple.
- **Accessories:** The wire rack, bake pan, and air fryer basket are dishwasher-safe or can be hand-washed with warm, soapy water.
- **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Steam Reservoir:** Clean the steam reservoir regularly to prevent mineral buildup. Wipe with a damp cloth after each use.

## TROUBLESHOOTING

If you encounter any issues with your Wonder Oven, refer to the following common problems and solutions:

- **Oven not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the timer knob is set to an active cooking time.
- **Uneven cooking:** Ensure food is arranged in a single layer in the basket or pan for optimal air circulation. Rotate food halfway through cooking if necessary.
- **Food not crispy enough:** Increase cooking time or temperature slightly. Ensure the air fryer basket is not overloaded.
- **Excessive smoke:** This may be due to grease buildup. Clean the crumb tray and interior thoroughly. Reduce the amount of oil used for cooking.
- **Timer not working correctly:** Ensure the timer knob is turned past the 15-minute mark and then back to the desired time if setting for less than 15 minutes (as per common analog timer mechanisms).

If the problem persists after trying these solutions, please contact Our Place customer support.

## SPECIFICATIONS

- **Brand:** Our Place
- **Model Name:** Wonder Oven
- **Capacity:** 12.7 Quarts
- **Color:** Steam
- **Product Dimensions:** 10.6"D x 11.5"W x 11.6"H
- **Item Weight:** 11.6 pounds
- **Control Type:** Knob
- **Temperature Range:** 200 - 450 Degrees Fahrenheit
- **Power Source:** AC adapter
- **Material:** Stainless Steel (Door Material Type)
- **UPC:** 674012468280

# Standard Wonder Oven      Large Wonder Oven

12.7 Qts

SMALL-BATCH  
COOKING

32 Qts

FAMILY-SIZED  
FEASTS



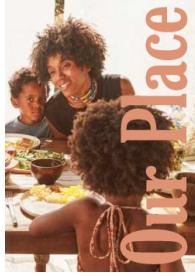
The 12.7 Quarts Wonder Oven is designed for small-batch cooking, while a larger 32 Quarts model is available for family-sized meals.

## WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Our Place website or contact their customer service department. Keep your purchase receipt for warranty claims.

© 2025 Our Place. All rights reserved.

**Related Documents - Wonder Oven**

 <p><b>Our Place®</b></p> <p><b>Wonder Oven User Manual</b> Air Fryer Oven APL.WDO.ESN Our Place Wonder Oven</p> <p><b>SAVE THESE INSTRUCTIONS</b></p> <p><b>INTENDED FOR COMMERCIAL USE</b></p> <p><b>CONTENTS</b></p> <ul style="list-style-type: none"> <li>1. Introduction</li> <li>2. What is a Wonder(ful) Oven?</li> <li>3. Features and Benefits</li> <li>4. Safety Instructions</li> <li>5. Assembly and Product Registration</li> <li>6. Control Panel</li> <li>7. How to Use Your Wonder Oven</li> <li>8. Care and Cleaning</li> <li>9. Helpful Tips</li> <li>10. Specifications</li> <li>11. Warranty</li> </ul>	<p><a href="#"><u>Our Place Wonder Oven User Manual: Air Fryer Oven Guide</u></a></p> <p>Comprehensive user manual for the Our Place Wonder Oven Air Fryer Oven (APL.WDO.ESN). Learn about safety precautions, installation, parts, operation, cleaning, troubleshooting, and warranty.</p>
 <p><b>Our Place</b></p>	<p><a href="#"><u>Our Place Wonder Oven Pro: Features, Modes, and Quick Start Guide</u></a></p> <p>Discover the Our Place Wonder Oven Pro, a multifunctional air fryer and toaster oven. Learn about its features, cooking modes, included accessories, and how to use it for perfect results.</p>
	<p><a href="#"><u>Dream Cooker User Guide: Simple Cooking with Our Place</u></a></p> <p>Learn how to use the Dream Cooker by Our Place for slow cooking, pressure cooking, and keeping food warm. This guide covers setup, controls, and basic operation for delicious meals.</p>
	<p><a href="#"><u>Our Place Perfect Power Pot™ Quick Start Guide &amp; Features</u></a></p> <p>Learn how to use and get the most out of your Our Place Perfect Power Pot™. This guide covers essential setup, cleaning, and usage tips for this versatile electric cooker, designed for delicious home cooking.</p>
	<p><a href="#"><u>Proctor Silex 6-Slice Simply-Crisp Air Fryer Toaster Oven User Manual and Cooking Guide</u></a></p> <p>User manual for the Proctor Silex 6-Slice Simply-Crisp Air Fryer Toaster Oven (Model 31275). Includes safety instructions, parts, operating modes (Air Fry, Bake, Broil, Toast), cooking charts, cleaning, troubleshooting, and warranty information.</p>