

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sokany](#) /
- › [Sokany SK-190 Electric Juicer User Manual](#)

## Sokany SK-190

# Sokany SK-190 Electric Juicer User Manual

Model: SK-190

## INTRODUCTION

Thank you for choosing the Sokany SK-190 Electric Juicer. This manual provides important information regarding the safe operation, assembly, use, maintenance, and troubleshooting of your new juicer. Please read this manual thoroughly before first use and retain it for future reference.



*The Sokany SK-190 Electric Juicer, shown here with its retail packaging, highlights its 1200W power and high juicing efficiency.*

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the juicer.
- To protect against risk of electrical shock, do not immerse the motor base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Always ensure the juicer cover is properly secured before the motor is switched on.
- Do not put your fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in the opening, use the food pusher to push it down.
- This appliance is equipped with overheat protection. If the motor overheats, the unit will automatically shut off. Allow it to cool down before resuming operation.

## PARTS IDENTIFICATION

---

Familiarize yourself with the components of your Sokany SK-190 Electric Juicer:

1. Food Pusher
2. Feeding Trough (85mm wide)
3. Juicer Cover
4. Stainless Steel Filter Basket
5. Juice Collector/Base
6. Pulp Container
7. Motor Base with Control Dial (0, 1, 2 speeds)
8. Safety Locking Bar
9. Juice Spout
10. Juice Pitcher
11. Anti-slip Foot Mats (on bottom of motor base)



*An assembled view of the Sokany SK-190 Electric Juicer, showing the main unit and the accompanying juice pitcher.*

## **SETUP AND ASSEMBLY**

---

Before first use, wash all detachable parts (except the motor base) in warm soapy water, rinse, and dry thoroughly.

1. Place the motor base on a dry, stable, and flat surface.
2. Insert the stainless steel filter basket into the juice collector/base, ensuring it is seated firmly.
3. Place the pulp container under the pulp outlet on the side of the juice collector.
4. Place the juicer cover onto the juice collector, aligning the feeding trough with the opening.

5. Lift the safety locking bar and secure it into the grooves on both sides of the juicer cover. Ensure it clicks into place, indicating the cover is securely locked. The juicer will not operate if the locking bar is not properly engaged.
6. Position the juice pitcher under the juice spout.



*This image illustrates key components of the juicer: the wide 85mm feeding trough, the safety handle (locking bar), anti-slip foot mats on the base, and the two-speed control dial.*

## OPERATING INSTRUCTIONS

---

Prepare your fruits and vegetables:

- Wash all produce thoroughly.
- For fruits with hard skins (e.g., pineapple, melon, oranges), peel them before juicing.
- Remove large seeds or pits from fruits like peaches, cherries, etc.
- The 85mm wide feeding trough allows for whole fruits like apples to be juiced without pre-cutting, saving preparation time.



*The 85mm wide feeding trough of the Sokany SK-190 juicer is designed to accommodate whole fruits, such as apples, minimizing the need for pre-cutting.*

## Juicing Process:

1. Ensure the juicer is correctly assembled and the safety locking bar is engaged.
2. Plug the power cord into a suitable electrical outlet.
3. Turn the control dial to the desired speed setting:
  - **Speed 1 (Low):** Suitable for softer fruits and vegetables like oranges, grapes, tomatoes, and cucumbers.
  - **Speed 2 (High):** Ideal for harder fruits and vegetables such as apples, carrots, celery, and beets.
4. Gradually feed the prepared produce into the feeding trough using the food pusher. Do not force the food down, as this can strain the motor.
5. The fresh juice will flow into the juice pitcher, and the pulp will collect in the pulp container.
6. When finished juicing, turn the control dial to "0" (off) and unplug the appliance from the power outlet.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your juicer. Always unplug the juicer before cleaning.

### Cleaning Instructions:

1. Turn the control dial to "0" and unplug the juicer.
2. Disassemble the juicer by releasing the safety locking bar and removing the juicer cover, filter basket, and pulp container.
3. Empty the pulp container and juice pitcher.
4. Rinse all detachable parts (juicer cover, filter basket, juice collector, pulp container, food pusher, juice pitcher) under running water immediately after use to prevent pulp from drying and sticking.
5. For thorough cleaning, wash these parts in warm, soapy water. The product care instructions state that these parts are dishwasher safe.
6. Use a cleaning brush (if provided) to clean the fine mesh of the stainless steel filter basket. This is crucial for efficient juicing.
7. Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
8. Dry all parts thoroughly before reassembling or storing.



*The image demonstrates the ease of cleaning the detachable parts of the juicer under running water, highlighting the dishwasher-safe components.*

## TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                                     | Possible Cause   | Solution   |
|---|--|--|
| Juicer does not turn on.                    | Not plugged in.<br>Safety locking bar not engaged.<br>Overheat protection activated. | Ensure the power cord is securely plugged into a working outlet.<br>Check that the safety locking bar is fully locked into position.<br>Unplug the juicer and allow it to cool down for at least 30 minutes before attempting to use it again. |
| Motor stops during operation.               | Overload or overheating.<br>Pulp container or filter basket is full.                 | Turn off, unplug, and allow to cool. Reduce the amount of produce fed at one time.<br>Turn off, unplug, and clean the pulp container and filter basket.  |
| Low juice yield or excessive pulp in juice. | Filter basket is clogged.<br>Incorrect speed setting for produce.                    | Turn off, unplug, and clean the filter basket thoroughly.<br>Use Speed 2 for harder fruits and vegetables.   |
| Vibration or loud noise.                    | Improper assembly.<br>Unbalanced filter basket.                                      | Ensure all parts are correctly assembled and the safety locking bar is engaged.<br>Check that the filter basket is seated firmly and evenly.   |

## SPECIFICATIONS

|                                   |  |
|-----------------------------------|--|
| <b>Brand:</b>                     | Sokany                                 |
| <b>Model Number:</b>              | SK-190                                 |
| <b>Power / Wattage:</b>           | 1200 Watts                             |
| <b>Number of Speeds:</b>          | 2                                      |
| <b>Material:</b>                  | Stainless Steel                        |
| <b>Special Features:</b>          | Overheat protection                    |
| <b>Product Care Instructions:</b> | Dishwasher Safe (for detachable parts) |
| <b>Item Weight:</b>               | 4 Kilograms                            |

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact Sokany customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance or inquiries, please visit the official Sokany website or contact their authorized service centers.



