

[Manuals.plus](#) /

› [Greenworks](#) /

› Greenworks 2000 PSI Pressure Washer User Manual

Greenworks GPW2000A

Greenworks 2000 PSI Pressure Washer User Manual

Model: GPW2000A

Brand: Greenworks

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Greenworks 2000 PSI Pressure Washer. Please read this manual thoroughly before using the product and keep it for future reference.

1.1 Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. Ensure the power source matches the product's requirements and use only approved accessories.

1.2 Package Contents

- Greenworks 2000 PSI Pressure Washer Unit
- High-Pressure Hose (25-foot kink-resistant)
- Spray Gun
- Wand
- Quick-Connect Nozzles (25°, 40°, Soap, Turbo)
- On-board Soap Tank
- Power Cord (35-foot)
- Owner's Manual

2. PRODUCT OVERVIEW

The Greenworks 2000 PSI Pressure Washer is designed for effective cleaning of medium-duty projects around your home.

2.1 Key Features

- **Power:** 2000 MAX PSI at 1.2 GPM for robust cleaning.
- **Motor:** Durable 14 Amp Universal Motor.
- **Start-up:** Convenient Push-button Start.
- **Hose:** 25-foot kink-resistant high-pressure hose for extended reach.
- **Power Cord:** 35-foot power cord for use with most household outlets.
- **Mobility:** Equipped with 10-inch wheels for easy transport.
- **Detergent System:** Integrated on-board soap tank.

2.2 Components Diagram



Figure 1: Overview of the Greenworks 2000 PSI Pressure Washer with key features labeled, including the 3-year warranty, 35-ft power cord, 14-amp motor, on-board soap tank, 25-ft high pressure kink resistant hose, and 10-inch wheels.



Figure 2: Front view of the Greenworks 2000 PSI Pressure Washer, showcasing its compact design and integrated hose reel.

3. SETUP

3.1 Assembly

Follow the instructions in the quick start guide for initial assembly of the handle and wheels. Ensure all connections are secure before proceeding.

3.2 Water Connection

1. Connect your garden hose to the water inlet on the pressure washer.
2. Ensure the garden hose is free of kinks and fully open the water spigot to provide sufficient water flow to the pump.

3.3 Power Connection

1. Uncoil the 35-foot power cord completely.
2. Plug the power cord into a grounded 120V AC outlet.

3.4 Attaching Accessories

Connect the high-pressure hose to the pressure washer's outlet and the spray gun. Attach the desired quick-connect nozzle to the wand by pulling back the collar, inserting the nozzle, and releasing the collar to lock it in place.



Figure 3: The convenient one-button start mechanism for quick power-up.

4. OPERATING INSTRUCTIONS

4.1 Starting the Pressure Washer

1. Ensure all connections (water, power, hose, wand) are secure.
2. Turn on the water supply completely.
3. Press the power button to start the unit. The motor will run briefly to prime the pump.
4. Squeeze the trigger on the spray gun to begin spraying.

4.2 Using Different Nozzles

The pressure washer comes with various quick-connect nozzles for different cleaning tasks:

4.2.1 25° Nozzle (High Pressure, Medium Angle Spray)



Figure 4: The 25° nozzle provides a high-pressure, medium-angle spray, ideal for general cleaning of most surfaces.

4.2.2 40° Nozzle (Medium Pressure, Wide Angle Spray)



Figure 5: The 40° nozzle offers a medium-pressure, wide-angle spray, suitable for delicate surfaces or rinsing large areas.

4.2.3 Soap Nozzle (Soap Application)



Figure 6: Use the soap nozzle for applying detergent. It operates at a lower pressure to allow for effective soap distribution.

4.2.4 Turbo Nozzle (Intense Cleaning)



Figure 7: The turbo nozzle creates a powerful, rotating stream for concentrated cleaning on tough stains and hard surfaces like concrete.

4.3 Applying Detergent

1. Fill the on-board soap tank with pressure washer safe detergent.
2. Attach the soap nozzle to the wand.
3. Start the pressure washer and spray the detergent onto the surface.
4. Allow the detergent to soak for a few minutes (refer to detergent instructions), then switch to a high-pressure nozzle for rinsing.

4.4 Cleaning Techniques

Always test a small, inconspicuous area first to avoid damage. Maintain a safe distance from the surface being cleaned. For optimal results, spray at an angle and work from top to bottom.



ARC

**2000 PSI
1.2 GPM**

FOR EFFICIENT CLEANING
IN RESIDENTIAL APPLICATIONS

Figure 8: The Greenworks pressure washer provides 2000 PSI and 1.2 GPM for efficient cleaning in residential applications.



ONE-BUTTON START

Figure 9: Enjoy quiet operation with this residential pressure washer, making cleaning tasks more pleasant.

5. MAINTENANCE

5.1 Cleaning and Storage

- After each use, flush out any remaining detergent from the soap tank and run clean water through the system for a few minutes.
- Disconnect the water supply and power.
- Squeeze the spray gun trigger to release any remaining pressure.
- Wipe down the unit with a damp cloth.
- Store the pressure washer in a dry, protected area where temperatures will not fall below freezing.

5.2 Winterization

If storing the unit in an area subject to freezing temperatures, it is crucial to winterize the pressure washer to prevent damage. Consult the full owner's manual for detailed winterization procedures, typically involving a pump protector or non-toxic antifreeze.

5.3 Nozzle Care

Clean nozzles regularly to prevent blockages. Use the included nozzle cleaning tool to clear any debris from the nozzle orifice.

6. TROUBLESHOOTING

Refer to the table below for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Motor does not start	Power cord not plugged in; Circuit breaker tripped; On/Off switch in OFF position	Plug in power cord; Reset circuit breaker; Turn switch to ON
No water pressure	Water supply off; Kink in garden hose; Clogged nozzle; Air in pump	Turn on water; Straighten hose; Clean nozzle; Squeeze trigger to purge air
Low water pressure	Insufficient water supply; Incorrect nozzle used; Clogged inlet filter	Ensure full water flow; Use a smaller degree nozzle; Clean inlet filter
Detergent not siphoning	Soap nozzle not attached; Detergent tank empty; Detergent too thick	Attach soap nozzle; Fill tank; Dilute detergent

7. SPECIFICATIONS

Specification	Value
Brand	Greenworks
Model Number	GPW2000A
Maximum Pressure	2000 PSI
Maximum Flow Rate	1.2 GPM
Power Source	AC Electric (14 Amp Universal Motor)
Hose Length	25 feet
Power Cord Length	35 feet
Item Weight	27.23 Pounds
Product Dimensions	19.88"L x 35.63"W x 18.5"H
Color	Black and Green

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Greenworks pressure washer is backed by a 3-Year Tool & Battery Warranty. Please retain your proof of purchase for warranty claims. For full warranty details, refer to the warranty card included with your product or visit the official Greenworks website.

8.2 Customer Support

For technical assistance, replacement parts, or any questions regarding your Greenworks pressure washer, please contact Greenworks customer support. Contact information can typically be found on the Greenworks website or on the product packaging.