

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sokany](#) /

› [Sokany Electric Meat Grinder SK-090 User Manual](#)

Sokany SK-090

Sokany Electric Meat Grinder SK-090 User Manual

Model: SK-090 | Brand: Sokany

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Sokany Electric Meat Grinder SK-090. Please read this manual thoroughly before first use and keep it for future reference. The Sokany 3500W SK-090 Meat Grinder is designed for grinding meat and preparing various food items. It features a high-quality stainless steel blade and a durable cast aluminum grinder head, ensuring efficient and consistent performance.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving parts during operation. Never push food with your hands; always use the food pusher provided.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Do not immerse the motor unit in water or any other liquid.
- Supervise children to ensure they do not play with the appliance.
- Avoid grinding bones, nuts, or other hard foods, as this may damage the motor or blades.
- Ensure the ventilation openings are not blocked during operation.

3. PACKAGE CONTENTS

Upon unpacking, please verify that all the following components are present:

- Motor Unit
- Grinder Head (Cast Aluminum)
- Feeding Tray
- Food Pusher

- Cutting Blade (Stainless Steel)
- Grinding Plates (Fine, Medium, Coarse)
- Kibbeh Attachment
- Sausage Attachment
- Instruction Manual



Image: The Sokany Electric Meat Grinder SK-090 showing the main unit, attachments, and packaging details.

4. SETUP AND ASSEMBLY

1. Place the motor unit on a stable, flat surface.
2. Insert the grinder head into the motor unit opening, ensuring it is securely locked in place.
3. Place the cutting blade onto the grinder screw, ensuring the sharp edge faces outwards.
4. Select the desired grinding plate (fine, medium, or coarse) and place it over the cutting blade.
5. Secure the grinding plate with the locking ring, tightening it firmly but not excessively.
6. Attach the feeding tray to the top of the grinder head.
7. Ensure all parts are correctly assembled before plugging in the appliance.



Image: An assembled view of the Sokany Electric Meat Grinder SK-090, illustrating its functions for grinding food, kibbeh attachment, and sausage making.

5. OPERATING INSTRUCTIONS

5.1 General Meat Grinding

1. Prepare meat by cutting it into small pieces (approx. 2-3 cm) that fit into the feeding tube. Remove bones, gristle, and excessive fat.
2. Place a suitable container under the output of the grinder head.
3. Plug the appliance into a power outlet.

4. Turn the appliance ON.
5. Feed the meat into the feeding tube using the food pusher. Never use your fingers.
6. After grinding, turn the appliance OFF and unplug it.

5.2 Using the Kibbeh Attachment

1. Assemble the grinder head with the kibbeh attachment instead of the cutting blade and grinding plate.
2. Prepare your kibbeh mixture.
3. Turn the appliance ON and feed the mixture into the feeding tube.
4. The kibbeh attachment will form hollow tubes. Cut them to your desired length.
5. After use, turn the appliance OFF and unplug it.

5.3 Using the Sausage Attachment

1. Assemble the grinder head with the sausage attachment.
2. Prepare your sausage mixture and casings.
3. Place the casing onto the sausage attachment.
4. Turn the appliance ON and feed the mixture into the feeding tube.
5. Guide the casing as it fills, ensuring it is evenly filled without air pockets.
6. After use, turn the appliance OFF and unplug it.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and hygiene of your meat grinder.

- **Always unplug the appliance before cleaning.**
- Disassemble all removable parts: feeding tray, grinder head, cutting blade, grinding plate, and attachments.
- Wash all removable parts in warm, soapy water. Rinse thoroughly and dry immediately to prevent rust, especially for the stainless steel blade and grinding plates.
- **Do not wash any parts in a dishwasher.** This can cause discoloration and damage.
- Wipe the motor unit with a damp cloth. Never immerse the motor unit in water.
- Ensure all parts are completely dry before reassembling or storing.
- Store the meat grinder in a dry place, away from direct sunlight and moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; power outage; switch is OFF.	Check power connection; check power supply; ensure switch is ON.
Meat is not grinding properly or motor slows down.	Too much meat fed at once; meat pieces are too large or contain hard parts; blade or plate is dull.	Reduce amount of meat; cut meat into smaller pieces and remove hard parts; check blade/plate for sharpness and replace if necessary.
Unusual noise during operation.	Improper assembly of parts; foreign object inside.	Disassemble and reassemble parts correctly; unplug and check for foreign objects.

Problem	Possible Cause	Solution
Rust spots on metal parts.	Parts not dried immediately after washing; stored in a humid environment.	Ensure parts are thoroughly dried after each wash; store in a dry place.

8. SPECIFICATIONS

Feature	Detail
Brand	Sokany
Model Number	SK-090
Power / Wattage	3500W
Material	Stainless Steel (Blade), Cast Aluminum (Grinder Head)
Color	Silver
Product Dimensions (L x W x H)	30 x 25 x 35 cm
Item Weight	3 kg (6.61 lbs)
Recommended Uses	Grinding meat and strong ingredients

9. WARRANTY AND SUPPORT

Sokany products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please refer to your purchase receipt for specific warranty duration and terms.

For technical support, service, or warranty claims, please contact your retailer or the authorized Sokany service center. Keep your proof of purchase for warranty validation.

Note: Damage caused by improper use, negligence, unauthorized repairs, or failure to follow instructions in this manual is not covered under warranty.