

Tefal SV6115X0

T-fal Express Easy Steam Generator User Manual

Model: SV6115X0

INTRODUCTION

Thank you for purchasing the T-fal Express Easy Steam Generator. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

The T-fal Express Easy Steam Generator, model SV6115X0, is designed to make ironing quick and easy with its powerful steam output and durable ceramic soleplate.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Always unplug the appliance from the electrical outlet when filling with water, emptying, or when not in use.
- Do not operate the appliance with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Keep the appliance and its cord out of reach of children.
- Use the appliance only for its intended household use.
- The soleplate and steam can become very hot and cause burns. Handle with care.
- Never direct steam at people or pets.
- The appliance features an automatic safety shut-off: it activates after 30 seconds in a horizontal position and 8 minutes in a vertical position.
- To ensure perfect performance, the appliance is factory-tested. It is normal for some water condensation to be present inside the tank.

PRODUCT COMPONENTS



Figure 1: Overview of the T-fal Express Easy Steam Generator.

- **Iron Unit:** Features the Ceramic Xpress Glide soleplate and temperature dial.
- **Steam Generator Base:** Houses the water tank and control buttons.
- **1.4 L Water Tank:** Large capacity for extended ironing sessions.
- **Steam Hose:** Connects the iron to the base for steam delivery.
- **Control Panel:** Includes Eco mode, Power button, and Anti-calc indicator.

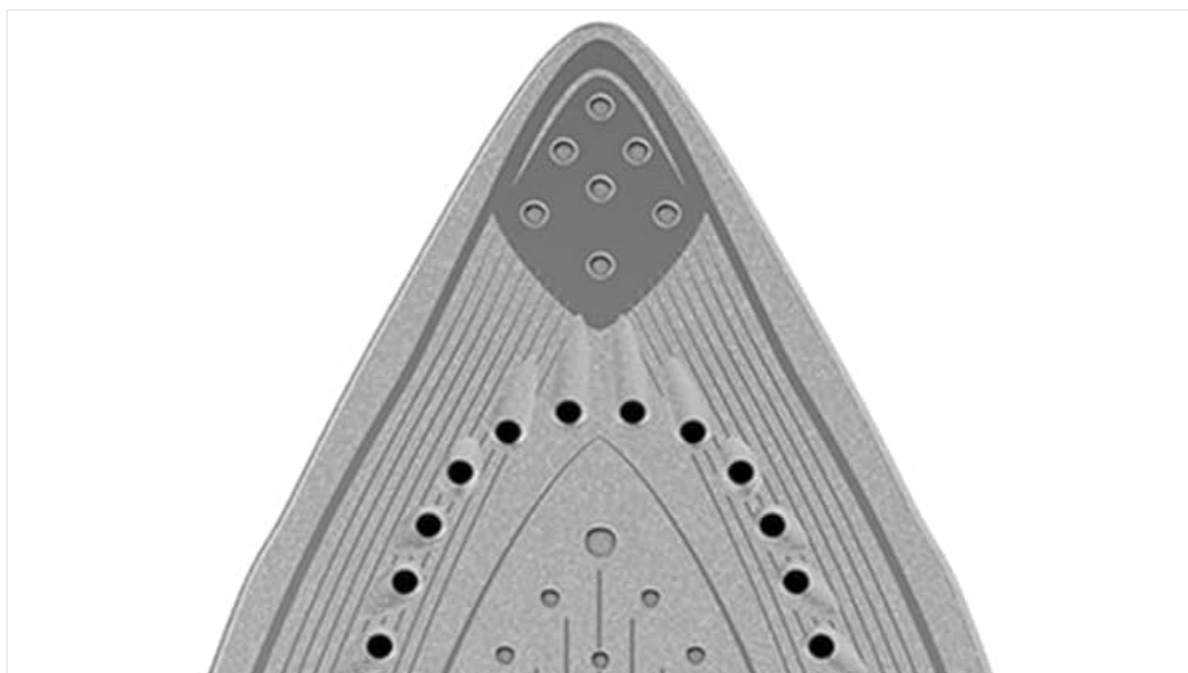




Figure 2: Top view showing the control buttons (Eco, Power, Anti-calc).



Figure 3: The Ceramic Xpress Glide soleplate for smooth gliding.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and check for any damage.
2. **Positioning:** Place the steam generator on a stable, heat-resistant surface, preferably an ironing board designed for steam generators.
3. **Filling the Water Tank:**
 - Ensure the appliance is unplugged.
 - Remove the water tank from the base.
 - Fill the 1.4 L tank with tap water. Do not exceed the maximum fill line.
 - Reinsert the water tank securely into the base.



Figure 4: Filling the generous 1.4 L water tank.

4. **Connecting to Power:** Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

1. Initial Heat-up

1. Press the Power button on the base. The indicator light will illuminate.
2. The appliance will heat up quickly, typically within 2 minutes. The steam ready indicator light will turn solid when ready.

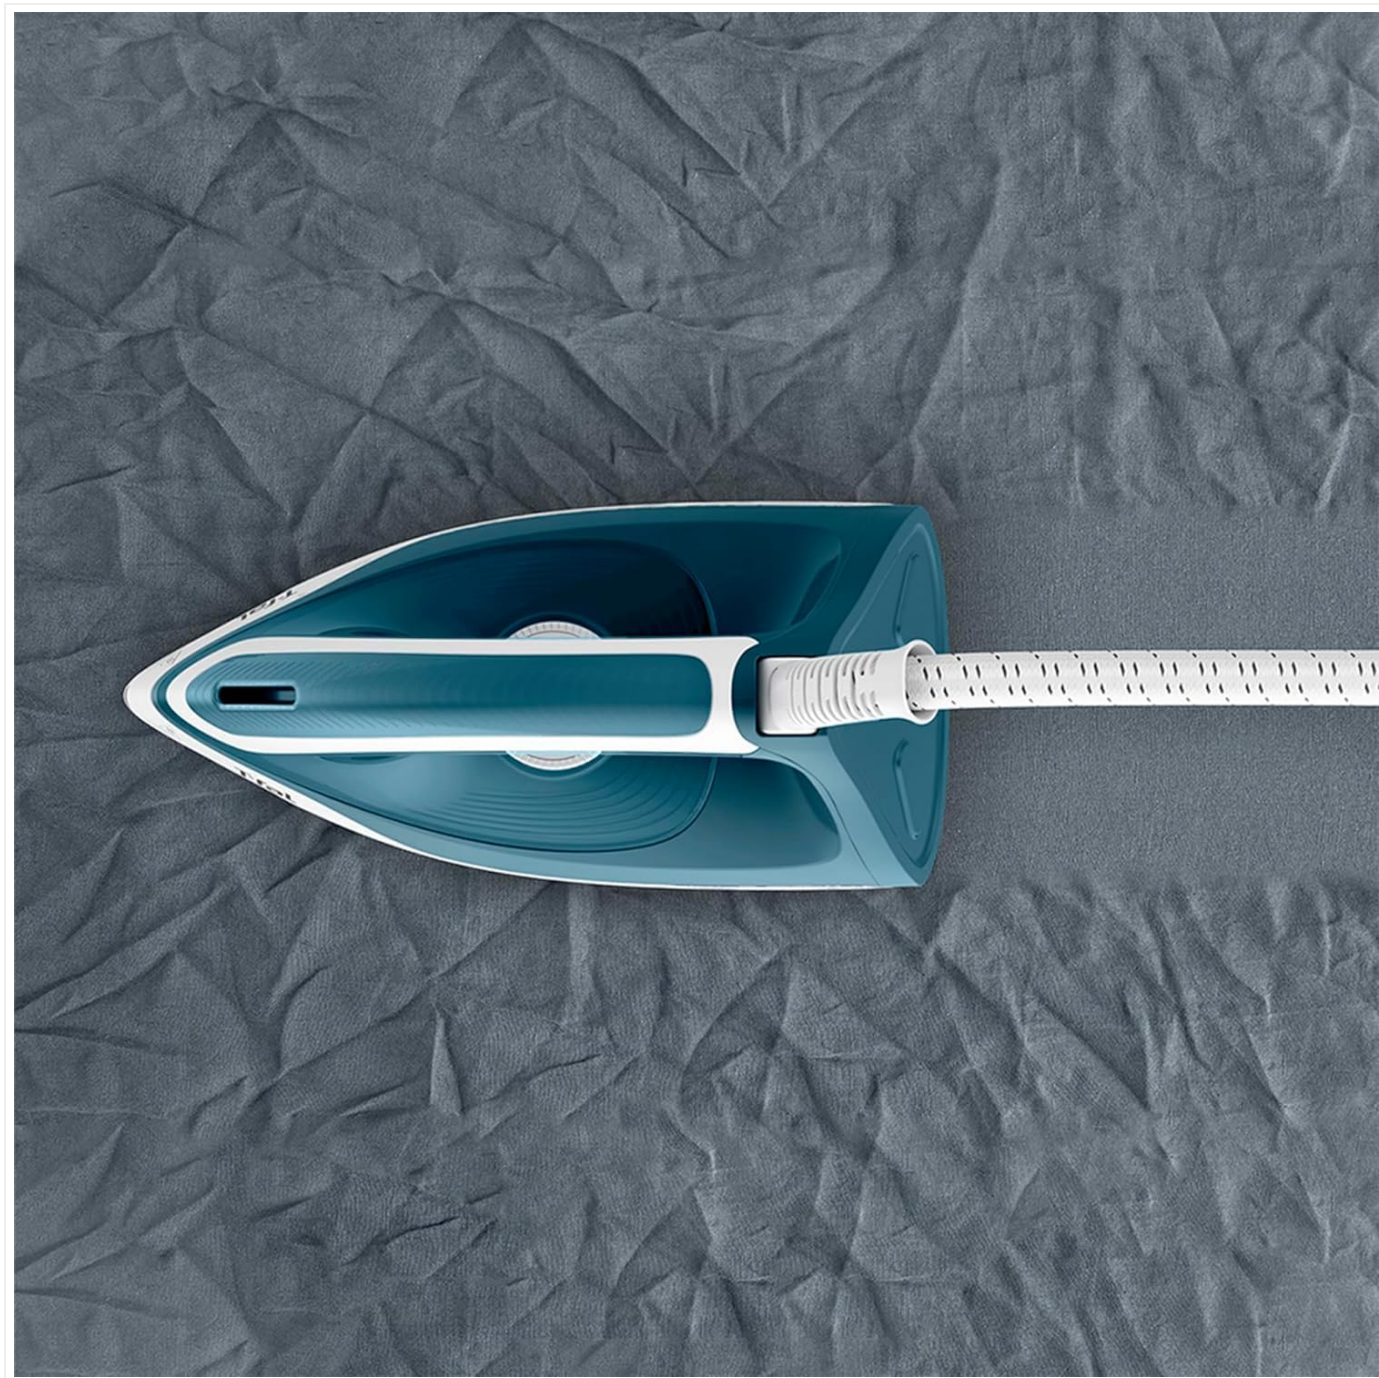


Figure 5: The iron heating up, ready for use in approximately 2 minutes.

2. Selecting Temperature

Rotate the temperature dial on the iron to select the appropriate setting for your fabric type. Always check the garment's care label.

3. Steam Ironing

- Once the iron is heated and the steam ready light is on, press the steam trigger under the handle to release continuous steam.
- The continuous steam output is 90 g/min for efficient ironing.
- For stubborn creases, use the steam boost function, which provides a powerful 280 g/min shot of steam.



Figure 6: Utilizing the continuous steam for effective wrinkle removal.

4. Vertical Steaming

The T-fal Express Easy supports vertical steaming for refreshing garments on hangers. Hold the iron a few centimeters away from the fabric and press the steam trigger.

ALTA EFICIENCIA



Figure 7: Demonstrating vertical steaming for hanging clothes.

5. Eco Mode

Press the "Eco" button on the base to activate energy-saving mode. This reduces steam output slightly while still providing effective ironing, conserving energy.

MAINTENANCE

1. Emptying the Water Tank

After each use, or when storing the appliance for an extended period, unplug the steam generator and allow it to cool completely. Remove the water tank and empty any remaining water. This helps prevent mineral buildup.

2. Descaling (Anti-Calc Function)

The appliance features an Anti-Calc function to prevent limescale buildup. When the Anti-Calc indicator light illuminates, it's time to perform the descaling procedure. Refer to the full product manual for detailed descaling instructions specific to

your model.

3. Cleaning the Soleplate

To clean the Ceramic Xpress Glide soleplate, ensure the iron is cool and unplugged. Wipe the soleplate with a damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the coating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam is produced.	Water tank is empty; appliance not heated; steam trigger not pressed.	Fill the water tank; wait for the steam ready light; press the steam trigger.
Water drips from the soleplate.	Temperature is too low for steam; iron not fully heated.	Increase the temperature setting; wait for the iron to reach the set temperature.
Appliance automatically shuts off.	Safety auto-off activated (30s horizontal, 8min vertical).	Move the iron or press the power button to reactivate.
Loud noise when steam is produced.	Normal operation sound of the pump.	This is normal and indicates the pump is generating steam pressure.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- Model:** SV6115X0
- Brand:** Tefal
- Color:** White and Blue
- Water Tank Capacity:** 1.4 Liters
- Continuous Steam Output:** 90 g/min
- Steam Boost:** 280 g/min
- Pump Pressure:** 6 bar
- Soleplate:** Ceramic Xpress Glide
- Wattage:** 1500 watts
- Dimensions (Approximate):** 39 cm (Length) x 21.2 cm (Width)
- Item Weight:** 3.7 Kilograms
- Safety Features:** Automatic safety shut-off (30s horizontal, 8min vertical), Anti-drip system.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Tefal website. Keep your proof of purchase for any warranty claims.

Tefal Official Website: www.tefal.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question