

- Manuals.plus /
- › ECONTROLLY /
- › ECONTROLLY AA59-00463A Replacement Remote Control User Manual

ECONTROLLY AA59-00463A

ECONTROLLY AA59-00463A Replacement Remote Control User Manual

Compatible with Samsung AA5900463A AA5900508A LA32C650L1F LT22A350NDZA LT23A350NDZA TV Models

1. INTRODUCTION

This manual provides detailed instructions for the ECONTROLLY AA59-00463A Replacement Remote Control. This remote is designed to function as a direct replacement for original Samsung remote controls, offering seamless compatibility with various Samsung TV models without the need for complex programming. The remote control is engineered for ease of use, featuring a familiar button layout and ergonomic design for comfortable handling. It operates using standard AAA batteries.



Image 1.1: Angled view of the ECONTROLLY AA59-00463A Replacement Remote Control.

2. SETUP

2.1 Battery Installation

The ECONTROLLY AA59-00463A remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



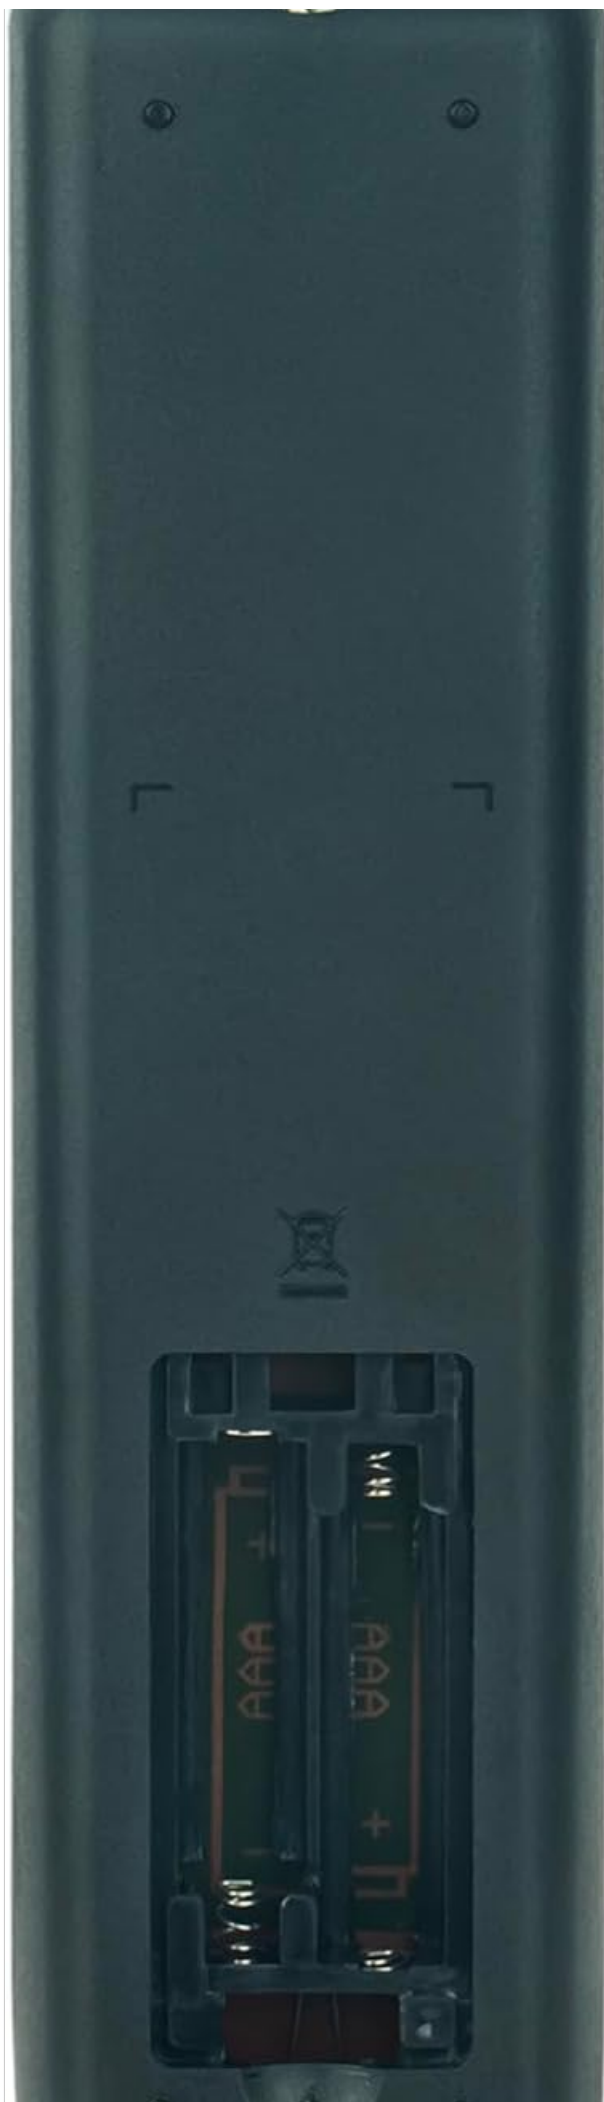




Image 2.1: Battery compartment with cover removed, showing AAA battery slots.

2.2 Initial Use

No programming is required for this replacement remote control. Once batteries are correctly installed, the remote is ready for immediate use with compatible Samsung TV models.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your ECONTROLLY AA59-00463A remote control.





Image 3.1: Front view of the remote control with all buttons labeled.

- **POWER (Red Button):** Turns the TV on or off.
- **SOURCE:** Changes the input source (e.g., HDMI, AV, Component).
- **Number Pad (0-9):** Directly selects TV channels or enters numerical values.
- **PRE-CH:** Returns to the previous channel.
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV audio.
- **CH (Up/Down):** Changes TV channels sequentially.
- **CH LIST:** Displays the channel list.
- **MENU:** Opens the TV's main menu.
- **CONTENT:** Accesses content features (may vary by TV model).
- **TOOLS:** Opens a quick menu with common functions.
- **SLEEP:** Sets the sleep timer.
- **INFO:** Displays information about the current program or input.
- **Navigation Pad (Up/Down/Left/Right/Enter):** Navigates through menus and confirms selections.
- **RETURN:** Returns to the previous menu or screen.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Provide access to specific functions within menus or applications, as indicated on the TV screen.

- **E-MANUAL:** Accesses the electronic user manual (if supported by TV).
- **SRS:** Activates or deactivates SRS sound modes.
- **P.MODE:** Changes picture modes (e.g., Standard, Dynamic, Movie).
- **P.SIZE:** Adjusts the picture size/aspect ratio.
- **CC:** Toggles Closed Captions on or off.
- **MTS:** Selects Multi-channel Television Sound options.
- **Playback Controls (Record, Play/Pause, Stop, Fast Forward, Rewind):** Controls media playback functions.

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps in Section 2.1 to replace the old batteries with new AAA alkaline batteries. Always replace both batteries at the same time.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's IR receiver.
- **Some buttons not working:**
 - This remote is a replacement and may not support all advanced functions of certain smart TVs or specific features not present on the original remote it replaces.
 - Ensure the TV model is listed as compatible.

6. SPECIFICATIONS

Feature	Specification
Model Number	AA59-00463A
Compatible Devices	Samsung Televisions (specific models: AA5900463A, AA5900508A, LA32C650L1F, LT22A350NDZA, LT23A350NDZA)
Power Source	2 x AAA Batteries (not included)
Color	Black

Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2.3 ounces
Special Feature	Ergonomic design

7. WARRANTY AND SUPPORT

For warranty information and customer support regarding your ECONTROLLY AA59-00463A Replacement Remote Control, please refer to the documentation provided at the time of purchase or contact the seller directly.

ECONTROLLY is committed to providing reliable products and assistance.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0CLTR4DLV>

More documents and user manuals: <https://manuals.plus/>