

KikkaBoo BEETLE (Model 31001030173)

KikkaBoo BEETLE Stroller User Manual

Model: **31001030173** | Brand: **KikkaBoo**

1. INTRODUCTION

Thank you for choosing the KikkaBoo BEETLE Stroller. This manual provides essential information for the safe and proper use, assembly, maintenance, and troubleshooting of your stroller. Please read this manual carefully before use and keep it for future reference.

The KikkaBoo BEETLE Stroller is designed for children from 6 months up to 22 kg (approximately 4 years old), offering a lightweight, compact, and comfortable solution for daily urban strolls.

2. SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in serious injury or death.

- Always use the 5-point harness system to secure your child.
- Never leave your child unattended in the stroller.
- Ensure all locking devices are engaged before use.
- Do not overload the storage basket or hang bags on the handles, as this may cause the stroller to tip over. Maximum load for the basket is 3 kg.
- Do not use the stroller on stairs or escalators.
- Keep children clear of moving parts when making adjustments.
- This stroller is not suitable for running or skating.
- The stroller is designed for one child only.
- Regularly inspect the stroller for loose parts, damaged components, or worn fabric. Discontinue use if any damage is found.

3. COMPONENTS LIST

Before assembly, ensure all parts are present:

- Stroller Frame with Seat Unit
- Canopy
- Front Wheels (x2 pairs)
- Rear Wheels (x2 pairs)
- Removable Bumper Bar
- Storage Basket (pre-attached)



Figure 3.1: Overview of the KikkaBoo BEETLE Stroller in light grey.

4. SETUP AND ASSEMBLY

1. Unfolding the Stroller:

Place the stroller on a flat surface. Release the folding lock (if engaged). Pull the handles upwards firmly until the frame clicks into place, indicating it is fully open and locked. Ensure all parts are securely locked before placing a child in the stroller.



Figure 4.1: The stroller features a quick and easy folding mechanism for compact storage.

2. Attaching the Wheels:

Insert the front and rear wheel assemblies into their respective slots on the stroller frame until they click securely into place. Pull on the wheels to ensure they are firmly attached.

3. Attaching the Canopy:

Slide the canopy attachments onto the designated points on the stroller frame near the handles. Secure any clips or fasteners to ensure the canopy is firmly in place.

CONFORT PARA TI Y TU BEBÉ



Dosel con
parasol

Cómodo asiento
para el bebé

Amplio espacio de
almacenamiento

Figure 4.2: The large removable canopy provides shade and protection, with a mesh window for visibility.

4. Attaching the Bumper Bar:

Align the bumper bar with the attachment points on the front of the seat unit and push until it clicks into place. Ensure it is securely fastened before use. The bumper bar is removable for easier child access.

5. OPERATING INSTRUCTIONS

5.1. Adjusting the Backrest

The backrest can be adjusted with one hand to multiple positions for your child's comfort. Locate the adjustment mechanism at the back of the seat. Squeeze the lever and recline or raise the backrest to the desired position. Release the lever to lock it in place.

5.2. Adjusting the Footrest

To adjust the footrest, press the buttons on either side of the footrest and move it up or down to the desired angle. Release the buttons to lock it.



CONFORT AJUSTABLE

Consigue fácilmente la
posición más cómoda
para tu bebé

Figure 5.1: The stroller offers adjustable comfort with a multi-position backrest and removable bumper bar.

5.3. Using the Harness System

The stroller is equipped with a 5-point safety harness. To secure your child, place them in the seat and bring the shoulder straps over their shoulders, the waist straps around their waist, and the crotch strap between their legs. Insert the buckles into the central buckle until they click. To release, press the button on the central buckle.

5.4. Engaging the Brakes

To engage the rear brakes, press down firmly on the brake pedal located near the rear wheels. Ensure the stroller is stationary before releasing your grip. To release the brakes, lift the pedal upwards.

5.5. Swivel Wheel Lock

The front wheels feature a 360-degree swivel function for easy maneuverability. For stability on uneven terrain or when pushing straight, you can lock the front swivel wheels by pushing down the lever above each front wheel. Lift the lever to unlock.



DISEÑO LIGERO Y MANEJABLE

Capota ajustable con parasol

Marco de metal ligero

Ruedas que absorben los impactos

Rotación de 360° grados

Figure 5.2: Features include an adjustable canopy, lightweight metal frame, shock-absorbing wheels, and 360-degree swivel front wheels.

5.6. Folding the Stroller

To fold the stroller, ensure the canopy is retracted and the backrest is in its most upright position. Locate the folding mechanism (often a lever or button on the handle or side of the frame). Follow the quick-fold instructions, typically involving lifting a lever and pushing down on the frame until it collapses into a compact "umbrella" fold. Secure the folding lock to prevent accidental unfolding.

PARA TU PASEO DIARIO DE VERANO



Genial para climas cálidos



Movible y fácil de manejar



Diseño plegable



Asiento cómodo para tu pequeño



Figure 5.3: The stroller is designed for daily use, featuring a foldable design and comfortable seat.

6. MAINTENANCE AND CARE

- **Cleaning:** The fabric parts can be spot cleaned with a damp cloth and mild soap. Do not use harsh detergents or bleach. Allow to air dry completely. The frame can be wiped clean with a damp cloth.
- **Wheels:** Regularly check the wheels for debris and clean them as needed. Lubricate moving parts of the wheels and folding mechanism periodically with a silicone-based lubricant.
- **Storage:** Store the stroller in a dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all rivets, screws, and fasteners to ensure they are tight and secure. Replace any worn or damaged parts immediately.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Stroller does not unfold/fold easily.	Folding mechanism is stiff or obstructed.	Ensure all locks are disengaged. Lubricate moving parts with silicone spray. Check for obstructions.
Wheels squeak or are difficult to turn.	Dirt/debris in wheel bearings; lack of lubrication.	Clean wheels and axles. Apply silicone lubricant to moving parts.
Brakes are not holding securely.	Brake mechanism is dirty or worn.	Clean the brake mechanism. If problem persists, contact customer support.
Harness buckles are difficult to engage/disengage.	Dirt or debris in the buckle.	Clean the buckle mechanism. Ensure no fabric is obstructing.

8. SPECIFICATIONS

- **Model:** KikkaBoo BEETLE (31001030173)
- **Suitable Age:** From 6 months
- **Maximum Weight Capacity:** 22 kg
- **Product Dimensions (Unfolded L x W x H):** 60 x 48.5 x 105 cm
- **Product Weight:** 6 kg
- **Frame Material:** Alloy Steel
- **Fabric Composition:** 100% Polyester
- **Harness Type:** 5-point
- **Special Features:** Adjustable backrest and footrest, removable bumper bar, large removable canopy with mesh window, quick compact umbrella fold, storage basket, 360-degree swivel front wheels with lock.



Figure 8.1: The BEETLE Stroller is designed for durability, supporting children from 6 months up to 22 kg.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official KikkaBoo website. Keep your proof of purchase for any warranty claims. If you encounter any issues not covered in this manual, please contact KikkaBoo customer service for assistance.