

[Manuals.plus](#) /

› [Lefant](#) /

› Lefant Robot Vacuum Cleaner M210Pro User Manual

Lefant M210Pro

Lefant Robot Vacuum Cleaner M210Pro User Manual

Model: M210Pro

1. INTRODUCTION

The Lefant M210Pro Robot Vacuum Cleaner is designed to provide efficient and convenient floor cleaning for your home. Featuring powerful 2200Pa suction, a slim design, and multiple cleaning modes, it effectively handles dust, pet hair, and debris on hard floors and low-pile carpets. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your robot vacuum to ensure optimal performance.

2. WHAT'S IN THE BOX

Carefully unpack all components and check for any damage. Please retain the packaging material for future transport or storage.

- Lefant M210Pro Robot Vacuum Cleaner
- Charging Dock
- Power Adapter
- Side Brushes (4 pieces)
- User Manual
- Cleaning Tool

Your browser does not support the video tag.

Video: Lefant M210Pro Unboxing. This video demonstrates the contents of the product packaging and the initial unboxing process for the robot vacuum cleaner.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Lefant M210Pro robot vacuum.



Image: Top view of the Lefant M210Pro robot vacuum cleaner, showcasing its compact design and the accompanying mobile application interface.

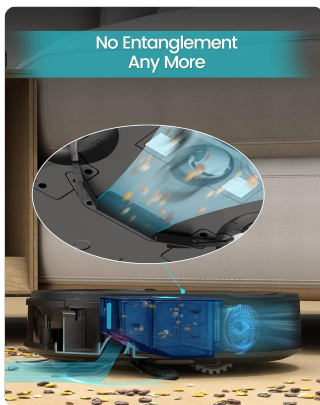 


Image: Close-up of the M210Pro's direct suction port, designed to prevent hair entanglement during cleaning.

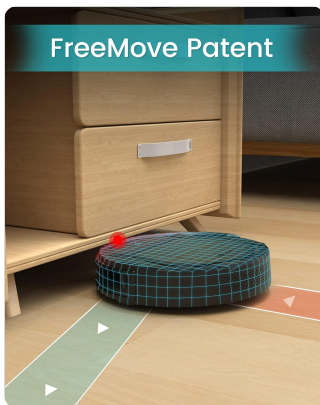 


Image: Illustration of the FreeMove Patent technology, showing the robot vacuum navigating around obstacles with its intelligent sensors.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the robot vacuum. Place the charging dock against a wall in an open area, ensuring no obstacles are within 1 meter (3 feet) to the front and 0.5 meters (1.5 feet) to the sides. Connect the power adapter to the charging dock and plug it into a wall outlet. Place the robot vacuum onto the charging dock, aligning its charging contacts with those on the dock. The indicator light will show charging status.

4.2 Installing Side Brushes

Attach the side brushes to the corresponding posts on the bottom of the robot vacuum. Press firmly until they click into place.

4.3 Connecting to the Lefant App

For full functionality, connect your robot vacuum to the Lefant App.

1. Download the Lefant App from your mobile device's app market.
2. Open the app and click "Add equipment". Ensure Bluetooth is enabled on your phone.
3. Turn on the robot vacuum. Press and hold the start button for 6 seconds until the robot enters pairing mode.
4. The app will automatically detect the M210Pro robot and guide you through the connection page.
5. Ensure your phone is connected to a 2.4GHz Wi-Fi network.
6. Wait for the robot to pair successfully.

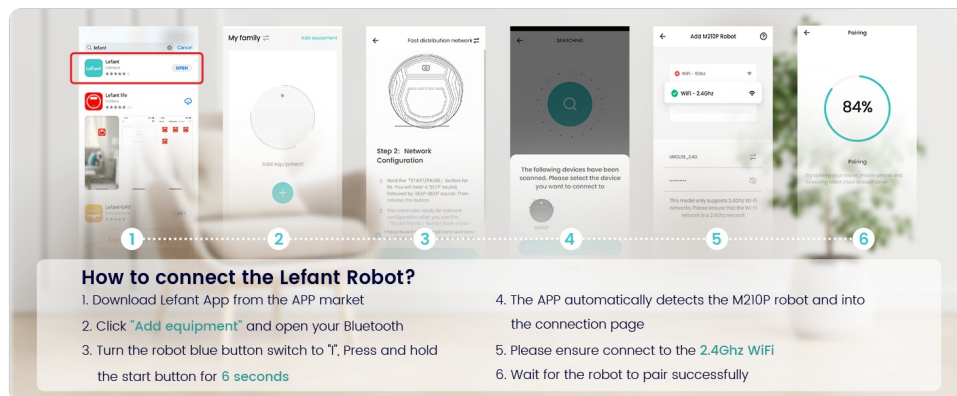


Image: Step-by-step guide on how to connect the Lefant Robot Vacuum Cleaner to the Lefant mobile application.

4.4 Connecting to Alexa/Google Assistant

Integrate your robot vacuum with voice assistants for convenient control.

1. Open the Lefant APP, navigate to "Mine" then "Voice third-party".
2. Access the service.
3. Record your voice account and password. Open the Alexa APP, go to "More" then "Skills & Games".
4. Search for "Smart Life".
5. Click "ENABLE TO USE".
6. Select your region and enter the voice account password from step 2.
7. Wait for Alexa to connect successfully.

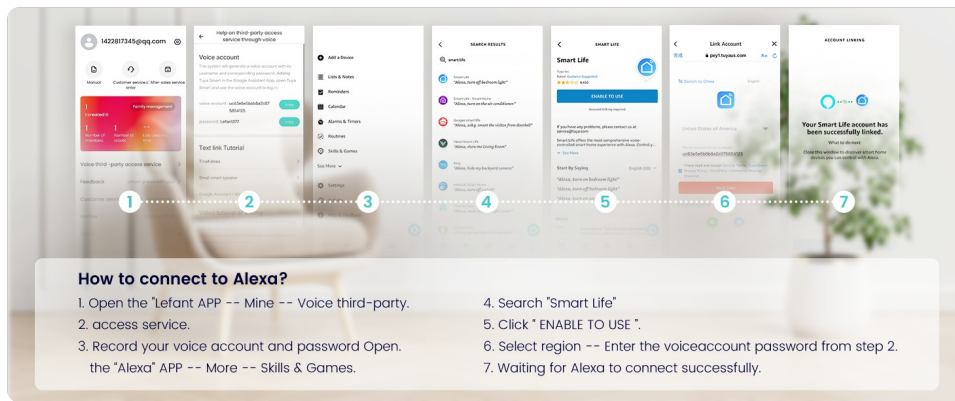 


Image: Instructions for connecting the Lefant Robot Vacuum Cleaner to Amazon Alexa for voice control.

5. OPERATING YOUR ROBOT VACUUM

5.1 Cleaning Modes

The M210Pro offers various cleaning modes to suit different needs, controllable via the app or the robot's button.

- **Zig-zag Cleaning:** Ideal for large, open areas, cleaning in a systematic back-and-forth pattern.
- **Random Cleaning:** Suitable for complex environments, the robot navigates randomly to cover the area.
- **Spot Cleaning:** Focuses on a specific dirty area, cleaning in a spiral pattern.
- **Cleaning Along the Wall (Edge Cleaning):** Cleans along the edges of rooms and furniture.
- **Schedule Cleaning:** Set specific times for the robot to automatically start cleaning.
- **Manual Cleaning:** Control the robot's movement manually via the app.



Image: Visual representation of the robot vacuum's zig-zag cleaning pattern for efficient coverage.



Image: Depiction of the robot vacuum's random cleaning path, suitable for varied room layouts.



Image: Illustration of the robot vacuum performing spot cleaning in a concentrated spiral motion.



Image: The robot vacuum cleaning along the edges of a room, demonstrating its edge cleaning mode.

5.2 Suction Power and Pet Hair

The M210Pro features 2200Pa powerful suction, effectively picking up dust and pet hair without tangling, thanks to its unique suction port design.



Image: Diagram illustrating the different suction levels available, from Quiet (1000Pa) to Powerful (2200Pa).



Image: Comparison showing the M210Pro's tangle-free suction port versus traditional robot vacuums with roller brushes that often get tangled with hair.

5.3 Smart Navigation and Features

The M210Pro is equipped with advanced sensors for efficient navigation and safety.

- **Slim Design:** At only 2.99 inches tall, it can easily clean under furniture.
- **Anti-collision:** Built-in infrared sensors detect obstacles and prevent collisions.
- **Anti-fall:** Sensors prevent the robot from falling down stairs or off ledges.
- **Auto-recharge:** The robot automatically returns to its charging dock when cleaning is complete or battery is low.
- **Long Battery Life:** Up to 120 minutes of cleaning on a single charge.



Image: The robot vacuum's slim profile (2.99 inches) allowing it to clean under low furniture.



Image: The robot vacuum detecting a drop-off, illustrating its anti-fall sensor functionality.



Image: The robot vacuum avoiding an obstacle, demonstrating its anti-collision capabilities.



Image: The robot vacuum returning to its charging dock, illustrating the auto-recharge feature.

6. MAINTENANCE

Regular maintenance ensures your robot vacuum operates efficiently and extends its lifespan.

6.1 Emptying the Dustbin

Empty the dustbin after each cleaning cycle or when it is full. The M210Pro has a 500ml dustbin capacity.



Image: The 500ml dustbin of the Lefant M210Pro robot vacuum, shown removed from the unit.

6.2 Cleaning Side Brushes

Periodically remove and clean the side brushes to ensure they are free of hair and debris. Replace them if they are worn or damaged.

6.3 Cleaning Sensors

Wipe the anti-drop sensors and anti-collision sensors with a clean, dry cloth to remove any dust or dirt that may interfere with their function.

7. TROUBLESHOOTING

If your robot vacuum encounters an issue, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on or respond.	Low battery; Power switch off.	Charge the robot; Ensure the power switch is in the 'ON' position.
Robot does not charge.	Charging contacts are dirty; Charging dock not powered.	Clean charging contacts on robot and dock; Ensure power adapter is securely plugged in.
Robot gets stuck frequently.	Too many obstacles; Sensors are dirty.	Clear obstacles from the cleaning path; Clean all sensors.
Poor cleaning performance.	Dustbin full; Side brushes tangled/worn; Suction port blocked.	Empty dustbin; Clean/replace side brushes; Clear any blockages from the suction port.
Robot cannot connect to Wi-Fi.	Incorrect Wi-Fi password; Not 2.4GHz network; Robot too far from router.	Verify password; Connect to a 2.4GHz network; Move robot closer to router.

8. SPECIFICATIONS

Feature	Detail
Brand	Lefant
Model Name	M210PB
Special Features	Anti-Collision, Anti-Fall, Pet Hair Pick Up, Low Noise, Auto-Docking
Color	Black
Product Dimensions	11"L x 11"W x 2.99"H

Feature	Detail
Included Components	Robot Vacuum, Charging Dock, Power Adapter, Side Brushes, User Manual, Cleaning Tool
Filter Type	Cartridge
Battery Life	120 minutes
Dustbin Capacity	500 Milliliters
Power Source	Battery Powered
Control Method	App, Voice
Compatible Devices	Smartphones, Amazon Echo, Google Home
Item Weight	4.4 pounds
Manufacture Year	2022

9. WARRANTY AND SUPPORT

Lefant products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Lefant website. If you encounter any issues or require technical assistance, please contact Lefant customer support through the contact information provided in your product documentation or on the official website.

Lefant Official Website: [Lefant Store on Amazon](#)

© 2024 Lefant. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CLTSDF4S>

More documents and user manuals: <https://manuals.plus/>