

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [vidaXL](#) /
- › [vidaXL Manual Recliner Chair \(Model: Système inclinaison manuel\) User Manual](#)

vidaXL Système inclinaison manuel

vidaXL Manual Recliner Chair (Model: Système inclinaison manuel) User Manual

Comprehensive instructions for assembly, operation, and maintenance.

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new vidaXL Manual Recliner Chair. Please read these instructions thoroughly before attempting assembly or operation. Retain this manual for future reference.



Front view of the vidaXL Manual Recliner Chair in dark gray fabric, showcasing its design.

2. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please observe the following safety guidelines:

- Read all instructions carefully before assembling and using the chair.
- Keep children and pets away from the assembly area. Small parts may pose a choking hazard.
- Do not stand on the chair. Use it only for sitting.
- Ensure all bolts, screws, and connectors are securely tightened before use and periodically check for looseness.
- The maximum weight capacity for this recliner is **242.5 pounds (110 kg)**. Do not exceed this limit.
- Avoid placing the chair near heat sources or in direct sunlight for prolonged periods to prevent material

degradation.

- Use the chair on a level and stable surface.
- Keep hands and feet clear of the reclining mechanism during adjustment to prevent pinching.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

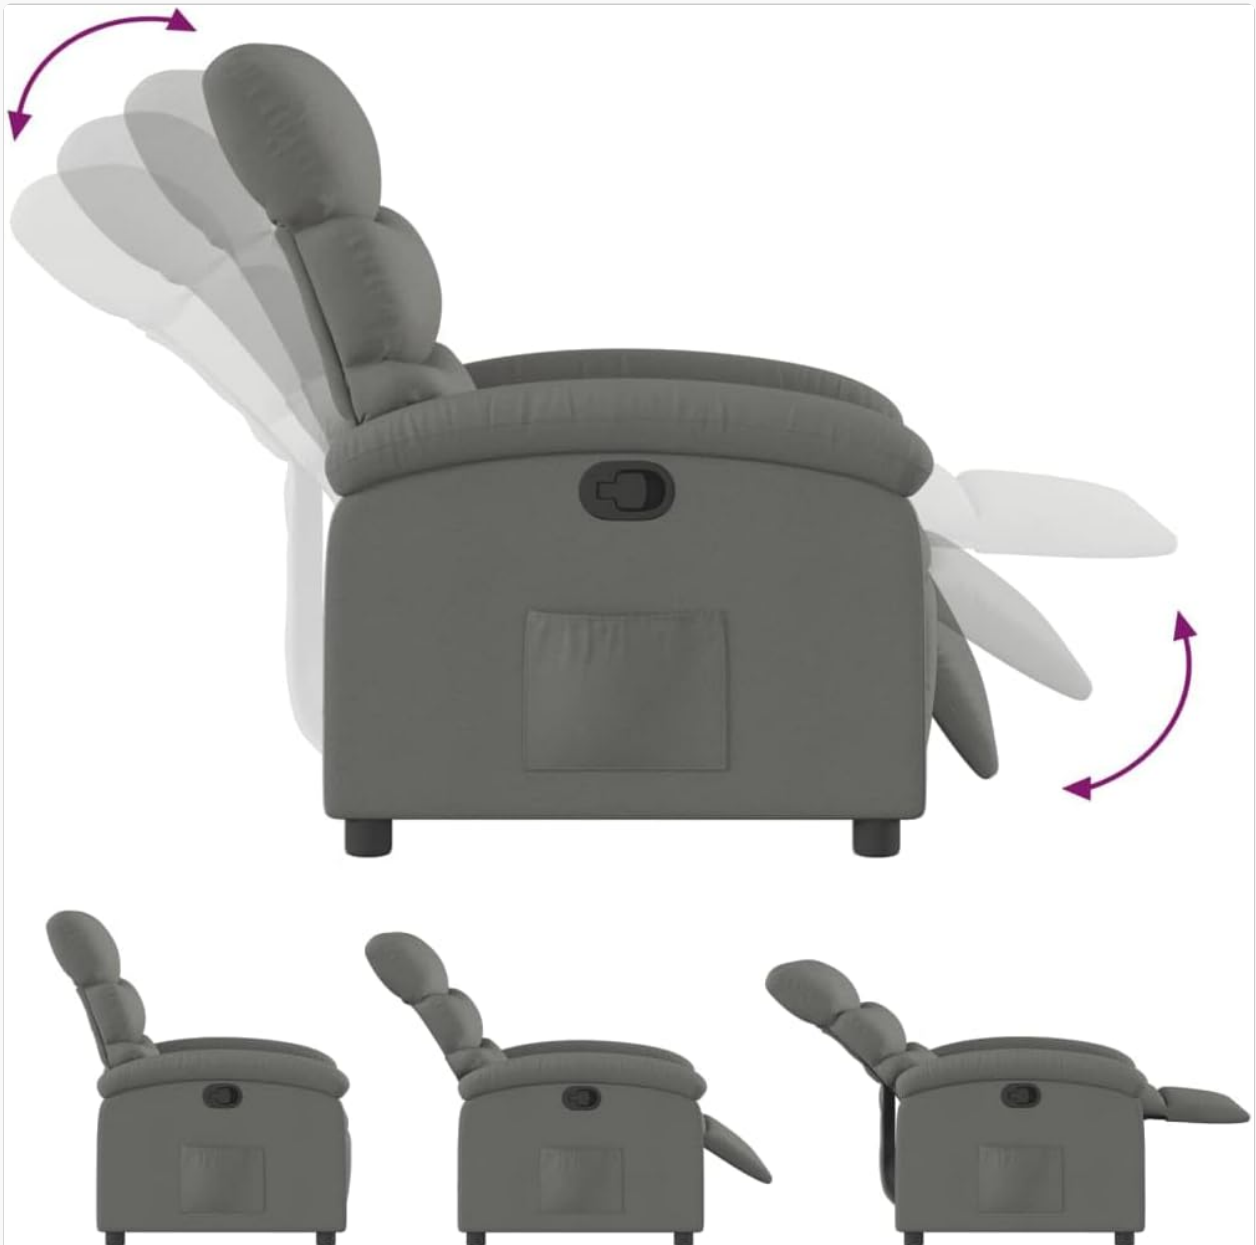 



Diagram showing the individual components of the recliner chair, useful for assembly.

- Backrest Section
- Seat Section with Armrests
- Chair Legs (4x)
- Hardware Pack (screws, washers, Allen key)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. It is recommended to have two people for easier assembly. All necessary tools are included.

 1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Attach Legs:** Turn the seat section upside down. Attach the four chair legs to the designated points on the base using the provided screws and Allen key. Ensure they are tightened securely.
3. **Connect Backrest:** Align the metal brackets on the backrest with the corresponding slots on the seat section. Slide the backrest down firmly until it clicks into place. You may need to apply gentle pressure.
4. **Secure Backrest (if applicable):** Some models may require additional screws or levers to secure the backrest. Refer to the specific diagrams in your hardware pack for details.
5. **Final Check:** Once assembled, gently rock the chair to ensure all connections are stable and secure. Do not use the chair if it feels unstable.

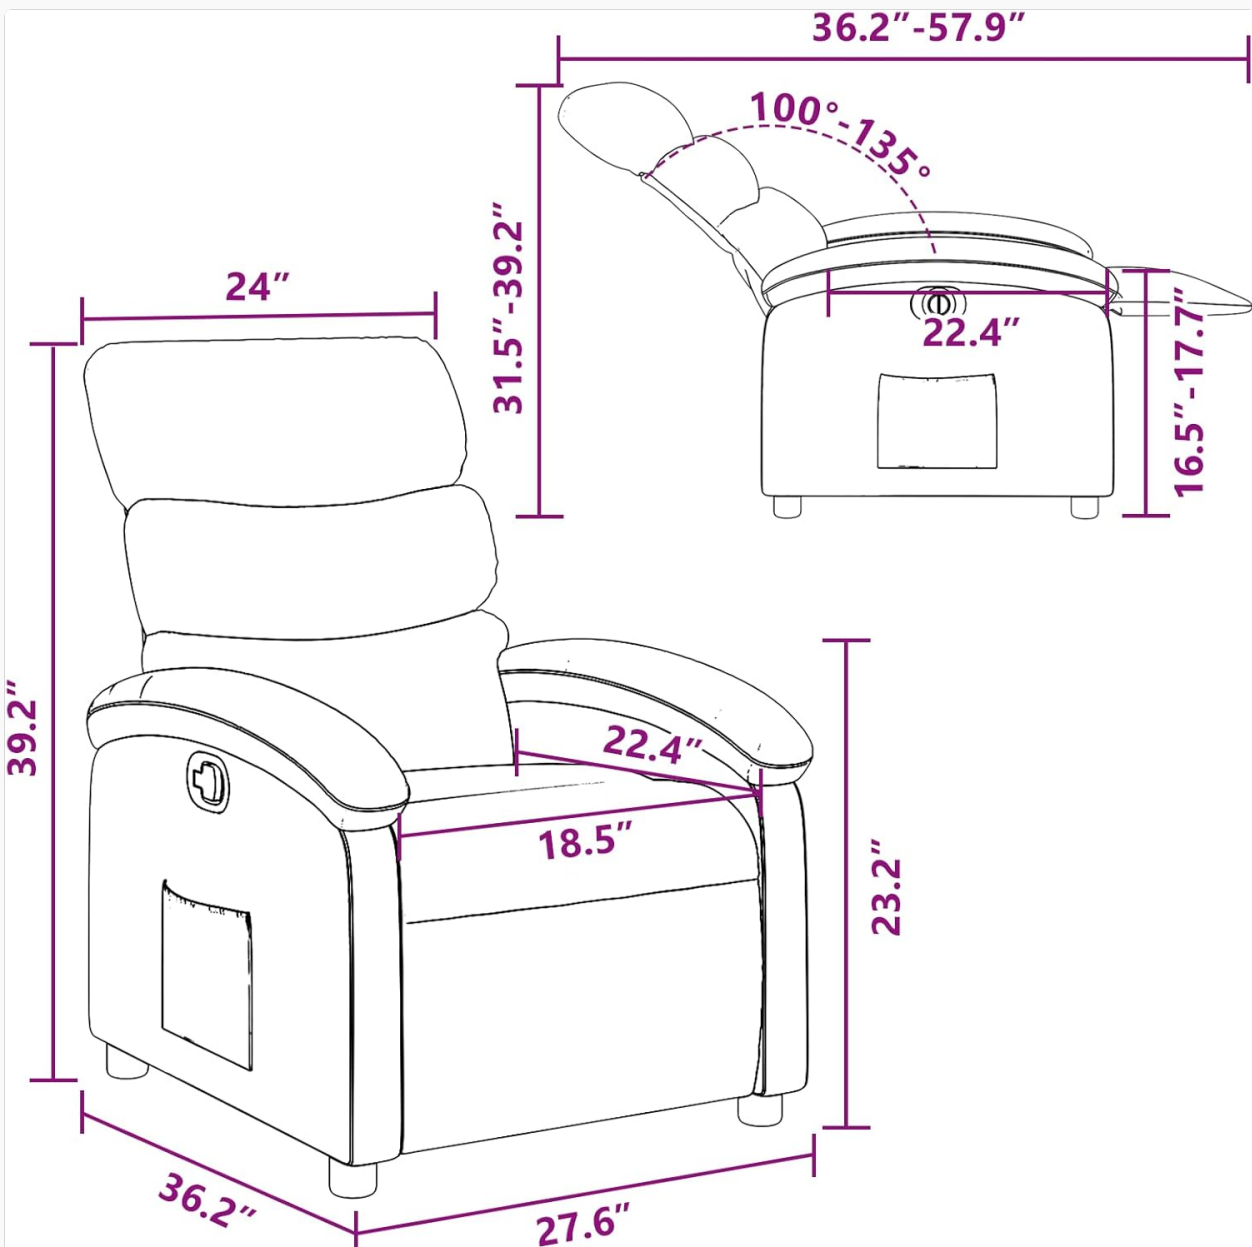

Detailed diagram illustrating the dimensions of the recliner chair in both upright and reclined positions, which can assist in

5. OPERATING INSTRUCTIONS

5.1 Reclining the Chair

Your vidaXL Manual Recliner Chair features a manual reclining mechanism for personalized comfort.

1. **To Recline:** Locate the reclining handle on the right side of the chair (when seated). Pull the handle upwards. Lean back gently, applying pressure to the backrest, and the footrest will extend while the backrest reclines. You can adjust the angle up to 135 degrees.
2. **To Return to Upright Position:** Push down on the footrest with your legs while simultaneously leaning forward. The backrest will return to its original position, and the footrest will retract. Ensure the footrest is fully locked before exiting the chair.



A series of images demonstrating the smooth transition of the chair from upright to fully reclined position.


5.2 Using the Side Pocket

The integrated side pocket provides convenient storage for small items.

- Use the side pocket to store items such as remote controls, magazines, books, or small electronic devices.
- Avoid overloading the pocket or placing sharp objects that could damage the fabric.

Ergonomic Curve Design

Reclining at the angle you prefer

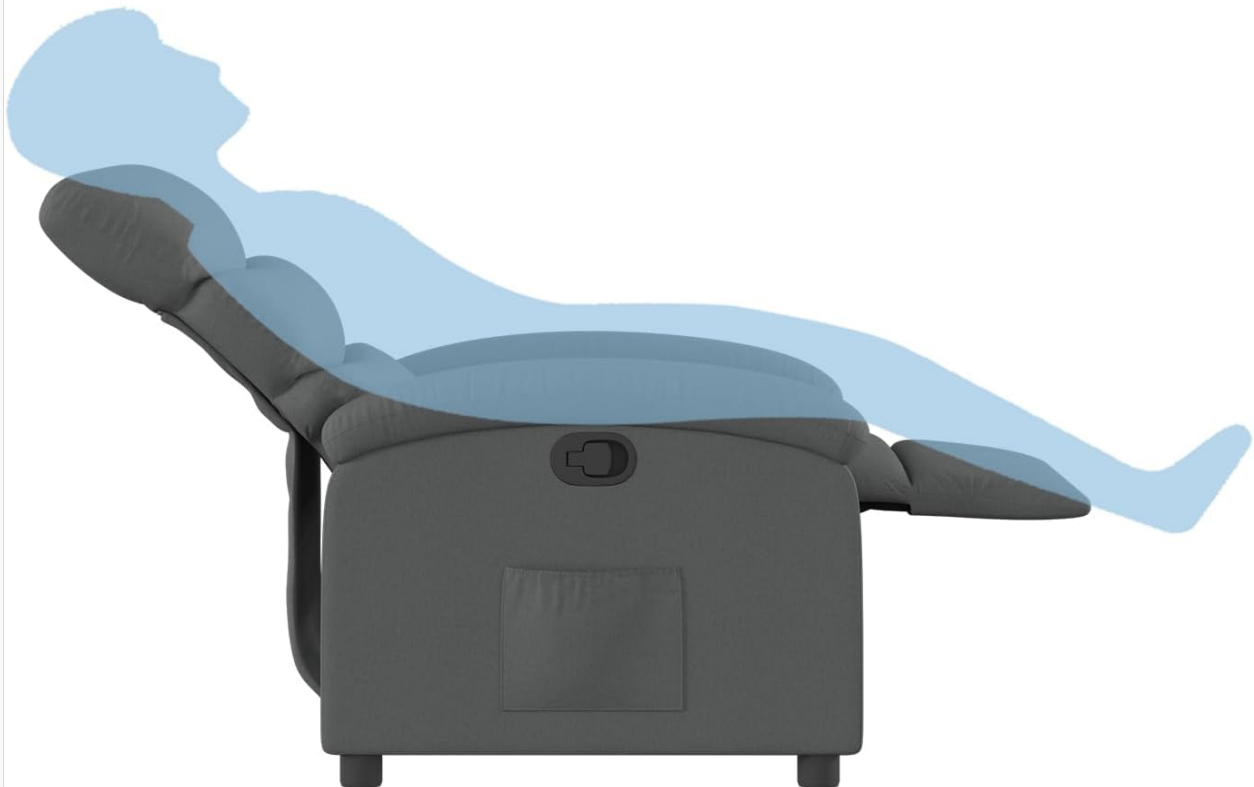

A close-up image highlighting the integrated side pocket for convenient storage.

6. MAINTENANCE AND CARE

6.1 Fabric Care

- The fabric covering of this recliner is **100% Polyester**. For cleaning, **dry clean only** is recommended.
- For minor spills, blot immediately with a clean, dry cloth. Do not rub.
- Vacuum regularly using an upholstery attachment to remove dust and debris.

- Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the fabric and internal components.

6.2 General Maintenance

- Periodically check all bolts and screws to ensure they remain tight. Re-tighten if necessary.
- Inspect the reclining mechanism for any obstructions or signs of wear.
- Keep the area around the reclining mechanism clear of debris.

7. TROUBLESHOOTING

If you encounter any issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair does not recline smoothly.	Mechanism obstructed or stiff.	Check for any objects obstructing the mechanism. Apply a small amount of silicone lubricant to moving parts if necessary.
Chair feels unstable or wobbly.	Loose legs or uneven surface.	Ensure all legs are securely tightened. Place the chair on a level surface.
Footrest does not retract fully.	Mechanism obstruction or insufficient forward pressure.	Check for obstructions. Apply firm, consistent forward pressure with your body and legs to retract the footrest completely.
Squeaking noises during operation.	Loose fasteners or dry joints.	Tighten all visible bolts and screws. Apply silicone lubricant to pivot points if the noise persists.

If the problem persists after attempting these solutions, please contact vidaXL customer support.


8. PRODUCT SPECIFICATIONS

Brand:	vidaXL
Model Name:	Système inclinaison manuel
Color:	Dark Gray
Product Dimensions (Upright):	36.2"D x 27.6"W x 39.2"H (91.9 cm D x 70.1 cm W x 99.6 cm H)
Seat Height:	16.5 Inches (41.9 cm)
Seat Depth:	22.4 inches (56.9 cm)
Seat Length:	18.5 Inches (47 cm)

Maximum Weight Recommendation:	242.5 Pounds (110 kg)
Material:	100% Polyester Fabric, Wood, Metal
Special Feature:	Side Pocket
Reclining Angle:	Adjustable up to 135 degrees
Item Weight:	37.5 pounds (17 kg)
Care Instructions:	Dry Clean Only



 110kg Max.Load

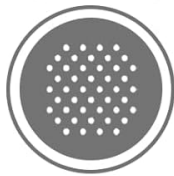

High Density Sponge



High Rebound

Illustration showing the ergonomic design and various reclining angles (reading, TV, sleeping) supported by the chair.

9. WARRANTY AND SUPPORT

For information regarding the warranty of your vidaXL Manual Recliner Chair, please refer to the warranty card included with your purchase or visit the official vidaXL website.

If you require assistance with assembly, operation, or troubleshooting that is not covered in this manual,

please contact vidaXL customer support:

- **Website:** www.vidaxl.com (Check for local contact information)
- **Online Support:** Refer to the contact section on the vidaXL website for email or chat support options.

Please have your model number (Système inclinaison manuel) and purchase details ready when contacting support.