

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SUPERLEX](#) /
- › [SUPERLEX 42CM Multifunctional Electric Pan, 1500W User Manual](#)

SUPERLEX 42CM

SUPERLEX 42CM Multifunctional Electric Pan User Manual

Model: 42CM | Power: 1500W

1. INTRODUCTION

Thank you for choosing the SUPERLEX 42CM Multifunctional Electric Pan. This versatile 1500W electric pan is designed to simplify your cooking experience, offering a wide range of functions including steaming, boiling, frying, grilling, and hot pot preparation. Its non-stick coating ensures easy food release and quick cleaning, while the adjustable temperature control provides precision for various culinary tasks. This manual provides essential information for safe and efficient use of your appliance.



Image 1: The SUPERLEX 42CM Multifunctional Electric Pan with its transparent glass lid.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Do not immerse the pan body, power cord, or thermostat in water or any other liquid.
- Keep the appliance out of reach of children and pets.
- Always unplug the appliance from the power outlet when not in use, before cleaning, and before assembling or disassembling parts.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- Use the appliance on a stable, heat-resistant surface, away from flammable materials.
- Do not touch hot surfaces. Use handles or knobs.

- Avoid using metal utensils on the non-stick surface to prevent scratching.
- Ensure the thermostat is properly inserted before use and removed before cleaning.
- This appliance is for household use only. Do not use outdoors.

3. PRODUCT COMPONENTS

The SUPERLEX Multifunctional Electric Pan consists of the following main components:

- **Electric Pan Body:** The main cooking vessel with non-stick coating and integrated handles.
- **Tempered Glass Lid:** Transparent lid with a cool-touch knob for monitoring cooking.
- **Removable Thermostat with Power Cord:** Controls the heating element and temperature settings.



Image 2: Overview of the electric pan, highlighting its non-stick coating, 6.3cm depth, 42cm diameter, 1500W power, and adjustable temperature.

4. SETUP

Before first use, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and inspect the pan for any damage.
2. **Clean:** Wash the pan body and glass lid with warm, soapy water. Rinse thoroughly and dry completely. Do NOT immerse the thermostat or power cord in water.
3. **Position:** Place the electric pan on a stable, flat, and heat-resistant surface. Ensure there is adequate ventilation around the appliance.
4. **Connect Thermostat:** Insert the removable thermostat firmly into the receptacle on the side of the pan. Ensure it clicks securely into place.
5. **Power On:** Plug the power cord into a grounded 220V electrical outlet.



Image 3: The electric pan with its removable thermostat controller, ready for use.

5. OPERATING INSTRUCTIONS

5.1 Temperature Control

The pan features a 5-level rotary thermostat for precise temperature adjustment, ranging from 100 °C to 240 °C. Turn the

knob to select your desired heat setting:

- **Level 1-2 (Low):** Ideal for keeping food warm or slow simmering.
- **Level 3 (Medium):** Suitable for gentle frying, sautéing, or boiling.
- **Level 4-5 (High):** Perfect for searing, deep frying, or rapid boiling.



Image 4: Detailed view of the 5-level adjustable thermostat for precise temperature control.

5.2 Cooking Functions

This multifunctional pan supports various cooking methods:

- **Frying/Sautéing:** Add a small amount of oil, preheat to desired temperature (Level 3-4), then add ingredients.
- **Boiling/Simmering:** Fill with water or broth, bring to a boil (Level 5), then reduce heat to simmer (Level 1-2).
- **Grilling:** Preheat to high temperature (Level 4-5) for grilling meats or vegetables.
- **Hot Pot:** Ideal for communal cooking. Fill with broth, bring to a boil, and maintain temperature (Level 2-3) while cooking ingredients.

- **Steaming:** (Requires a separate steaming rack, not included). Add water to the pan, place rack with food, cover with lid, and heat.



Multifunktions-Elektropfanne

Image 5: The electric pan used for cooking a meal of shrimp and rice, demonstrating its versatility.

PRAKTISCHES UND EFFIZIENTES KOCHEN

Partypfanne mit 1500W Leistung und Aluminiuguss für schnelle und gleichmäßige Erwärmung.



ABNEHMBARER THERMOSTATREGLER

Image 6: A visual guide showcasing various dishes that can be prepared, including fried seafood risotto, pasta, and creamy mushroom soup.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your electric pan.

1. **Cool Down:** Always allow the pan to cool completely before cleaning.
2. **Unplug:** Disconnect the thermostat and power cord from the pan and the electrical outlet.
3. **Clean Pan Body:** The non-stick cooking surface can be easily cleaned with warm, soapy water and a soft sponge or cloth. For stubborn food residue, soak the pan in warm water for a few minutes before cleaning. Rinse thoroughly and dry completely.
4. **Clean Lid:** The tempered glass lid can be washed with warm, soapy water and is generally dishwasher-safe.
5. **Clean Thermostat:** Wipe the thermostat with a damp cloth. Do NOT immerse it in water. Ensure it is completely dry before storing or next use.
6. **Storage:** Store the clean, dry pan and its components in a safe, dry place.

Important: The non-stick coating allows for healthier cooking with less oil and ensures easy food release. To preserve the

non-stick properties, avoid using abrasive cleaners, metal scouring pads, or sharp metal utensils.



Image 7: The electric pan in use, demonstrating its non-stick surface for cooking salmon with minimal oil, making cleaning easier.

7. TROUBLESHOOTING

If you encounter issues with your electric pan, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Pan does not heat up.	Not plugged in; thermostat not properly inserted; power outlet malfunction.	Ensure power cord is securely plugged into a working outlet. Check if the thermostat is fully inserted into the pan's receptacle. Test the outlet with another appliance.

Problem	Possible Cause	Solution
Food sticks to the pan.	Insufficient oil; pan not preheated; damaged non-stick coating.	Use a small amount of cooking oil. Allow the pan to preheat to the desired temperature before adding food. Avoid using metal utensils that can damage the coating.
Pan overheats or burns food.	Temperature setting too high; thermostat malfunction.	Adjust the temperature knob to a lower setting. If the issue persists, the thermostat may be faulty; discontinue use and contact customer support.
Power trips circuit breaker.	Overload on circuit; faulty appliance.	Ensure no other high-wattage appliances are on the same circuit. If the problem continues, discontinue use and contact customer support as the appliance may be faulty.

8. SPECIFICATIONS

Feature	Specification
Brand	SUPERLEX
Model	42CM Multifunctional Electric Pan
Color	Black
Product Dimensions (L x W x H)	Approx. 30 x 32 x 7 cm (Cooking Surface); Overall Diameter: 42CM
Volume	9.6 Liters
Power	1500 Watts
Voltage	220 Volts
Material	Metal, Tempered Glass
Automatic Shut-off Function	Yes
Features	Temperature Control, Glass Lid, Versatile Cooking, Powerful 1500W, Non-stick Surface
Item Weight	4 Kilograms
ASIN	B0CLTTY9WD

9. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For details regarding warranty coverage, returns, or technical support, please refer to the purchase documentation or contact the seller directly. Keep your proof of purchase for any warranty claims.

