

SWDSTP SWD-601

SWDSTP AM/FM Personal Portable Mini Radio User Manual

Model: SWD-601

INTRODUCTION

This user manual provides comprehensive instructions for the operation and maintenance of your SWDSTP AM/FM Personal Portable Mini Radio, Model SWD-601. This compact and lightweight radio features digital tuning, an LCD display with backlight, and a built-in rechargeable battery, making it ideal for various activities such as walking, jogging, and camping. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Figure 1: SWDSTP Portable AM/FM Radio with included earphones and belt clip.

WHAT'S IN THE BOX

Upon opening the package, please verify that all the following items are included:

- SWDSTP AM/FM Portable Radio
- Earphones
- USB Cable (for charging)
- Detachable Belt Clip and Lanyard
- Owner's Manual (this document)

WHAT'S IN THE BOX?

Choose us, you will have the most complete accessories



Figure 2: All components included in the product packaging.

SETUP

Initial Charging

Before first use, it is recommended to fully charge the radio for 2-3 hours. Connect the provided USB cable to the radio's USB charging jack and to a compatible USB power source (e.g., computer USB port, USB wall adapter). The battery indicator on the LCD display will show charging status.

BACKLIGHT/TIME DISPLAY

The upgraded display with backlight and time, which is more suitable for walking and jogging at night.

Charge the radio for 2-3 hours before first use



Figure 3: The radio's backlit display, indicating battery status and time. Ensure the radio is charged before initial use.

Attaching the Belt Clip

The radio comes with a detachable belt clip for convenient portability. To attach, align the clip with the designated slot on the back of the radio and slide it into place until it clicks securely. The clip can be removed by sliding it off in the opposite direction.


EASY TO USE

Clear button function, simple operation, built-in removable clip



Figure 4: Detailed view of the radio's features, including the removable belt clip and lanyard hole.

Notes:

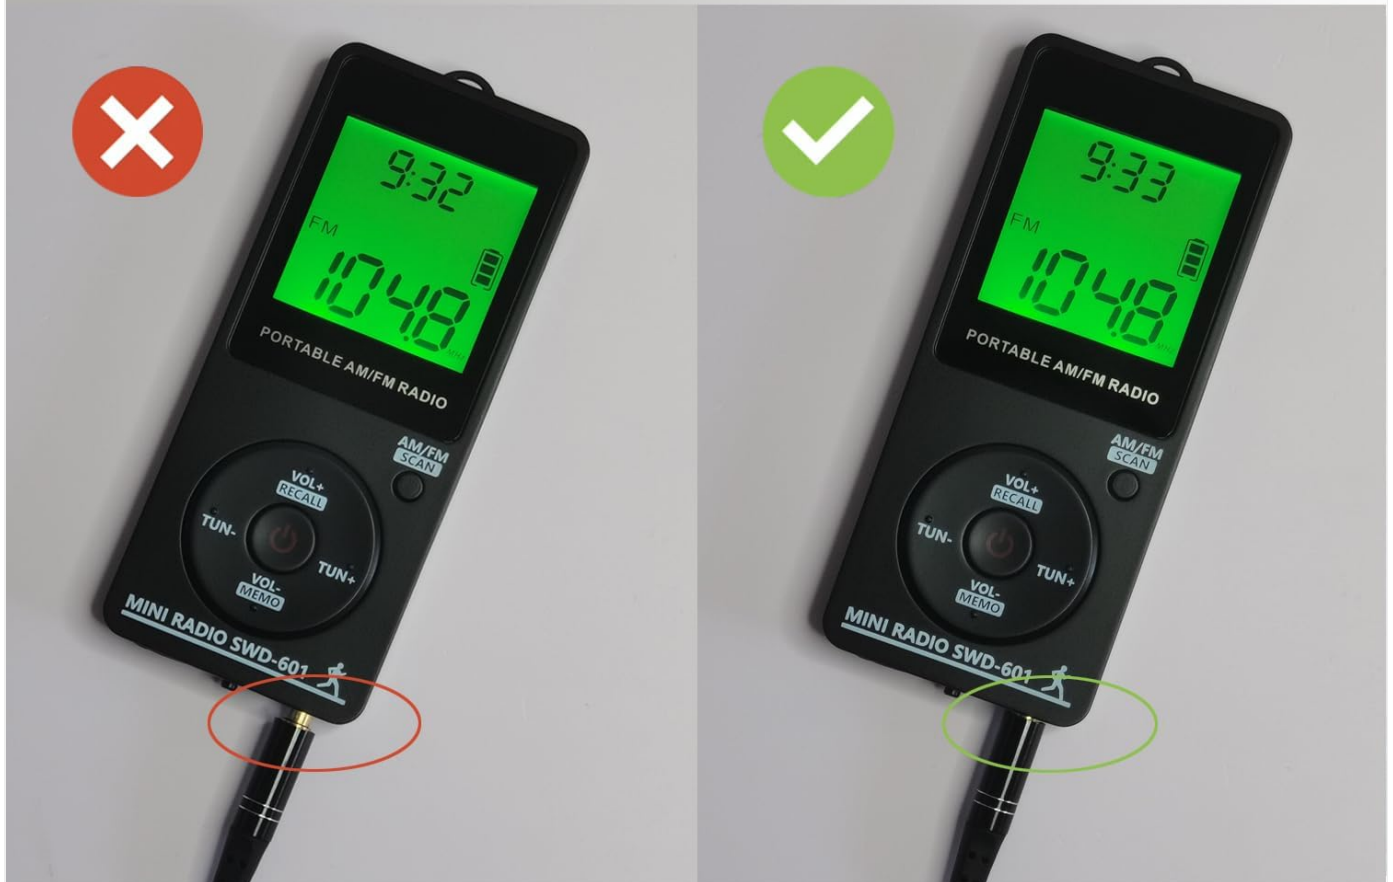

Please insert the earphones into the deepest part of the earphone jack of the radio, making sure that the earphone plug is correctly inserted into the earphone jack of the radio.

Figure 5: Correct insertion of earphones into the radio's jack. Ensure the plug is fully inserted for optimal sound and reception.

OPERATING INSTRUCTIONS

Power On/Off and Lock Function

To power on the radio, short press the **POWER** button. To turn off, long press the **POWER** button. The radio features a lock button on the bottom to prevent accidental operation. Slide the lock button to the right to unlock all buttons, and to the left to lock them.

Important Note: Always unlock the buttons before attempting to operate the radio.

Setting the Time

1. When the radio is turned off, long press the **AM/FM(SCAN)** button to enter time setting mode. The time will appear on the screen.
2. Click the **TUN+/-** button to switch between 12-hour and 24-hour time systems.
3. Click the set time number again. Then, use the **TUN+/-** button to adjust the time number (hours and minutes).
4. Finally, click the **AM/FM(SCAN)** button to confirm the time setting.

Automatic Station Search and Save

To automatically search and save available radio stations, long press the **AM/FM(SCAN)** button while the radio is on. The radio will scan through frequencies and save channels automatically. After completing the search, it will automatically play the first searched channel.

Manual Station Tuning and Saving

1. Click the **TUN+/-** button to adjust the frequency. Select the desired channel you wish to save.
2. Long press the **VOL-(MEMO)** button. The "MEMO" logo will be displayed on the screen.
3. While "MEMO" is displayed, click the **TUN+/-** button to adjust to the desired channel number (P01, P02, etc.) where you want to save the station.
4. Click the **VOL-(MEMO)** button again to confirm. The channel will be saved successfully.

Recalling Saved Channels

To recall a saved channel, long press the **VOL+(RECALL)** button. Then, click the **TUN+/-** button to select the desired saved channel number (P01, P02, etc.).

Adjusting Volume

Adjust the volume by clicking the **VOL+/-** buttons on the radio. You can also adjust the volume using the controls on the included earphones.

Setting Timing Shutdown

The radio features a timing shutdown function, allowing you to set it to turn off automatically after a set period.

1. When the radio is turned off, long press the **POWER** button to set the timing automatic shutdown. "90" will appear on the screen, indicating 90 minutes.
2. Continue to click the **POWER** button to cycle through shutdown times (90, 80, 70, ..., 10 minutes).
3. Wait for 3 seconds after selecting your desired time; the timing shutdown will be set successfully.
4. To turn off the timing shutdown, cycle through the options until "OFF" appears, or simply turn the radio off and on again.

TIMING SHUTDOWN

When radio is turned off, long press the power button to set the timing shutdown for 10-90 minutes.



Figure 6: The timing shutdown feature allows the radio to automatically turn off after a set duration.

User Guidance Video

For a visual guide on operating your SWDSTP radio, please watch the official user guidance video below. This video demonstrates key functions such as setting the time, automatic and manual station search, recalling channels, adjusting volume, and using the lock function.

Your browser does not support the video tag.

Video 1: Official user guidance video for the SWDSTP AM/FM Portable Radio, demonstrating various operational features.

MAINTENANCE

- Keep the radio dry. Avoid exposure to moisture or extreme temperatures.
- Clean the radio with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the radio in a cool, dry place when not in use for extended periods.
- Handle the earphones and USB cable with care to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Radio does not turn on.	Low battery or locked buttons.	Charge the radio. Ensure the lock button on the bottom is in the unlocked position (slid to the right).
Poor reception or static.	Earphones not fully inserted or weak signal.	Ensure earphones are fully inserted into the jack (they act as the antenna). Try moving to an area with better signal.
Buttons are unresponsive.	Buttons are locked.	Slide the lock button on the bottom of the radio to the right to unlock the controls.
Time display is incorrect.	Time not set or battery drained.	Follow the "Setting the Time" instructions. Ensure the radio is charged.

SPECIFICATIONS

- **Model Number:** SWD-601
- **Product Dimensions:** 3.5 x 1.5 x 0.3 inches (8.9 x 3.8 x 0.8 cm)
- **Item Weight:** 1.14 ounces (32.3 grams)
- **Frequency Range:** FM: 60-108MHz; AM: 520-1710KHz
- **Battery:** Built-in 400mAh Rechargeable Lithium Ion Battery
- **Battery Life:** Approximately 10 hours (at 10 level volume + FM mode + Full charge)
- **Connectivity:** USB (for charging)
- **Special Features:** Digital Tuning, LCD Display, Backlight, Time Display, Detachable Belt Clip, Timing Shutdown, Earphones included.

LIGHT AND EASY TO CARRY

Credit card size, the radio weighs only 1.14oz, more convenient to carry



Figure 7: The radio's compact size, comparable to a credit card, making it highly portable.

WARRANTY AND SUPPORT

Your SWDSTP radio comes with a 12-month product exchange policy. If you encounter any issues or have questions regarding your product, please contact SWDSTP customer support. We are committed to assisting you. For support, please refer to the contact information provided on the product packaging or the official SWDSTP website.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I delete a preset memo or station on the SWDSTP SWD-601 radio?

The user manual for the SWDSTP SWD-601 does not provide a specific "delete" function for individual presets. However, you can manage your stations using the following methods:Overwrite a Preset: You can replace an unwanted...

[Read full answer](#)